

Projection Viewing Surface Care & Maintenance Instructions

Please Note: Cleaning should be undertaken only when needed and with great care. Not all stains can be removed. Please take care to protect your screen from damage to minimize the need for these procedures.

OptiView™

Matt White XT1000E, Contrast Grey XH800E, Contrast White XH1100E

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.

Glass Beaded CH3200E

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use Armor All®. These substances will damage a glass beaded viewing surface.

Pearl White CH1900E, Argent White XH1500E

Using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. To clean a stubborn stain or a sticky surface, a solution of mild dishwashing liquid diluted with warm water can also be used following the same procedure as for water, and allow it to air dry.

Ecomatt XT700E

Blow off excess debris with air or use a feather duster, or using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction.

OptiFlex™

Matt White XT1000V, Grey XH600V, ReAct MS1000V, Pure White XT1300V

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.

Pearl White MH1500V

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use Armor All®.

ClearSound™

Grey Weave XH600E, NanoPerf XT800V, Perf XT900V, Perf XT950E, White Weave XT900E

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.

CineFlex™

CineFlex White XT600V, CineFlex MH800V, CineFlex CH1200V

Gently clean this rear projection material with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.

Rigid Rear Screens

IRUS, Cinescreen®, DiamondScreen™

Rigid rear screens can be cleaned with a soft, lint free cloth to remove dust from the surface. Remove soil marks with a cloth or sponge and mild soapy water. Wring free of excess moisture before applying, rinse and blot dry. Do not use solvent or abrasives. Do not use Armor All®.

DRAPER

These are basic cleaning tips for dust or dirt. For more information on cleaning stains, please contact Draper, Inc.

