





If unit is intended to be towed by a motorized vehicle, apply grease directly to both axle and wheel.

If unit is intended to be towed by a motorized vehicle, apply grease directly to both axle and wheel.

