Repair Parts and Maintenance Guide

SF-2300/SF-2350

PARTS | IST-SF-2300/SF-2350

	PA Iter No. 1. 2.
	2A. 2B. 2C. 2D. 3.
	4. 5A. 5B. 6. 7.
	8A. 8B. 9. * IMF use
$2 \begin{pmatrix} 2A \\ 2B \\ 2B \\ 2C \\ 3 \\ 2C \\ 3 \\ 3 \\ 3 \\ 3 \\ 3 \\ 3 \\ 3 \\ 3 \\ 3 \\ $	
4 Konstand 5A/5B	NO 1
	104 104 105 100 REF 11.
	— ir — ir

No.	Code No.	Part No.	Description		
1.	_		Faucet Assembly w/Outlet		
2.	_	SFP-16	Mounting Hardware Kit: includes Items 2A, 2B, 2C and 2D		
2A.	—	—	Compression Fitting		
2B.	_		Washers (2)		
2C.	_	_	Wing Nuts (2)		
2D.	- Screws and Anchors for Control Module				
3.	0362006	SFP-6	110 VAC/6 VDC Plug-In Adapter (US) (Model SF-2300 only)		
4.	—	—	Batteries, 4 AA-size (all models)		
5A.	0362040 SFP-40-A		Control Module with Adjustable Button (6 pin connector)		
5B.	0362008 SFP-8		Control Module (Old Style 4 pin connector)*		
6.	. 0362010 SFP-10 Flex Hose, Control Module to Spout		Flex Hose, Control Module to Spout		
7.	_	_	Inlet adapter – 1/2" NPSM to 3/8" Compression Connection (not supplied with most international models)		
8A.	0362041	SFP-41-A	Sensor Assembly (6 pin connector)		
8B.	0362034	SFP-34	Sensor Assembly (Old Style 4 pin connector)*		
9.	3365461	ETE-617-4	3/8" Bak-Chek [®] Tee Compression Fitting		

uyi use the following replacement parts: SFP-34 and SFP-8

OT SHOWN SEPARATELY

_	0362013	SFP-13	0.5 gpm/1.9 Lpm Spray head
_	0335012	EAF-15	0.5 gpm/1.9 vandal resistant spray head
—	0362023	SFP-23	2.2 gpm/8.3 Lpm Aerator
_	0362024	SFP-24	2.2 gpm/8.3 Lpm vandal resistant aerator
_	0362020	SFP-26	220 VAC/6 VDC Plug-In Adapter (ASIA)
_	0362025	SFP-25	220 VAC/6 VDC Plug-In Adapter (EURO)
_	0362026	SFP-20	220 VAC/6 VDC Plug-In Adapter (UK)

CESSORIES

10A. 0362016 SFP-36-A 100-240 VAC/6 VDC Plug-In Adapter 10B. 0362018 SFP-38 Cable Splitter, 51"/1300 mm (5 included in kit)	10.	0362035	SFP-35-A	100-240 VAC/6 VDC Gang Adapter Kit, includes 10A, 10B and 10C
10B. 0362018 SFP-38 Cable Splitter, 51"/1300 mm (5 included in kit)	10A.	0362016	SFP-36-A	100-240 VAC/6 VDC Plug-In Adapter
	10B.	0362018	SFP-38	Cable Splitter, 51"/1300 mm (5 included in kit)
10C. 0362017 SFP-37 Cable Extension, 51"/1300 mm	10C.	0362017	SFP-37	Cable Extension, 51"/1300 mm

PAIR PARTS

11. 0362015 SFP	-15 Strainer	(located in water	r inlet of contro	ol module)
-----------------	--------------	-------------------	-------------------	------------

in Item No. column = Not shown in illustration in Code No. and Part No. column = Not sold separately



Repair Parts and Maintenance Guide

SF-2300/SF-2350

TROUBLESHOOTING GUIDE

- 1. Faucet delivers water in an uncontrolled manner.
 - A. Faucet is not working properly. Contact the Sloan Valve Company Installation Engineering Department at 1-888-SLOAN-14 (1-888-756-2614).
- 2. Faucet does not deliver any water when Sensor is activated. INDICATOR: Solenoid valve produces an audible "CLICK."
 - A. Water supply stop(s) closed. Open water supply stop(s).
 - B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

INDICATOR: Solenoid valve DOES NOT produce an audible "CLICK."

- A. Batteries low (battery powered models). Replace batteries.
- B. Power failure (transformer powered models). Check power supply.

3. Faucet delivers only a slow flow or dribble when Sensor is activated.

- A. Water supply stop(s) are partially closed. Completely open water supply stop(s).
- B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.
- C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.
- D. Faucet is not working properly. Contact the Sloan Valve Company Installation Engineering Department at 1-888-SLOAN-14 (1-888-756-2614).

Faucet does not stop delivering water or continues to drip after user is no longer detected.

- A. Faucet is not working properly. Contact the Sloan Valve Company Installation Engineering Department at 1-888-SLOAN-14 (1-888-756-2614).
- 5. The water temperature is too hot or too cold on a Faucet connected to hot and cold supply lines.

A. Supply Stops are not adjusted properly. Adjust Supply Stops.

CARE AND CLEANING INSTRUCTIONS

DO NOT use abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use ONLY mild soap and water, then wipe dry with clean cloth or towel. While cleaning the bathroom tile, protect the faucet from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

When assistance is required, please contact Sloan Valve Company Installation Engineering Department at: 1-888-SLOAN-14 (1-888-756-2614).