

## WARNING:

This product is for outdoor use only. This product may have sharp edges. Never leave burning fire unattended. Do not pour fuel into burning fuel. If used as a fire burner, take the necessary precautions to ensure no flammable materials come in contact with the flame. Before igniting fuel ensure no excess has been spilt. Keep away from children and animals.

## CAUTION:


**Absolute** must be properly embedded into the ground to ensure safe usage. If you cannot sufficiently press **Absolute** into the ground, try to loosen soil. If this cannot be done, find another location or consult a landscape professional for assistance.

For assistance, contact

**decorpro**  
HOME + GARDEN

[www.decorpro.ca](http://www.decorpro.ca)  
[support@decorpro.ca](mailto:support@decorpro.ca)

# Absolute 10001

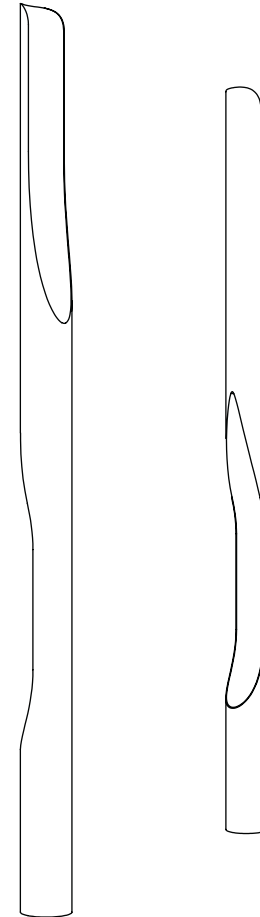

**decorpro**  
HOME + GARDEN

Proudly Designed and Made In CANADA

1 x





10001

1 x



11902

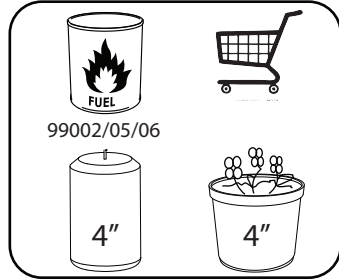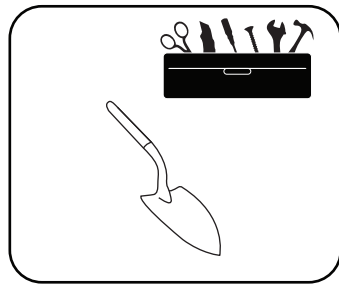


99002/05/06


4"

4"







5

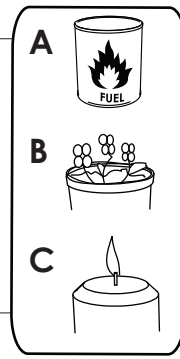


6

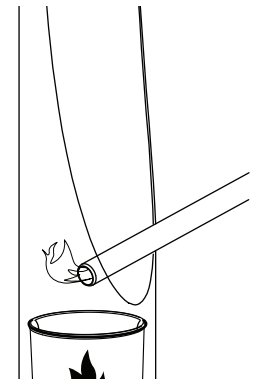


7

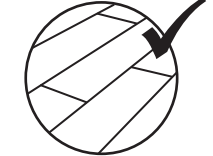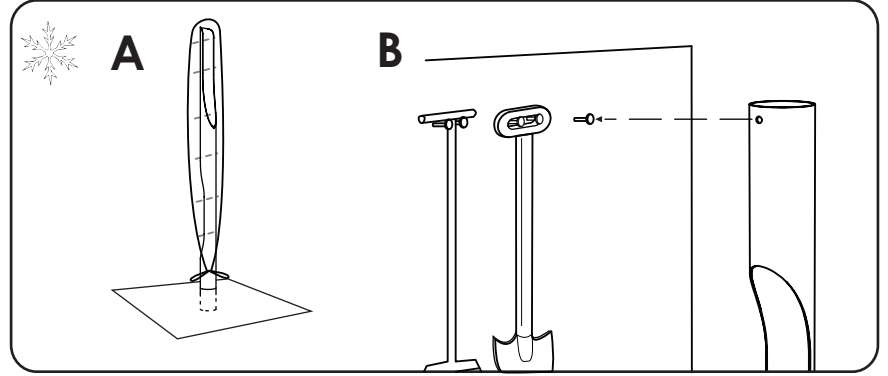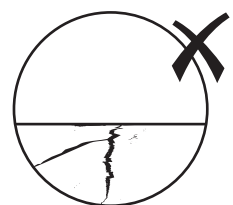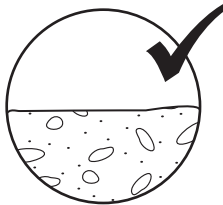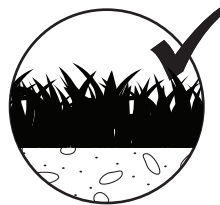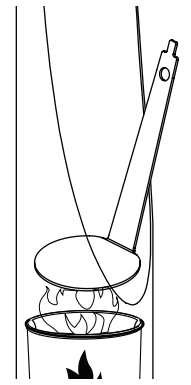


1

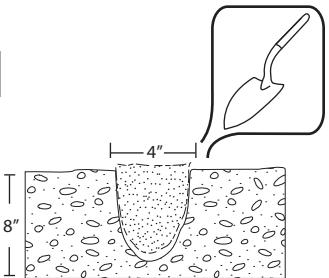


3

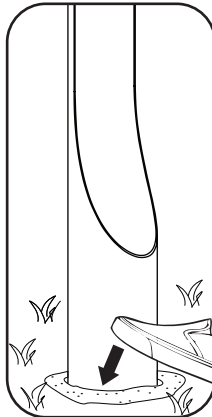


4

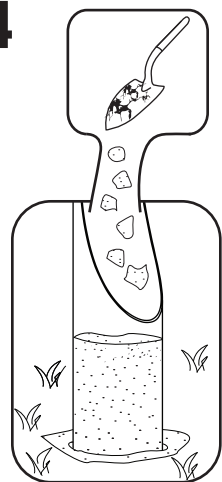

2

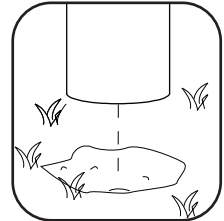


A

 

11002

B

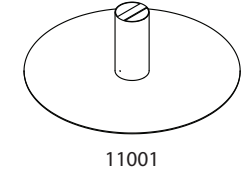

11001

