

WARNING:

This product is for outdoor use only. This product may have sharp edges. Never leave burning fire unattended. Do not pour fuel into burning fuel. If used as a fire burner, take the necessary precautions to ensure no flammable materials come in contact with the flame. Before igniting fuel ensure no excess has been spilt. Keep away from children and animals.

CAUTION:

Four must be properly embedded into the ground to ensure safe usage. If you cannot sufficiently press **Four** into the ground, try loosening the soil. If this cannot be done, find another location or consult a landscape professional for assistance.

For assistance, contact

 
decorpro
HOME + GARDEN

www.decorpro.ca
support@decorpro.ca

FOUR










C O T T A G E

10305




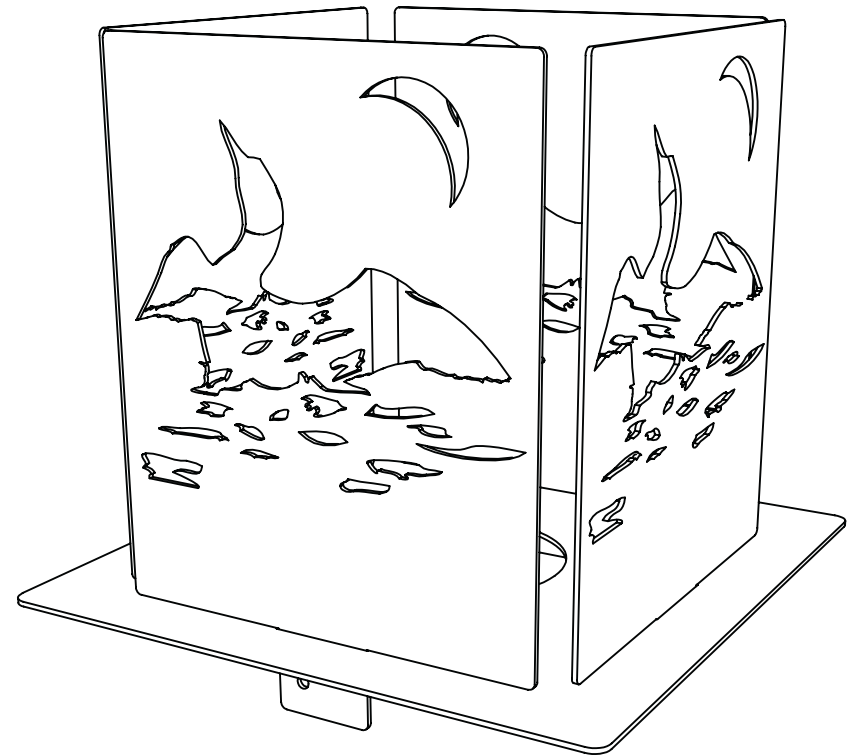


decorpro
HOME + GARDEN

         
Proudly Designed and Made In CANADA

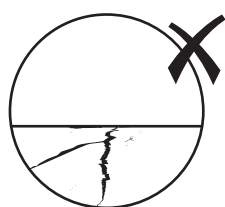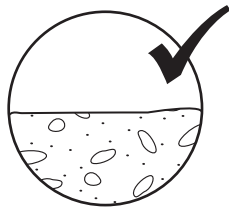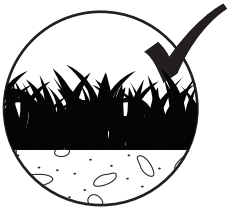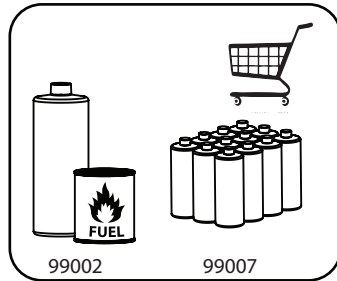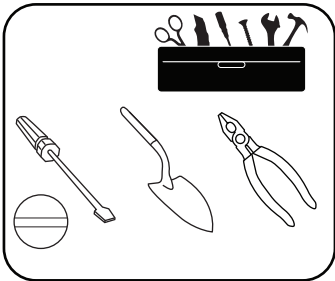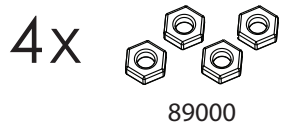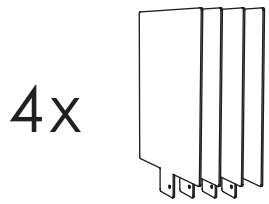




©

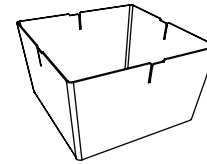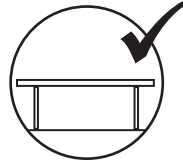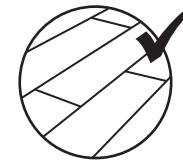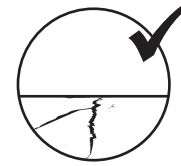    

11305

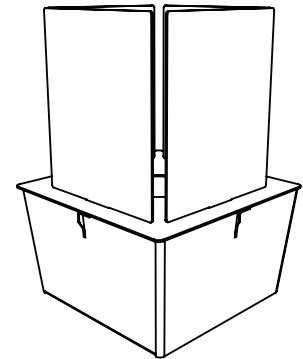 



©

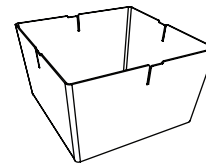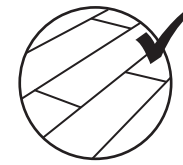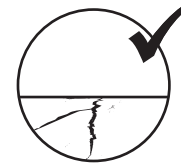   


11305



  4x4x48

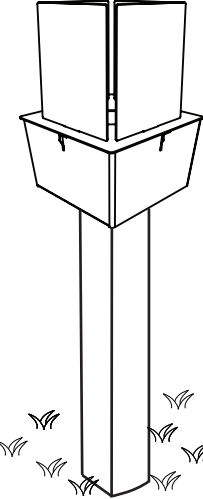



11002

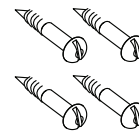 



4x

A

  
1

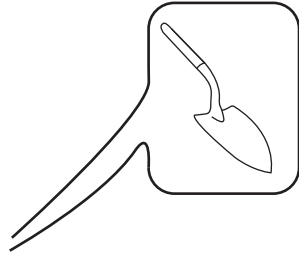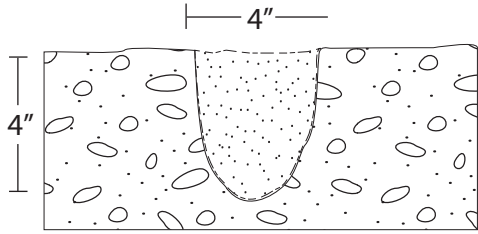



2

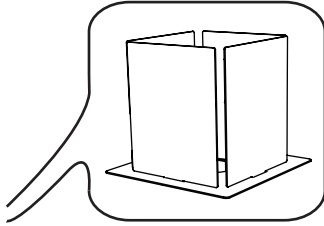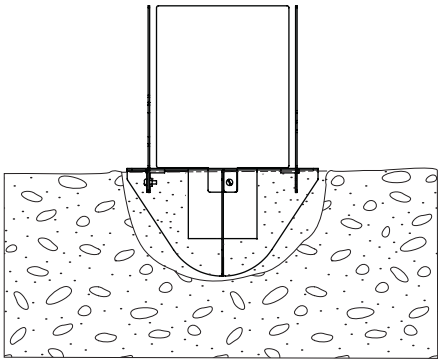  

B

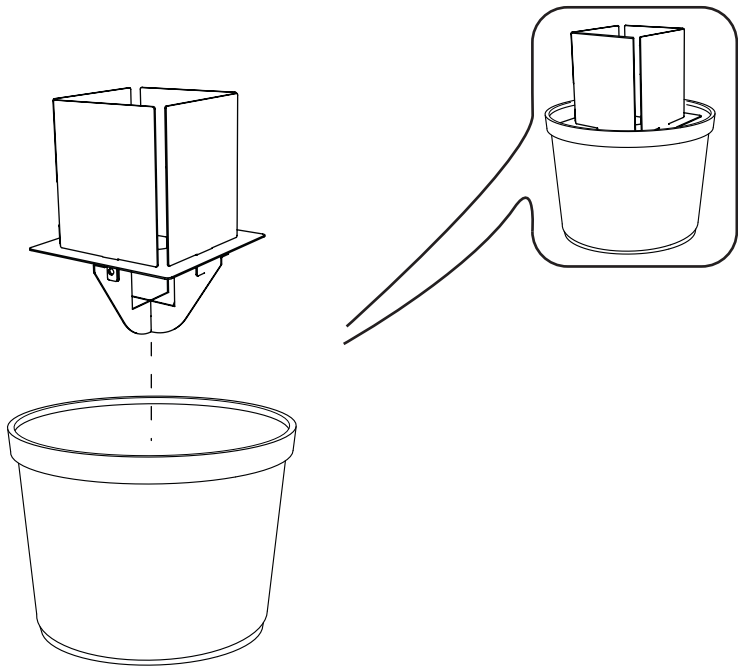 

1

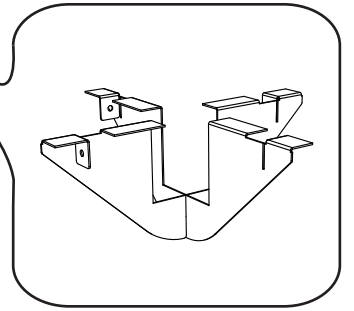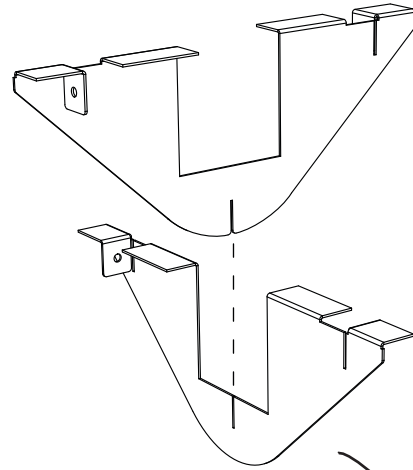  

2

