

COASTER[®]
FINE FURNITURE

800800

DESK

**ASSEMBLY INSTRUCTION
COASTER FINE FURNITURE**



www.coastercompany.com

REVISION 0: 2011/07/15

REVISION 1: 2011/11/01

Assembly Instruction

ASSEMBLY TIPS:

 
 



1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







 
Warning !

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION


- A  1PC
DESK TOP
- B  1PC
LEFT PEDESTAL
- C  1PC
RIGHT PEDESTAL
- D  1PC
BACK PANEL
- E  1PC
SIDE DRAWER

Z HARDWARE PACKAGE

NO	DESCRIPTION	FIGURE	Q'TY
1	ALLEN WRENCH		1PC
2	BOLT		18PCS
3	FLAT WASHER		18PCS
4	LOCK WASHER		18PCS
5	WOODEN DOWEL		4PCS


STEP1

Align and fasten left pedestal and right pedestal to back panel using bolt, lock washer and flat washer and bolt with allen wrench.

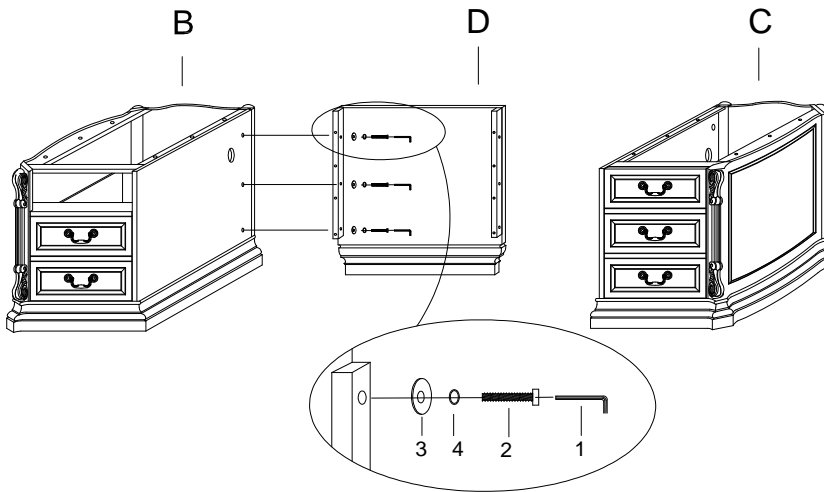

STEP2

Insert the wooden dowels along the top of the left and right pedestals. Align and fasten top panel to base desk using bolt, lock washer and flat washer and bolt with allen wrench.

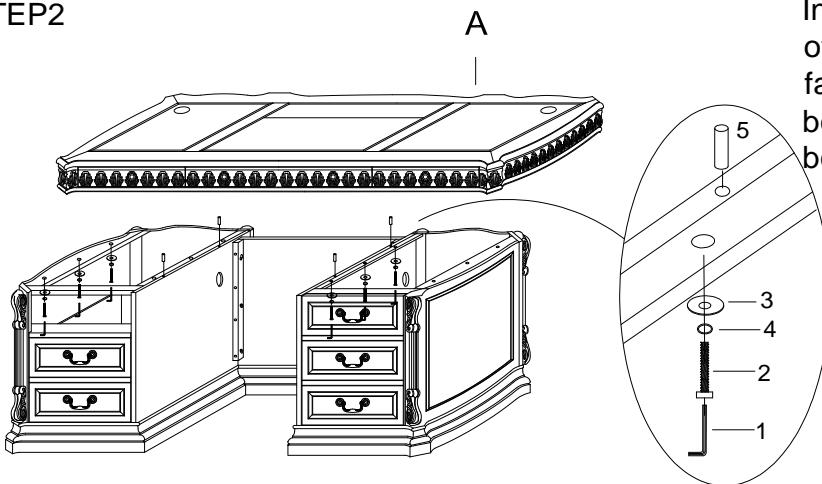

COMPLETE

