

COASTER[®]
Fine Furniture

150113

5PCS DINING TABLE SET

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



www.coastercompany.com

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

 


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

A CHAIR BACK




4PCS

 B RIGHT LEG FRAME




4PCS

 C LEFT LEG FRAME




4PCS

 D STRETCHER



4PCS

 E CUSHION



4PCS

F TABLE LEG



4PCS

G BOTTOM FRAME









4PCS

H TOP




1PC

Z	HARDWARE PACKAGE		
	DESCRIPTION	FIGURE	Q' TY
1	BOLTS Φ 1/4" *12mm		16PCS
2	BOLTS Φ 1/4" *40mm		24PCS
3	WOOD SCREW 4*16mm		16PCS
4	ALLEN WRENCH 4mm		1PC
5	PLAIN WASHER Φ 6.5mm		16PCS
6	LOCK WASHER Φ 6.5mm		16PCS


NOTE : QUANTITIES SHOWN ARE FOR FOUR CHAIRS

STEP 1

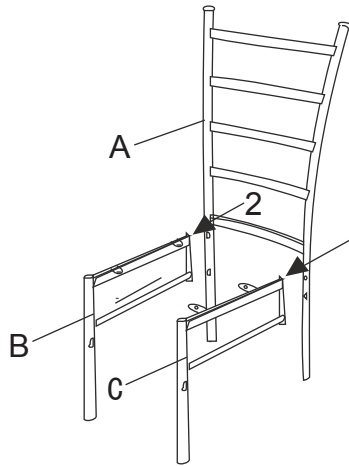


ATTACH LEG FRAME (B) & (C) TO CHAIR BACK (A). HAND TIGHTEN BOLTS (2).

STEP 2

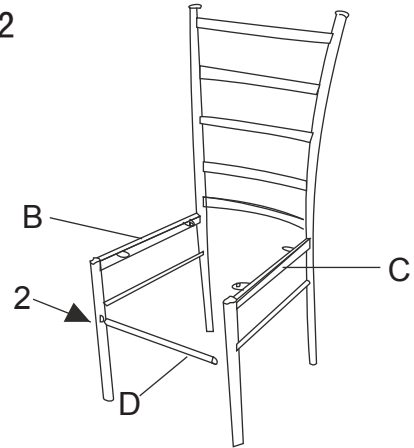


ATTACH STRECHER (D) TO (B) AND (C). HAND TIGHTEN BOLTS (2) UNTIL CHAIR FRAME IS ASSEMBLED, THEN HOLD FLAT AND TIGHTEN BOLTS WITH ALLEN WRENCH (4).

STEP 3

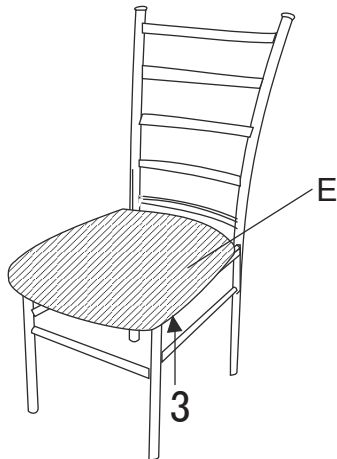


TIGHTEN WOOD SCREW (3) WITH SCREWDRIVER (NOT PROVIDED).

STEP 4

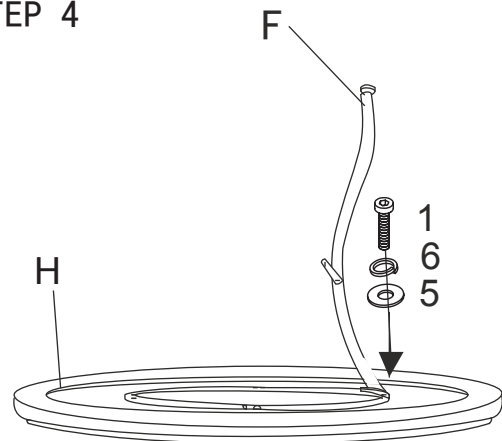

ATTACH TABLE LEG (F) TO TOP FRAME. HAND TIGHTEN BOLTS (1) LOCK WASHER (6) PLAIN WASHER (5)

STEP 5

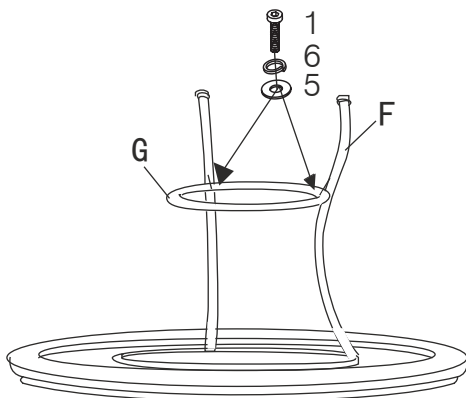

ATTACH BOTTOM FRAME (G) TO TABLE LEGS. HAND TIGHTEN BOLTS (1) LOCK WASHER (6) PLAIN WASHER (5) UNTIL TABLE FRAME IS ASSEMBLED, THEN HOLD FLAT AND TIGHTEN BOLTS WITH ALLEN WRENCH (4)