




 




 




Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

 Hardware pack <b>B</b>	 Mm 4 pcs
	 Gg 1 pcs




 Hardware pack <b>C</b>	 Gg 1 pcs
	 Hh Ø8mm*5/8" 4 pcs
	 li 1/4**16mm 10 pcs
	 Jj 1/4**12mm 10 pcs
	 Kk Ø1/4**1-3/8" 10 pcs
	 Ll 4mm 1 pcs
File Rod	 Zz 2 pcs



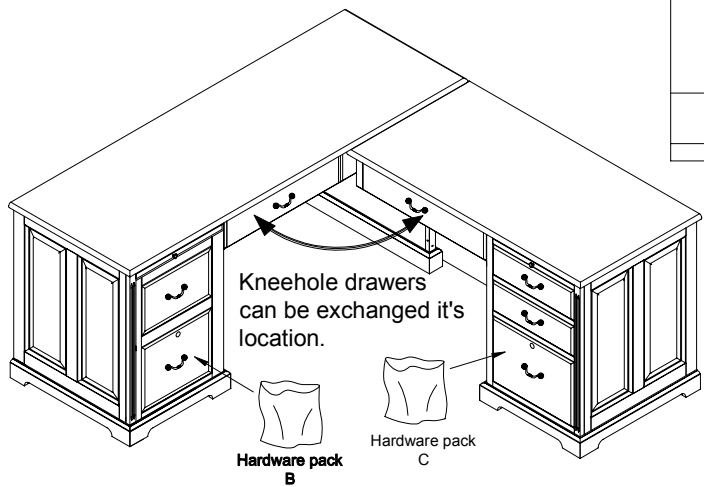

**WARNING**

Pinch Point. keep fingers from underneath drawer front when releasing.

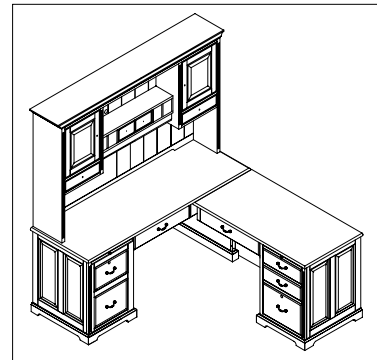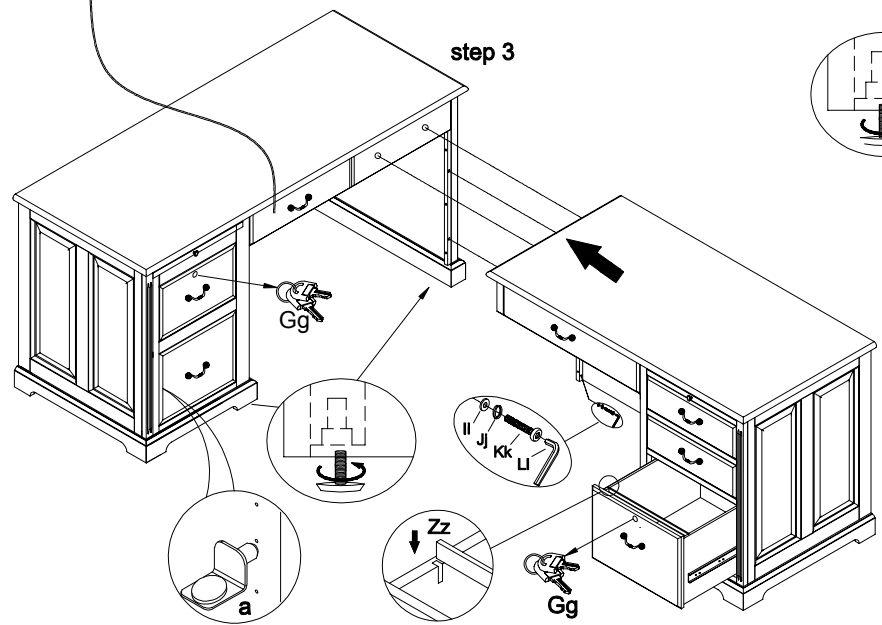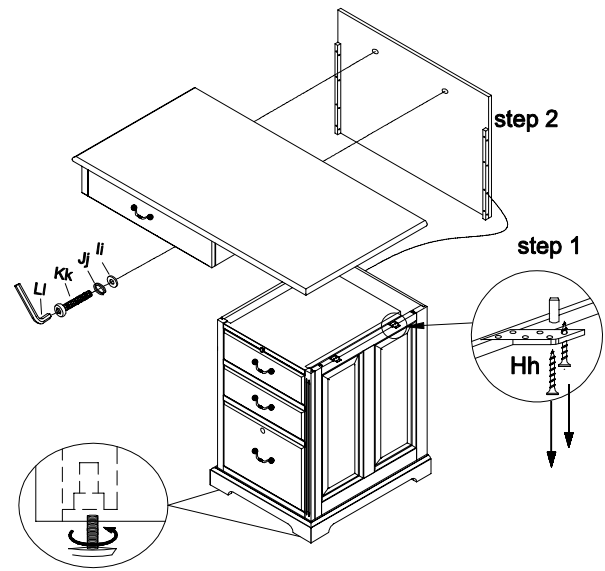


## The desk top can be removed by the following steps:

step 1. Remove the 5/8" long screws attaching the top through the metal plates on the outside ends of the desk and underneath the knee-hole area. Save all screws to use to reattach the desk top.

step 2. Remove the 1" long screws from the cleat at the top rail of Back Panel and underneath the right-hand pedestal.

step 3. To reattach the top, position the top with equal overhang around the edges of the top and simply install the screws in reverse order listed above.

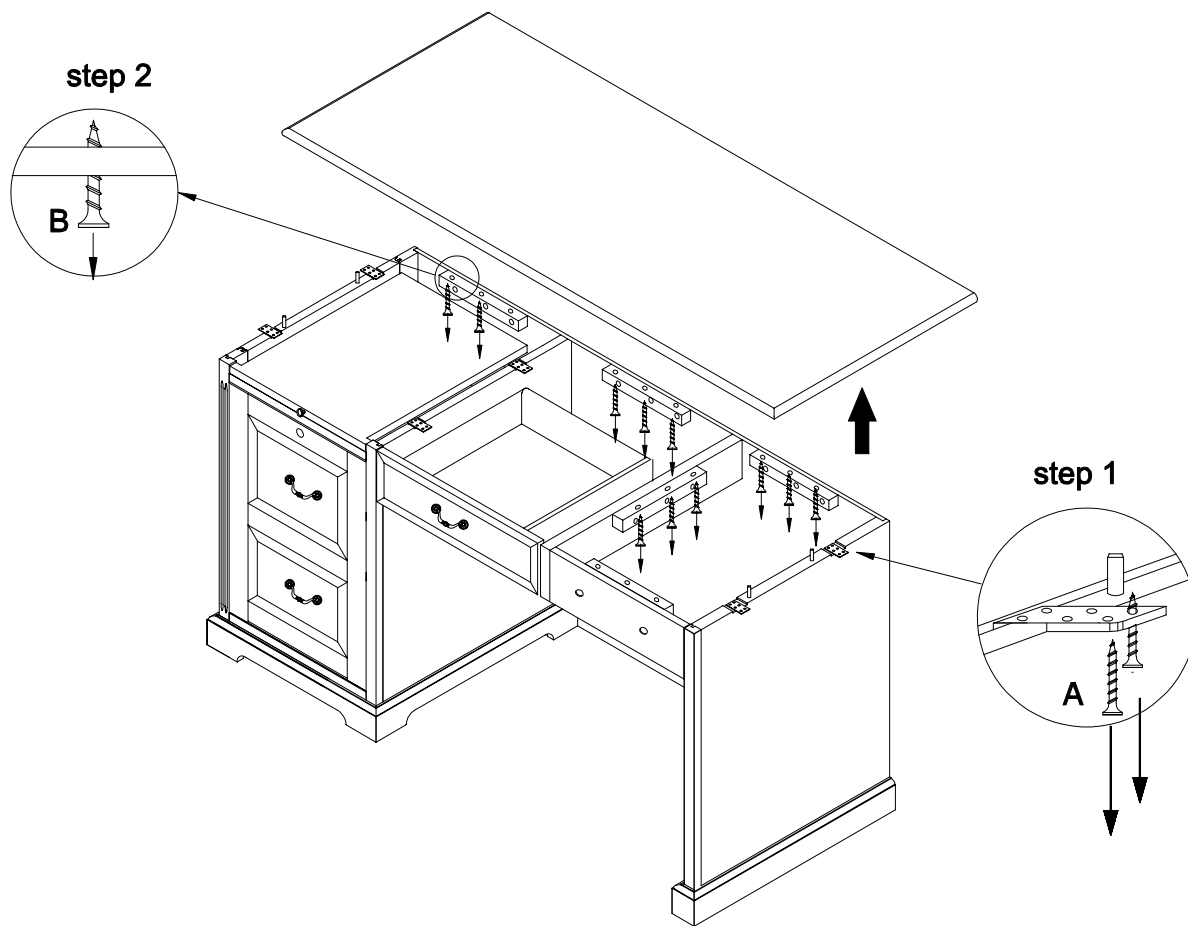

Note: When the top is removed from this desk, handle the desk with extreme care if moving. The top adds to the desk's stability and sturdiness and the desk could easily be damaged with the top removed.

