 



 

 

 
 

 
 







5615

Sofa Table / TV Console

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.


Components and Hardware List

M5/16" X 3/4" Allen Head Bolt  A 20 pcs.	5/16" Spring Washer  B 20 pcs.	5/16" x 18mm Flat Washer  C 20 pcs.	5mm Allen Wrench  D 1 pc.
M1/4" X 1/2" Flat Head Bolt  E 8 pcs.	4mm Allen Wrench  F 1 pc.	M5/32 x 3/4" Hardware Screw  G 4 pcs.	Drawer Pull  H 2 pcs.
Top  I 1 pc.	Bottom Shelf  J 1 pc.	Cabinet Box  K 1 pc.	Left Leg Assembly  L 1 pc.
Right Leg Assembly  M 1 pc.	Middle Front Leg  N 1 pc.	Middle Back Leg with 4 bolt holes  O 1 pc.	Back Metal Cross  P 2 pcs.
Anti-Tip Restraint Set  Q 1 pc.			

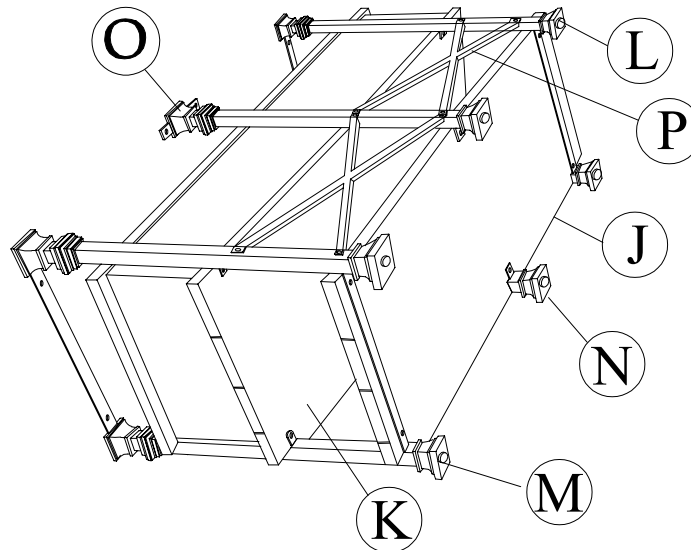


1. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded. To prevent possible scratches or damages, assemble the table upside down on a soft surface such as a blanket or carpet, or its own packaging materials
2. Position the Left Leg Assembly (L) (or Right Leg Assembly) face down.
3. Attach the Bottom Shelf (J) and Cabinet Box (K) to the tabs on the Left (or Right) Leg Assembly using the Flat Washer (C), Spring Washer (B), and Allen Head Bolts (A). Do not fully tighten Bolts until the entire table has been assembled.
4. Position the remaining Leg Assembly onto the edge of the Shelf and Cabinet Box and attach using the same Flat Washers (C), Spring Washers (B), and Allen Head Bolts (A) as in previous step. Do not fully tighten Bolts.

Components and Hardware List

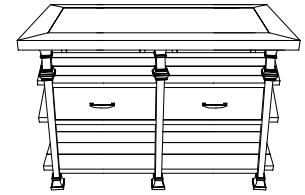


5615 Sofa table

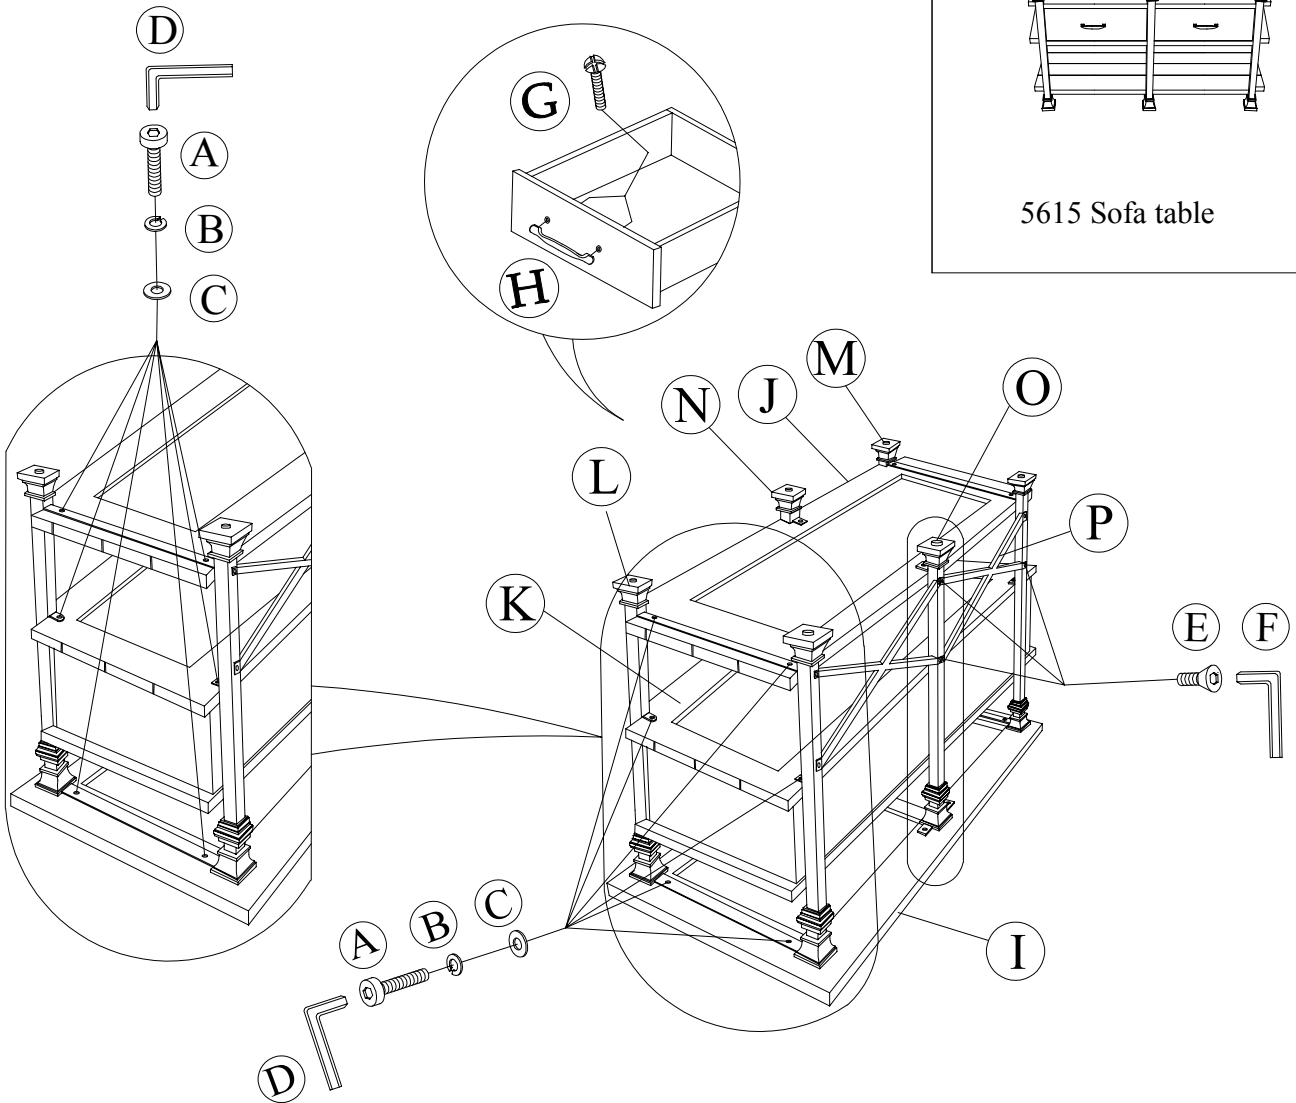

5. Place the Table Top (I) face down on a soft surface.
6. Move the previously assembled Shelves & End Frames in position onto the Top and attach using the same Bolts and Washers as before. Do not fully tighten.
7. Place the Front Middle Leg (N) and Back Middle Leg (O) in position and attach to Top (I), Cabinet Box (K) and Bottom Shelf (J) using the same Bolts and Washers as before. Do not fully tighten Bolts.
8. Attach the two Back Metal Cross (P) in position using Flat Head Bolts (E).
9. Tighten all the Bolts using the Allen Wrenches (D or F).
10. Carefully set the assembled Table upright.
11. Attach the Drawer Pulls (H) to the drawers with the Hardware Screws (G) and your screwdriver, then reinstall the drawers.
12. Levelers are installed into the bottom of the Leg Assemblies and can be used to compensate for uneven flooring if necessary.

If this table will be used with a TV, an Anti-Tipping Restraint has been included which can be used to minimize the risk of the furniture tipping forward, if used.

Notice: In homes where small children may be present, Riverside Furniture Corp. recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Riverside Furniture Corp. recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

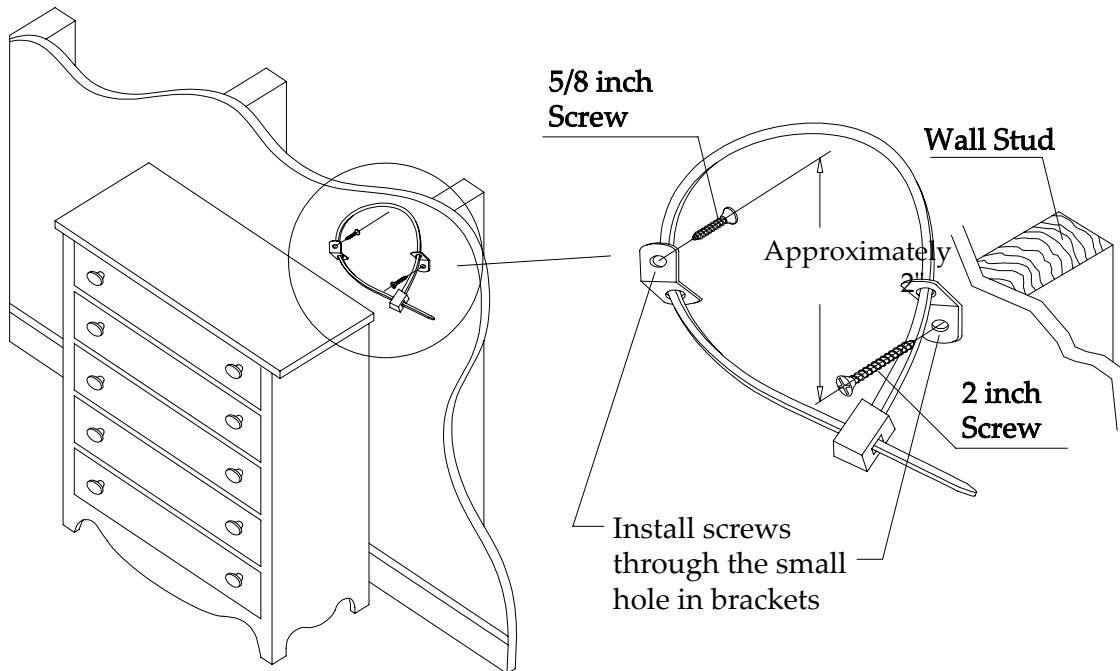

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Riverside Furniture Corp. assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.