



PACIFIC PLAY TENTS, INC.

One Touch™ Play Tent

Item # 20310 and #20318

Thank you for purchasing the One Touch™ Play Tent. We at Pacific Play Tents are certain that our tent will provide you and your children with endless hours of fun and enjoyment all year-round.

We encourage you to read and understand each step of the set-up instructions prior to setting up your play tent.

Setting Up Your Tent

1. Place your tent on a clear, flat surface. Be sure no sharp objects are under your tent floor that can damage or tear tent floor. (Fig.1)
2. Carefully grasp the center of the tent (at hub) and raise to an upright position. (Fig.2)
3. Pull out the corner locking points to set the corners of the tent. (Fig.3)
4. Carefully grasp the inner tent pole section just under the top of the tent and pull the locking supports down into the locked position. Be careful not to pinch your fingers. (Fig. 4A & 4B)
5. Adjust the floor and stake out if necessary.
6. Enjoy!

Taking Down Your Tent

1. Carefully grasp the top locking pole supports at the top of the tent and being careful not to pinch your fingers, slowly raise the locking supports. (Fig.5)
2. Once the locking supports have been raised (released) you may lower the tent down.
3. Fold the lower part of the tent poles toward the center of the tent. (Fig.6)
4. For tents with 3 leg sections, it may be necessary to pull the lower section slightly before attempting to fold inward. This will release the locking leg mechanism. (Fig.7)
5. Roll up and store in the storage sack that is provided.
6. Make sure your tent is dry before attempting to take your tent down. Moisture will cause mildew in your tent if stored wet.

Storing Your Tent

1. Make sure your tent has had sufficient time to dry before folding and storage.
2. Place in storage bag.
3. Store in a cool dry location.

Some additional Tips

- ☛ Your tent should be set up with adult supervision. Do not let children jump on the tent.
- ☛ Exercise caution when two or more children are playing in the tent.
- ☛ Use your tent on soft or smooth surfaces only. Keep off of concrete or gravelly areas.
- ☛ Your tent is made from water repellent nylon. However, your tent is not waterproof and should not be used in rainy situations. Tent should not be left in the yard for prolonged periods of time, as sunlight can weaken or fade the nylon and continued watering by sprinkler systems can cause mildewing.
- ☛ Keep tent away from all heat sources.



For Age 3 and Up