
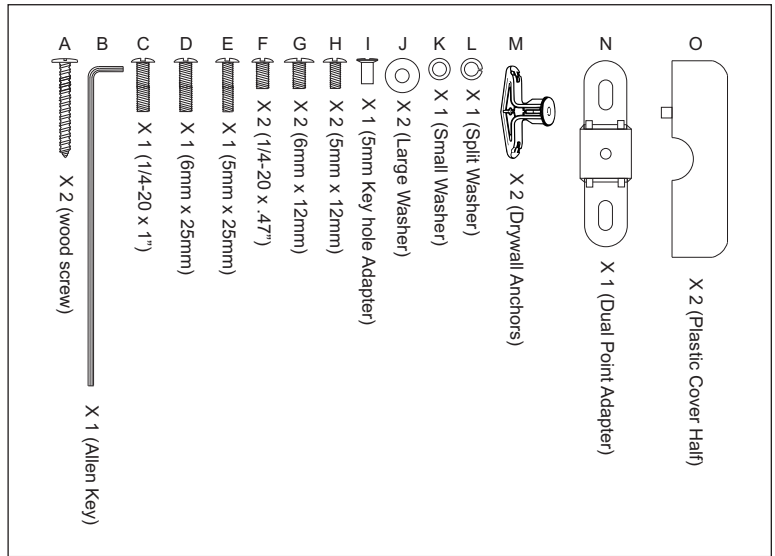


# AM-25

## UNIVERSAL SPEAKER CEILING MOUNT


The AM-25 speaker ceiling mount has been designed to work with most home theater speakers up to 12 lbs (5.44kg). The included parts kit contains all hardware needed to install most home theater speakers that use a threaded insert(s) or keyhole mounting attachment points.

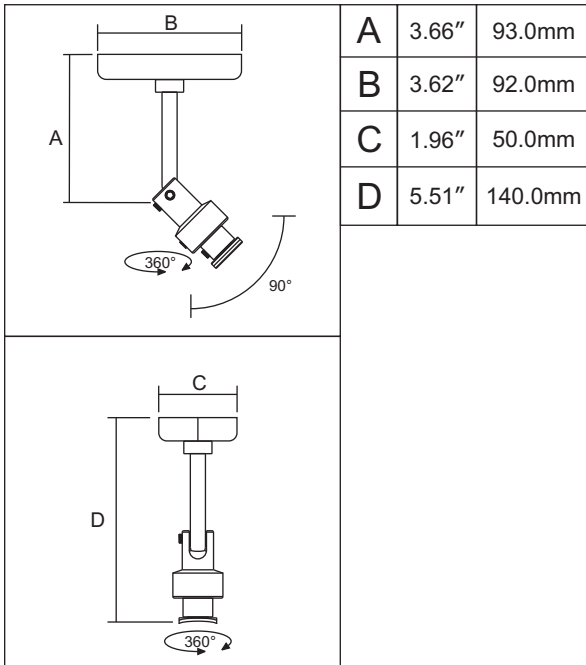


**NOTICE!**

If you have any questions on the installation, assembly, or have missing or damaged parts, please contact our support team at (865) 671-2020 Monday-Friday 9.30a - 5.30p or by email 24/7 at [sales@pinpointmarketinginc.com](mailto:sales@pinpointmarketinginc.com).

### ATTACHING THE MOUNT TO THE CEILING

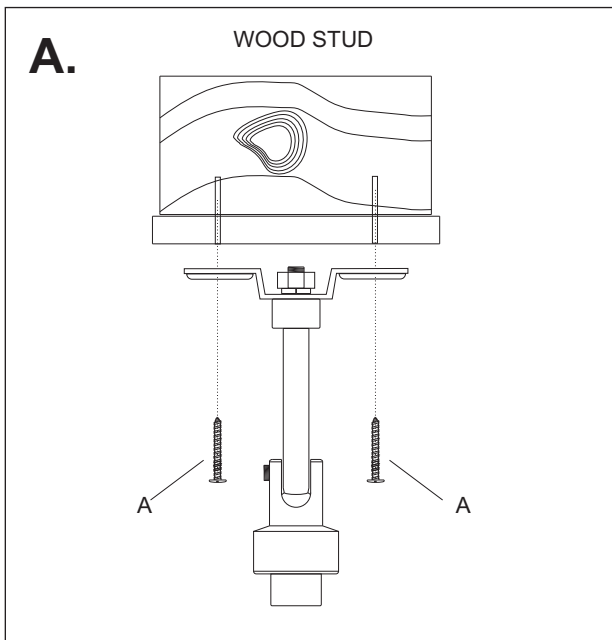


When attaching this mount, please insure the location can support the total weight of the mount and speaker.

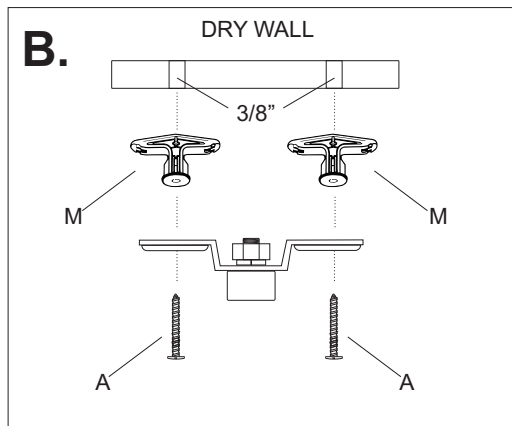


# MOUNTING THE SPEAKER

## Step 1

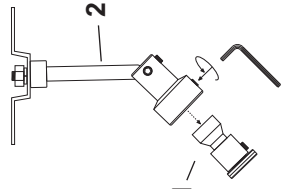

Before installing the speaker, remove the mounting tip assembly(1) from the mounting bracket body(2).

## Step 2

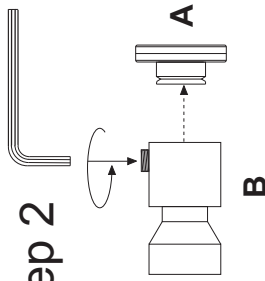

## Step 2

To mount a speaker, remove the single point adapter tip(A) from the Mounting body(B) and determine the correct speaker mounting point your speaker has from the three (3) diagrams shown in step 3.

- Some speakers may use more than one type of mounting point, select the one best suited for your application.
- The hardware kit supplied with this mount contains the most common size screws used to mount speakers. Some speakers may require longer or shorter screws not supplied in this kit.

## Step 3

**SINGLE MOUNTING POINT**

(C, D or E & K, L)

**KEYHOLE MOUNTING POINT**

(E, K, L, I) or (I, K, L, E)


**DUAL MOUNTING POINTS**

(D, K, L & R)

## Step 4

Once the speaker has been attached to the adapter tip(A), replace the adapter tip(A) to the mounting body(B) and then attach the adapter body(B) to the speaker mount assembly(C).

## Step 4

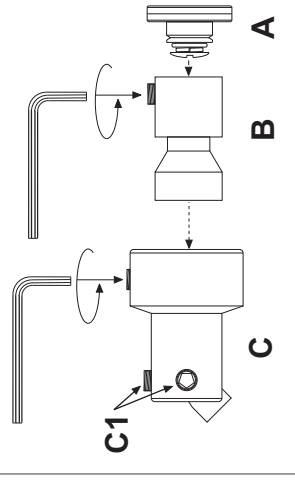

After the speaker has been attached to the speaker mount assembly, you should connect the speaker wires.

To aim the speaker, loosen the small allen key bolts (C1) so that the adapter body can be rotated & tilted to the desired position. Tighten the allen key bolts(C1) to lock the speaker into the desired position.