
IN00428 (rev B)

Aqua 8 Hinge Quadrant

AQUA 8
DESIGNED AROUND YOU


· Door is designed to open outwards only

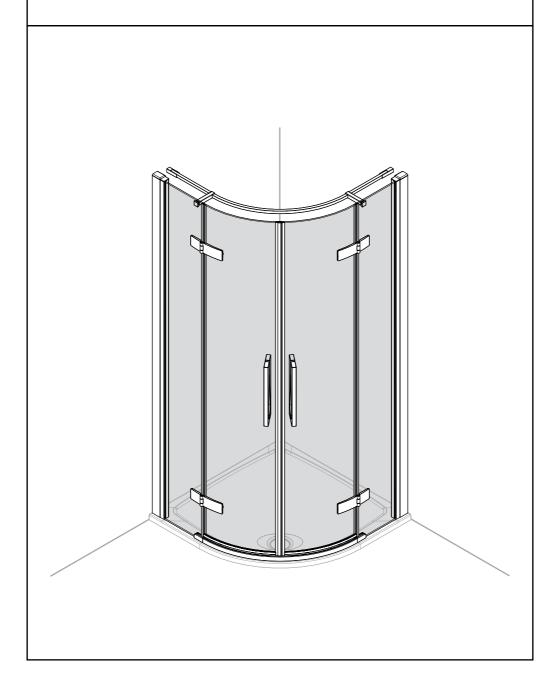

Before You Start

- Check that the tray has been installed correctly and that it is level (Fig. A), tiled down onto and sealed to the manufacturer's guidelines. Please Note: All product supplied without tray.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat
- Unpack and check the product is complete and undamaged.
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type

 if in doubt seek professional advice.
- · Ensure the area is clean, dry and dust free.
- · Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').
- It is recommended to situate the showerhead and door adjacent to each other in order to allow any water spray to be on the side panel or upstanding wall.

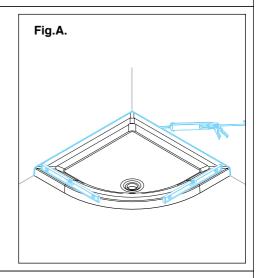

Safety

- Handle all glass with care support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- When drilling walls check first for hidden pipes and cables.
- All glass is toughened it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
- · Use safety evewear when handling glass.
- · Keep all small parts away from children.

Disclaimer

- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

 
Tools Required (not supplied)



 



















* Ensure drill bit used is suitable for wall surface





Ip Line: 0870 241 6131 Lines open: 8.30am - 5.00pm Monday to Friday Standard National call charge rate from BT landlin

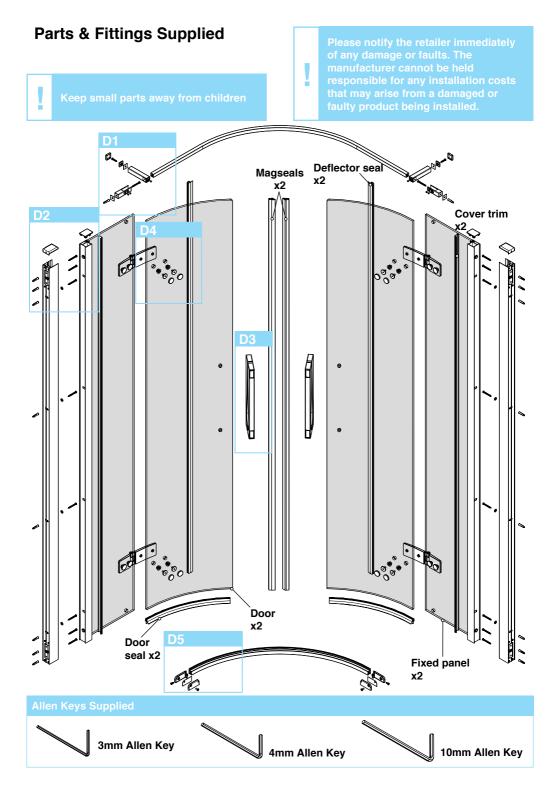

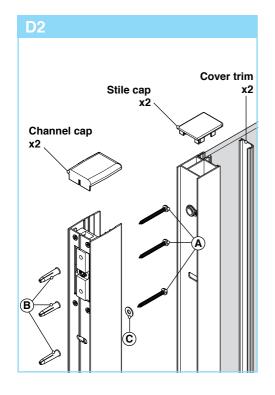


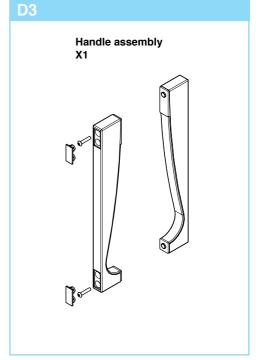

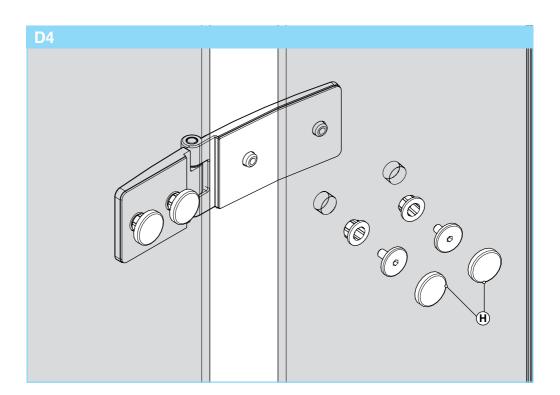

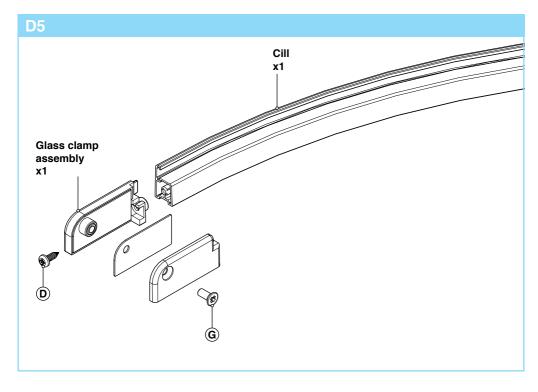



Loose Screws & Fittings Supplied Qty (A)No.8 x 11/2" Pan Head Pozi Screws x18 (actual size) Qty (B) Wall Plugs x18 (actual size) Qty (\mathbf{C}) Washer 15mm OD, 5.5mm ID **8**x (actual size) 1mm thick Qty (D)No 8 x 0.5 Pan Pozi Screws **x2** (actual size) Qty (E) No.8 x 1" Pan Head Pozi Screws **x2** (actual size) Qty (\mathbf{F}) M5 x 5mm Grub screw **x6** (actual size) Qty

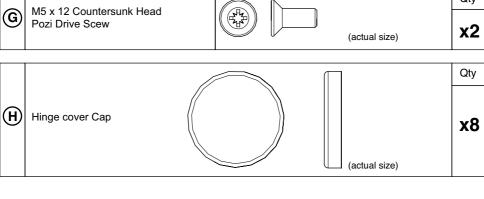



1

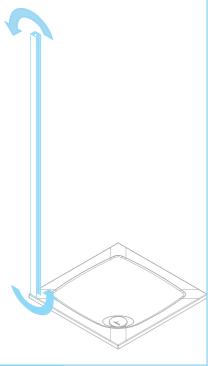


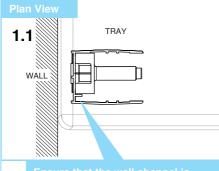

Ensure that the wall channel is correctly oriented. The gap should be on the outboard side.



There is a radius to show the top side

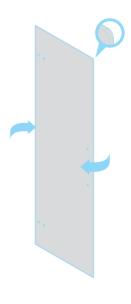




Wall plugs supplied are for solid walls only. Ensure correct wall plug for wall type is used. If in doubt seek professional advice.



Position wall channels on wall. Ensure channel is vertically level.

2

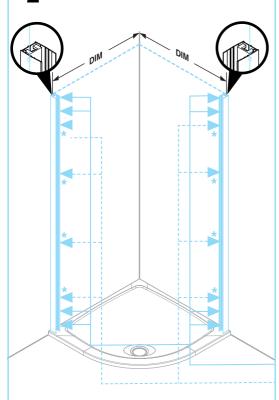


* Dimension from Wall to centre of channel holes

DIM

800mm Quadrant = Dim 748 900mm Quadrant = Dim 848 2.1

 Mark centre position of pre-drilled channel holes.




2.2

6mm dia. holes with drill bit suitable for wall surface.



2.3

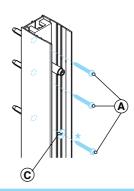



*


Fully tighten only the screws that pass through the adjuster block. The screws that fasten with a washer should be left loose by a least one turn





Tip: When drilling tiles apply masking tape to surface to stop drill bit slipping

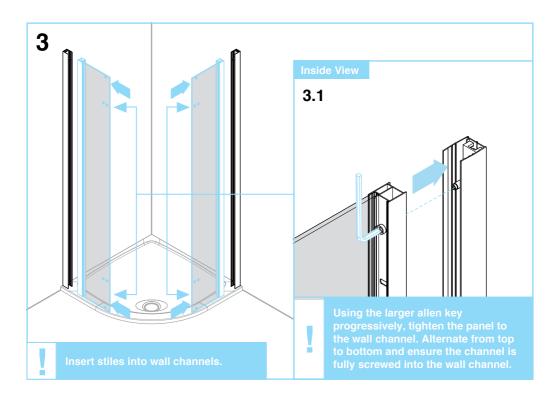


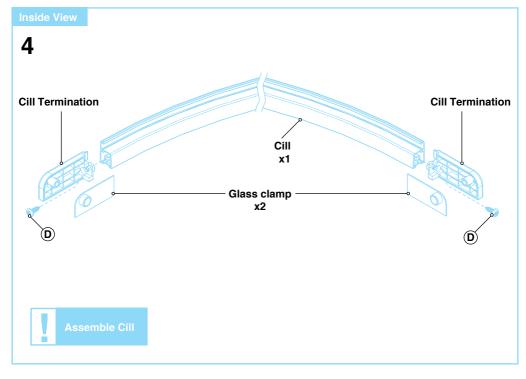


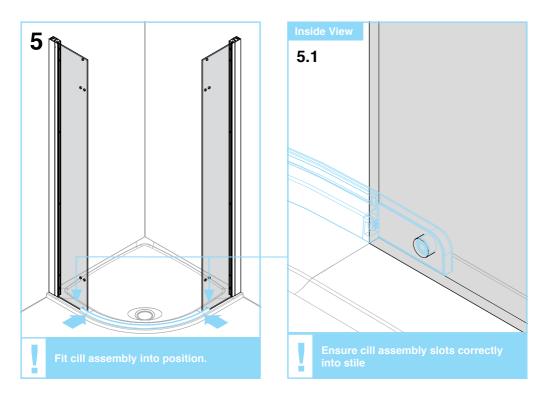


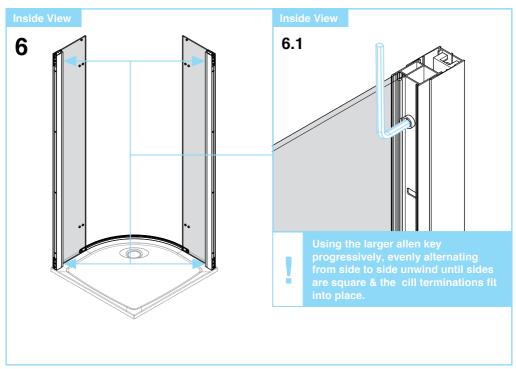


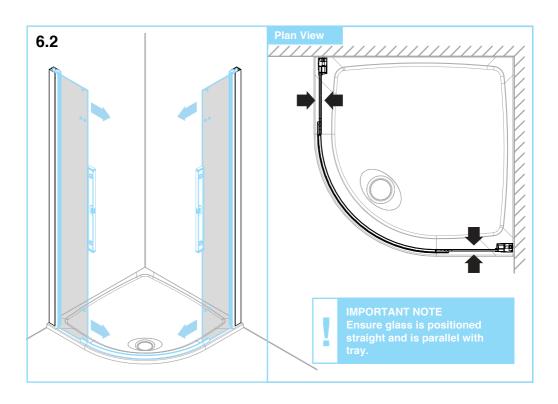


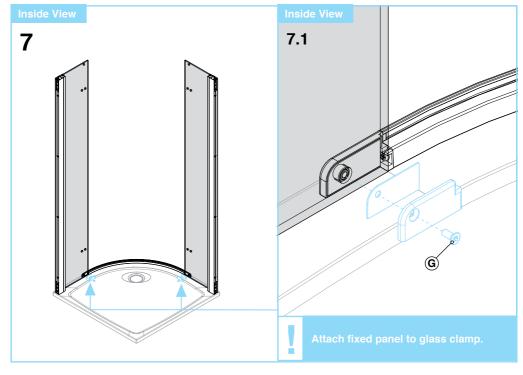


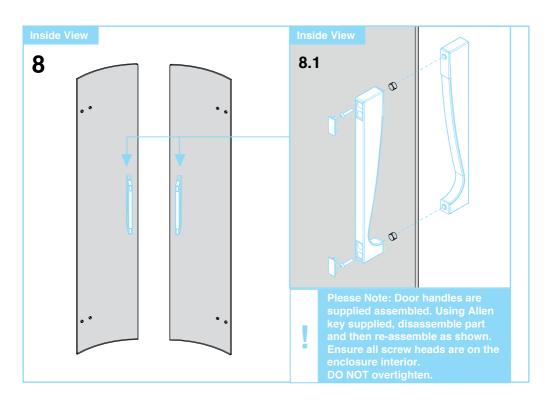


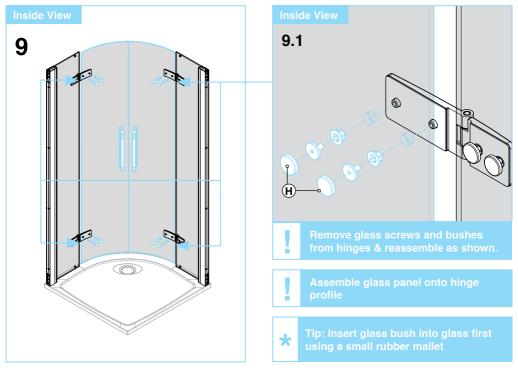

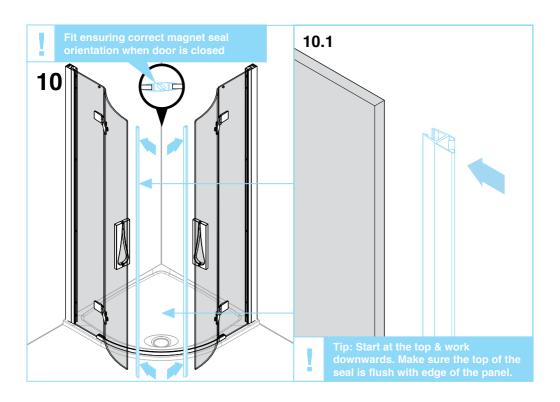

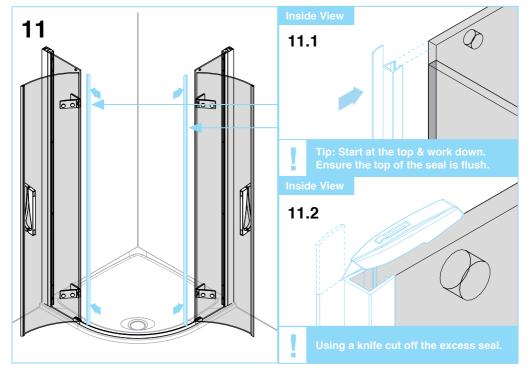

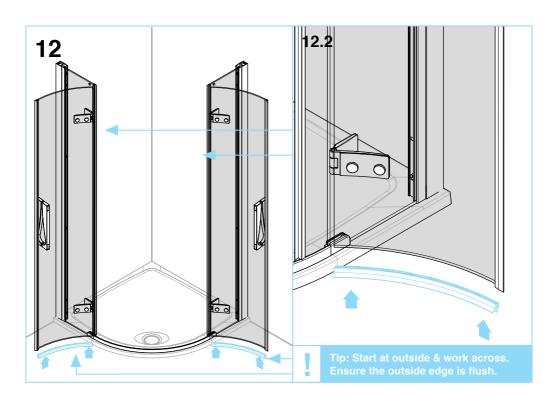

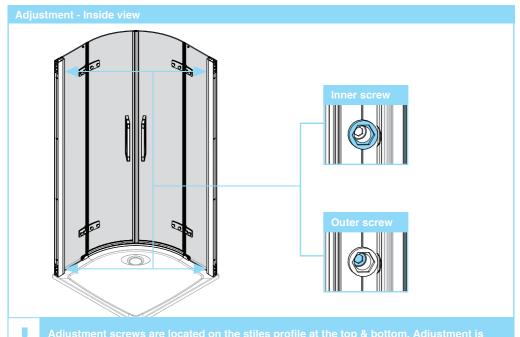



Inner screw adjustment of one profile - Adjustment is provided for each.


Bottom inner screw adjustment rotates the lower part of the profile

Top inner screw adjustment rotates the top part of the profile

Top & bottom inner screw adjustment moves the profile horizontally

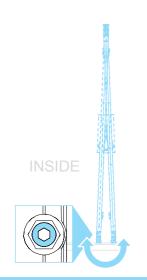

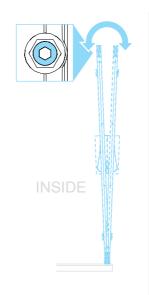

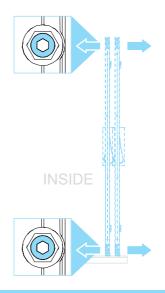



Inner screw adjustment of one profile - Adjustment is provided for each.


Bottom outer screw adjustment tilts the profile from the top


Bottom outer screw adjustment tilts the profile from the bottom


Top & bottom inner screw adjustment moves the profile horizontally

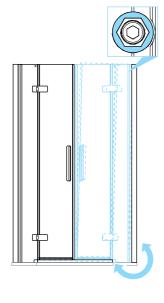


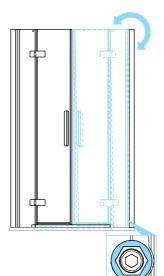


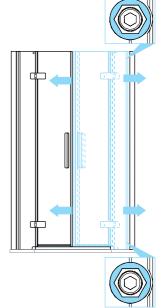


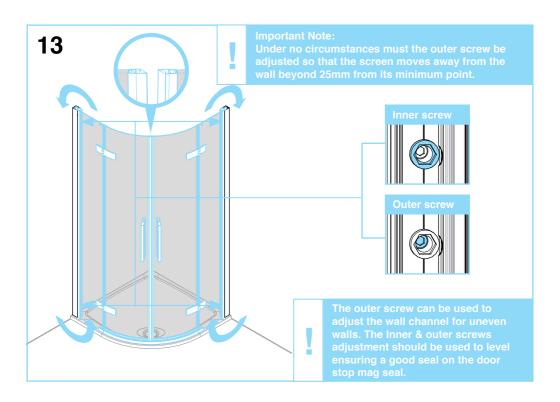


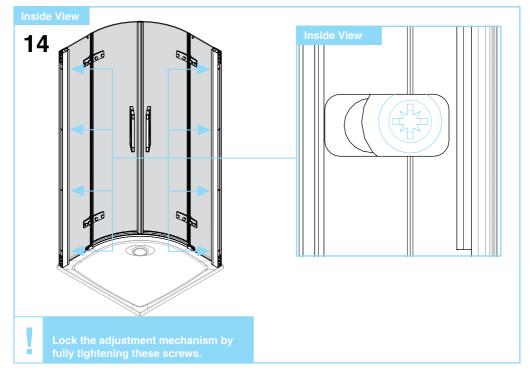


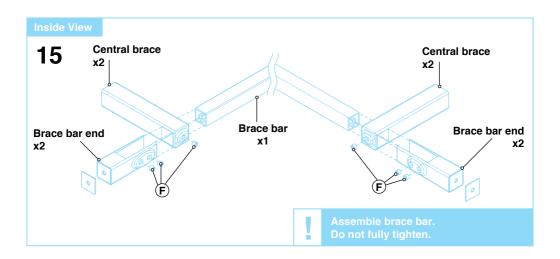


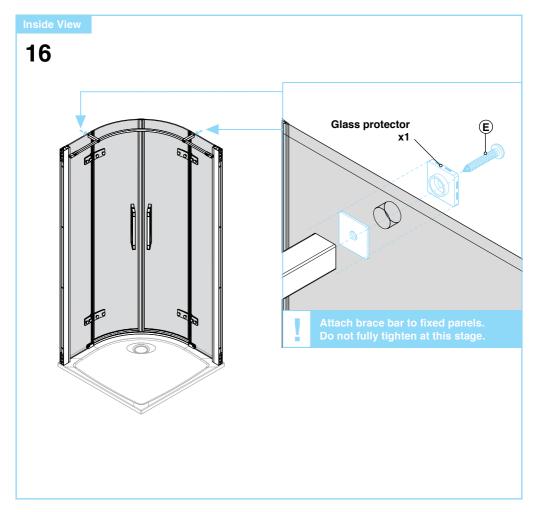


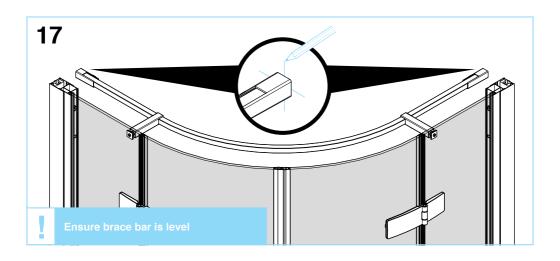


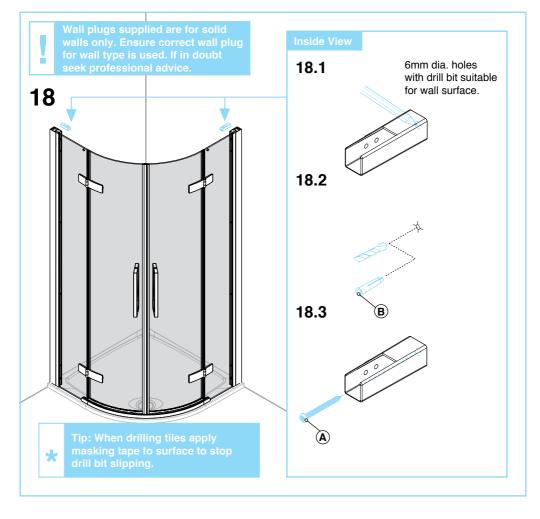


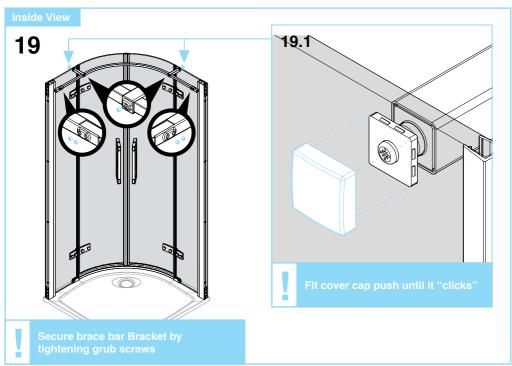

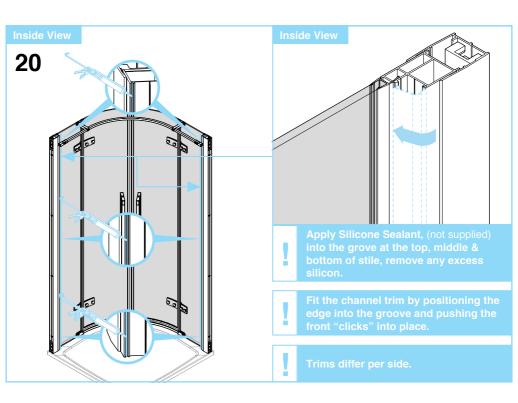

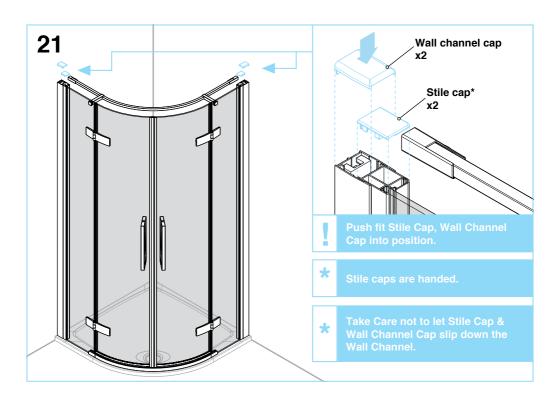

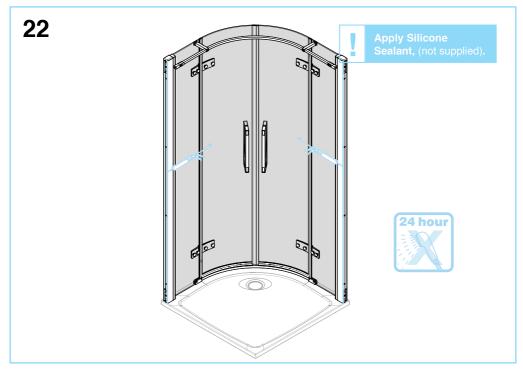

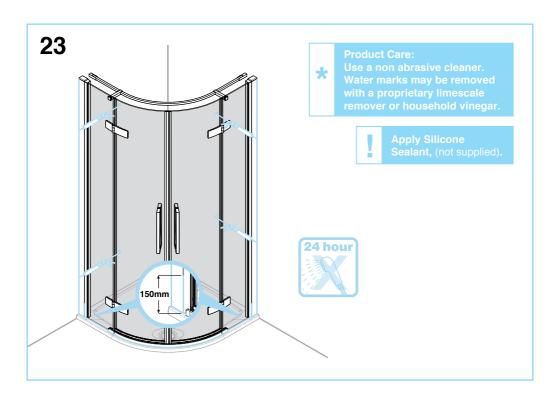

Notes:	
	:səlon

Notes:	
	:səlon

Notes:	
	:səlon