

PROJECTION SCREEN CLEANING INSTRUCTIONS

In general: Keep the screen surface rolled up in its protective case when not in use. This protects not only against accidental damage but against dirt, dust, smoke, etc. Before re-rolling, examine the surface front and back to be sure it is free of any foreign matter that might stain or mar the picture surface.

Glass Beaded Surfaces: Dust or very light soiled marks usually can be removed by brushing very lightly with a very soft brush. **DO NOT SCRUB. THE IMPORTANT THING TO REMEMBER IS THAT NO BEADS BE REMOVED OR MORE HARM THAN GOOD WILL RESULT.** If this method does not work and the soil interferes with the picture, replacement of the fabric in the screen is the only solution.

Replacement fabrics are available through Peter Pepper Products, Inc.

PLEASE NOTE: THESE INSTRUCTIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.



Peter Pepper Products, Inc. • T: 310.639.0390 x 7 • F: 310.639.6013 • E: customerservice@peterpepper.com