

# Wind Dancer



## features & benefits

*Wind Dancer Telescopic Outdoor Flagpole is a great option for outdoor and indoor banner display. It offer an adjustable display height of up to 16' and comes with a hollow base allowing the option of adding either water or sand as a weighting agent. The constructed unit is easy to position, erect and remove. Complete user instructions included.*

*Order ref: WIND-MX*

*Graphic size: 43"w x 144"h*

**Must use lettered part number of part list page to follow instructions**

**Recommend filling base with water after unit is assembled in the location where it will be used. Base when filled with water weights 165.75 lbs and damage to unit will occur if you attempt to move while full.**

hardware specifications	graphic specifications	additional info
Max height 17'5" Weight with base filled with water: 165.75 lbs Foot print 36"x36"		Shipping size: box 1 30"x16"x16" Box 2: 64"x9"x5" Shipping weight: Box 1 18 lbs Box 2 16 lbs Graphic: 13'x192: Allow 1.5" on top and side for #3 grommets

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

# Assembly Instructions



Connect part O to the bottom of part P. then place another part P on top of the previous part O



Connect part N over section where part O is located. Fasten part N to O with part A and tighten. Do this again to create 2 halves.



Put part B onto part D. Now connect part B (with part D attached) to one of the base halves, also connect the remaining part O's to the bottom of base.




Then place other base half onto part B and part o's. Connect part N's in remaining places and fasten part N to O with part A and tighten.



Place the remaining part B onto part D and fasten down with part I.



Place part J into part D (part L should be already with part J in not slide part J into part L) and connect part L's legs into hole of 4 corners of the base.

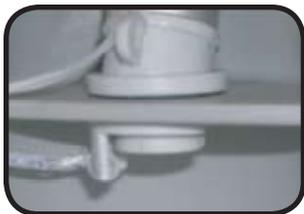

Clip on part M's to each end of part L's legs. (Make sure that legs are through base far enough to put part M on underside of the base.)



Unscrew part K. Place part E onto part J and screw together with part K.



Attach graphic to top most part F then attach to part C's. Use the 2 part H's to hold the outer most part C to keep graphic tight.



Raise part J and attach graphic to part F's while raising. Pole is not fully extended until button pops out of hole.



Use part G on second telescopic section of part J to create half section pole length. Can not use same graphic as fully extended graphic will be too long.

Reverse the procedure to disassemble

# Assembly Instructions

Side base connector screw (A) X4



Center base connector (B) X2



Horizontal hooks (C) X4



Pole pocket (D) X1



Top horizontal pole (E) X1



Vertical hooks (F) X10



Half section stopper (G) X1



O-ring stopper (H) X2



Pole pocket retaining nut (I) X1



Telescopic Pole (J) X1



Retaining screw for horizontal (K) X1



Quadruped (L) X1



Quadruped retaining clip (M) X4



Side base connector top (N) X4



Side base connector w/nut-bottom (O) X4



Base section (P) X4



# Optional Bags



Shown above: disassembled Wind Dancer base parts and Wind Dancer bag.



Place parts in bag as shown




Close bag by zipping



Close Velco handles



Shown above: disassembled Wind Dancer poles and Wind Dancer pole bag.

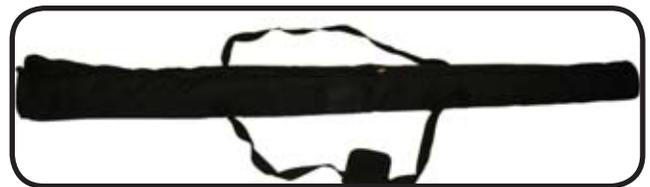

close bag by zipping



Close Velco handles