 


Scandi - 2 Door 3 Drawer Wardrobe

Assembly Instructions - Please keep for future reference

1022301

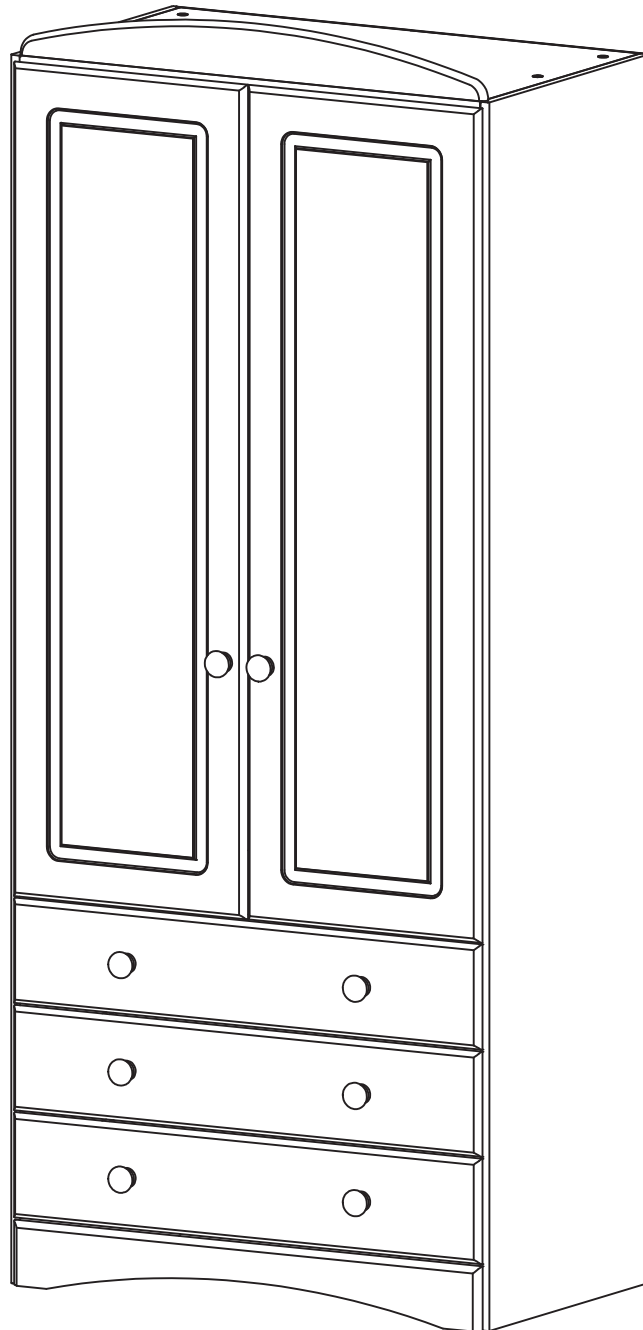

Dimensions

Width : 81.1 cm

Depth : 49.0 cm

Height: 191.3 cm

Assembly Instructions - Please keep for future reference



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

 
 
 
 
 
 
 
 
 
 
 
 
 
Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels



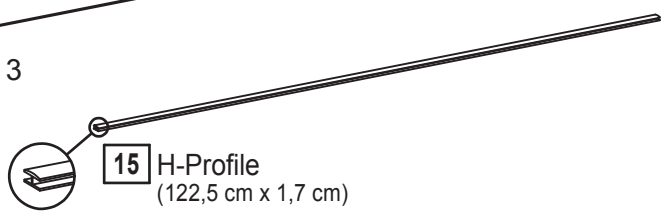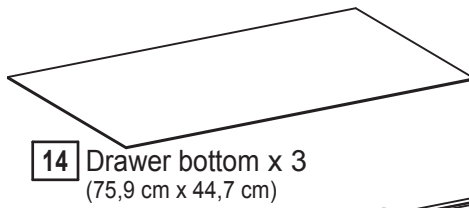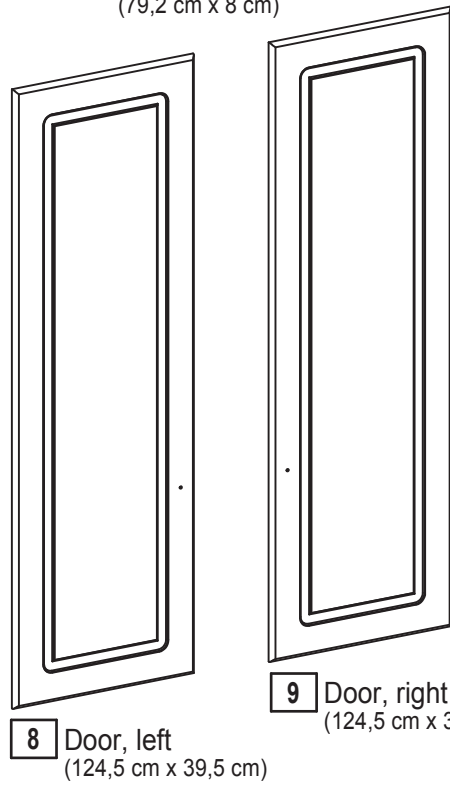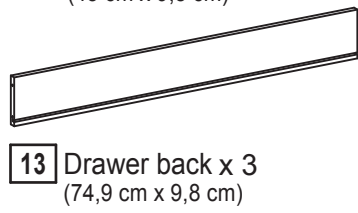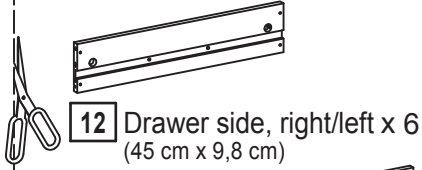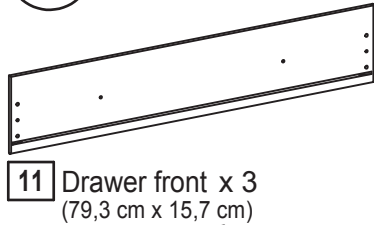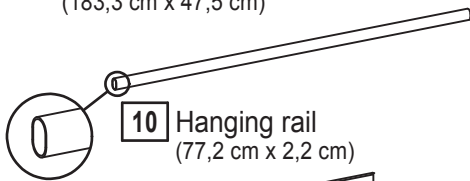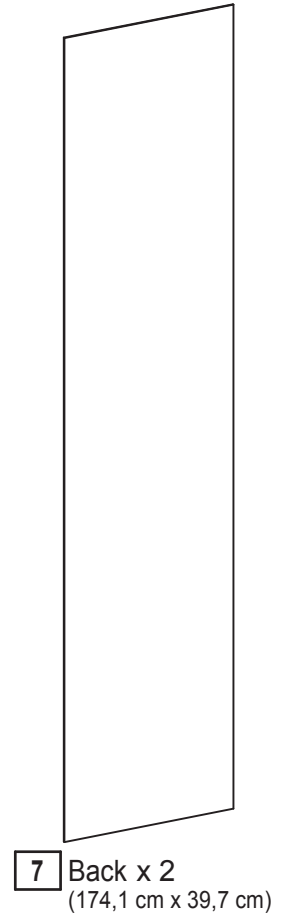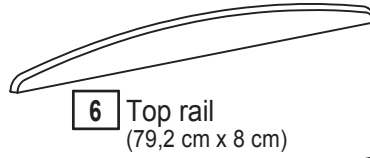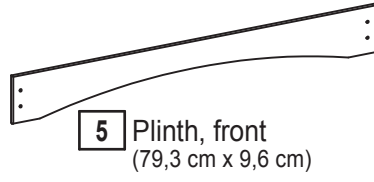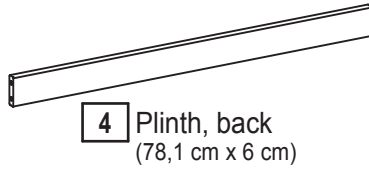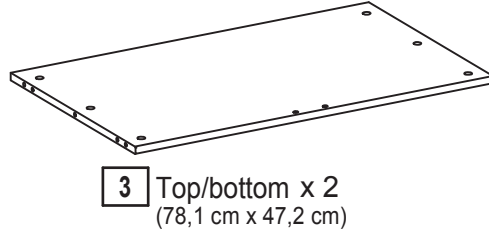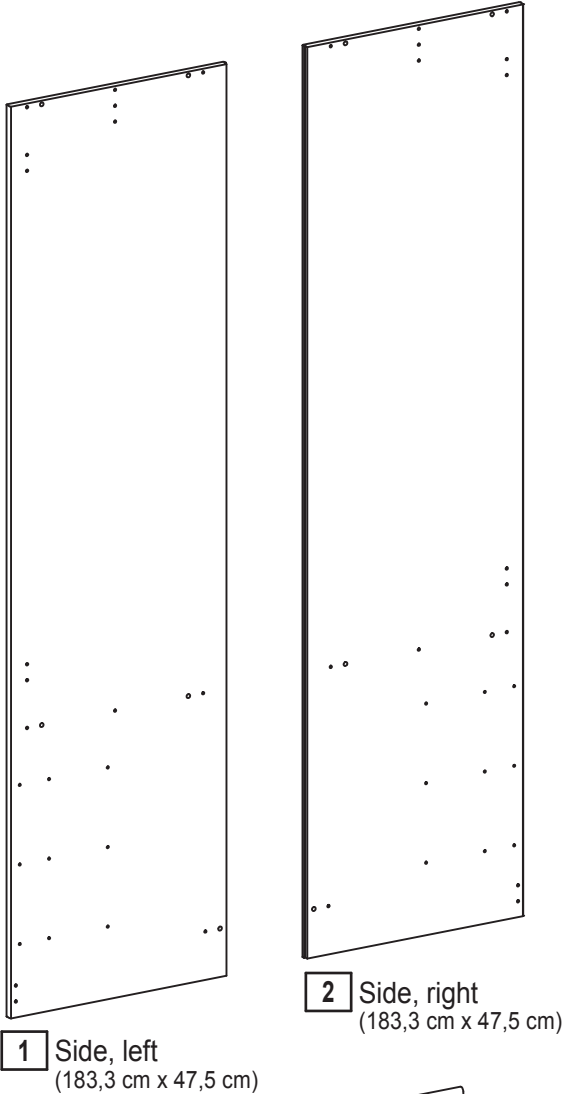














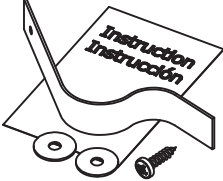




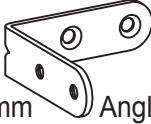
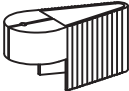
Please check you have all the panels listed below



Components - Fittings

Please check you have all the panels listed below

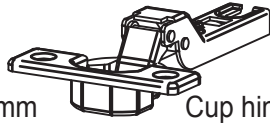
Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

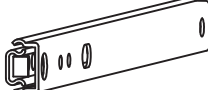Aa  ø7.8 x 40mm Wooden dowel x 10	Ab  ø6 x 30mm Wooden dowel x 12	Bc  ø3.5 x 15mm Screw x 18
Bo  ø3 x 12mm Screw x 4	Bp  ø3 x 35mm Screw x 12	Ca  ø15 x 10.5mm Cam x 20
Cb  ø5 x 11, cc34mm Bolt x 20	Da  1.2 x 20mm Nail x 50	Fh  Wall strap and instruction x 1
Fi  Back fitting w. ø3.5 x 15mm Screw x 6	Fl  Support for hanger rail - 15mm x 2	
Gc  ø40 x 35mm Wooden Knob x 8	Hk  M4 x 9mm Screw x 6	Jc  ø4 x 35mm Screw x 8
Kb  ø5.8 x 8mm Screw x 18	Ke  ø6.1 x 11.5mm Screw x 8	Mc  0mm Crossplate x 4
Me  ø26mm Cup hinge x 4	Pc  Magnet, adjustable x 4	Pd  35 x 12 x 1mm Magnet catch x 4
Sk  245 x 17 x 10mm Drawer runner x 6	Va  Angle 20 x 20 x 16mm x 4	Vg  50 x 50 x 15mm Angle x 2
Yd  Nail holder x 1		


Tools required



 Phillips screwdriver
(Medium & large)




Hammer

 

Flatblade screwdriver
(Medium)

 
Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

 Fix the drawer sides **12** to the drawer back **13** as shown, using screws **Bp**.

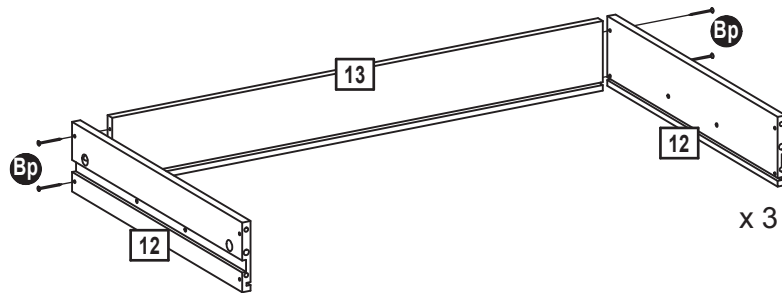


Step 2

 Knock the dowels **Ab** into the holes indicated on the drawer sides **12** using a small hammer.

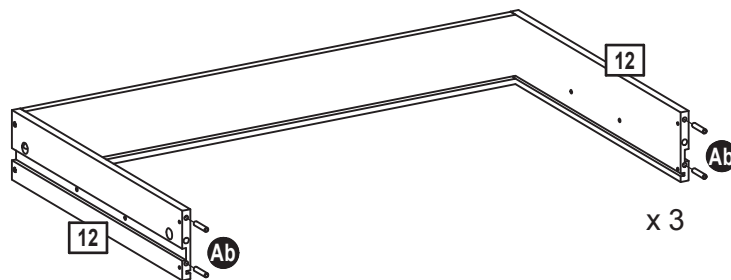



Step 3

 Slide the drawer bottom **14** into the drawer sides **12**.

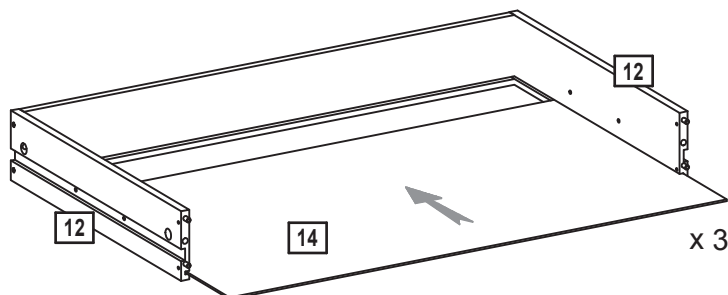

Step 4

  Screw the bolts **Cb** into the holes indicated on the drawer front **11**.

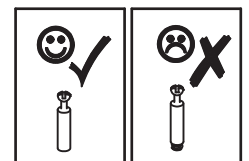
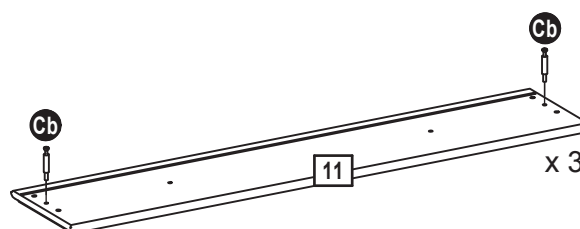


Step 5

Push the drawer front **11** onto the drawer sides **12** as shown.

Push cams **Ca** into the holes indicated. Arrow pointing towards the front.

  Turn the cams **Ca** to the right to fix the front **11**.

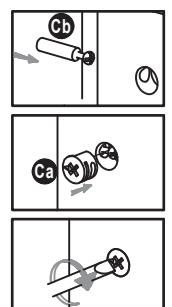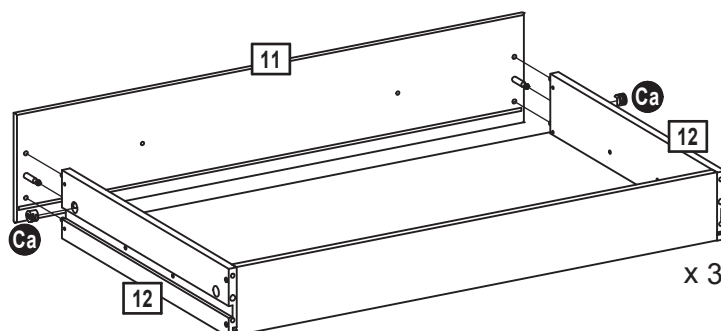

Assembly Instructions

Step 6

 
 
 


Important!

Make sure the angle between the drawer front **11** and the drawer sides **12** is 90° before the drawer bottom **14** is fixed.

Fix the drawer bottom **14** to the drawer back **13** and the drawer front **11** using **Fi**.

To adjust the angle between the drawer sides and the drawer fronts push the fitting **Fi** sideways. See details.

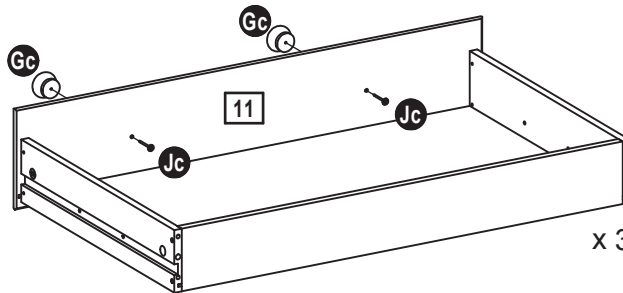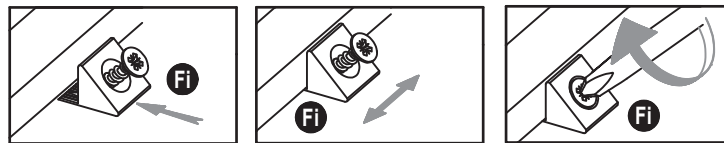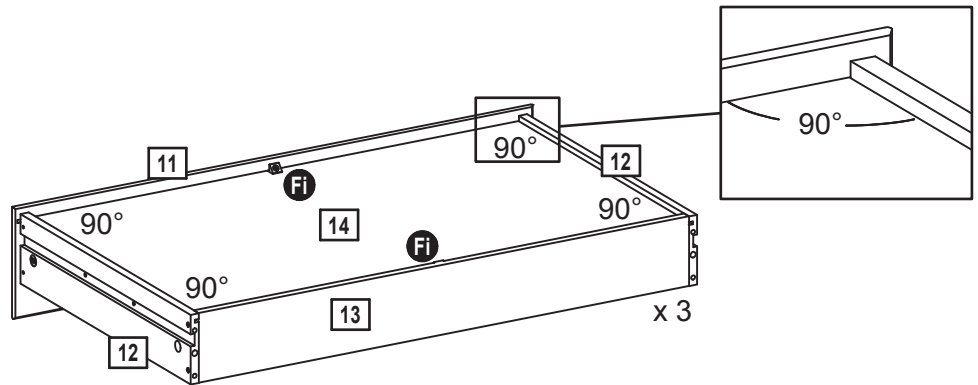

Step 7

Fix the wooden knobs **Gc** to the drawer front **11** using screws **Jc**.

Step 8

 
Fix the support for hanger rail **Fi** to the sides **1** and **2** using screws **Bc**.

Fix the Crossplates **Mc** to the sides **1** and **2** using the pre-mounted screws. Note the details.

Position the Crossplates **Mc** exactly as shown.

Screw the bolts **Cb** into the holes indicated on the sides **1** and **2**.

Fix the angles **Va** to the sides **1** and **2** using screws **Ke**. Place the angles as shown. See details.

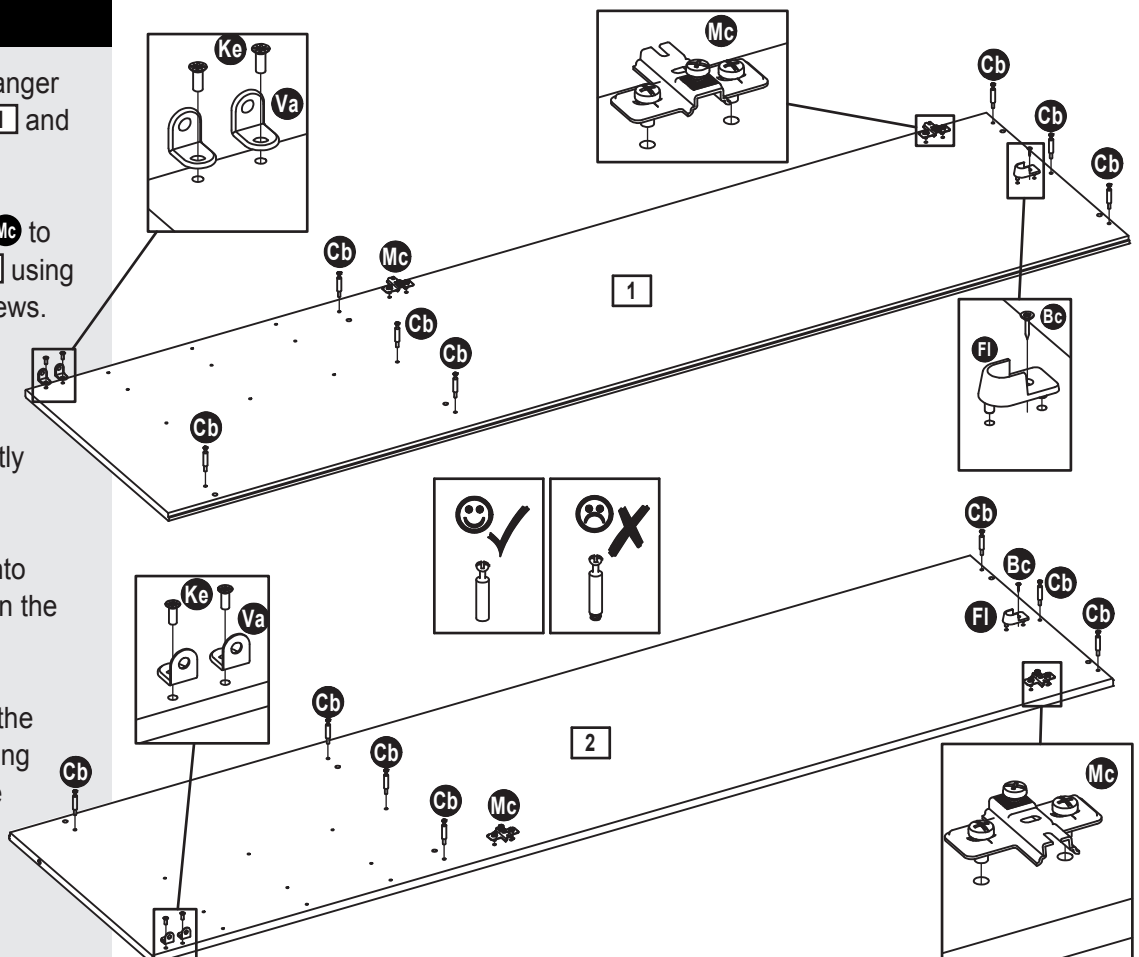


Assembly Instructions

Step 9

Slide the top of the drawer runners **Sk** backwards.

Fix the front end of the drawer runners **Sk** to the sides **1** and **2** using screws **Kb** through the holes indicated.

 See details.

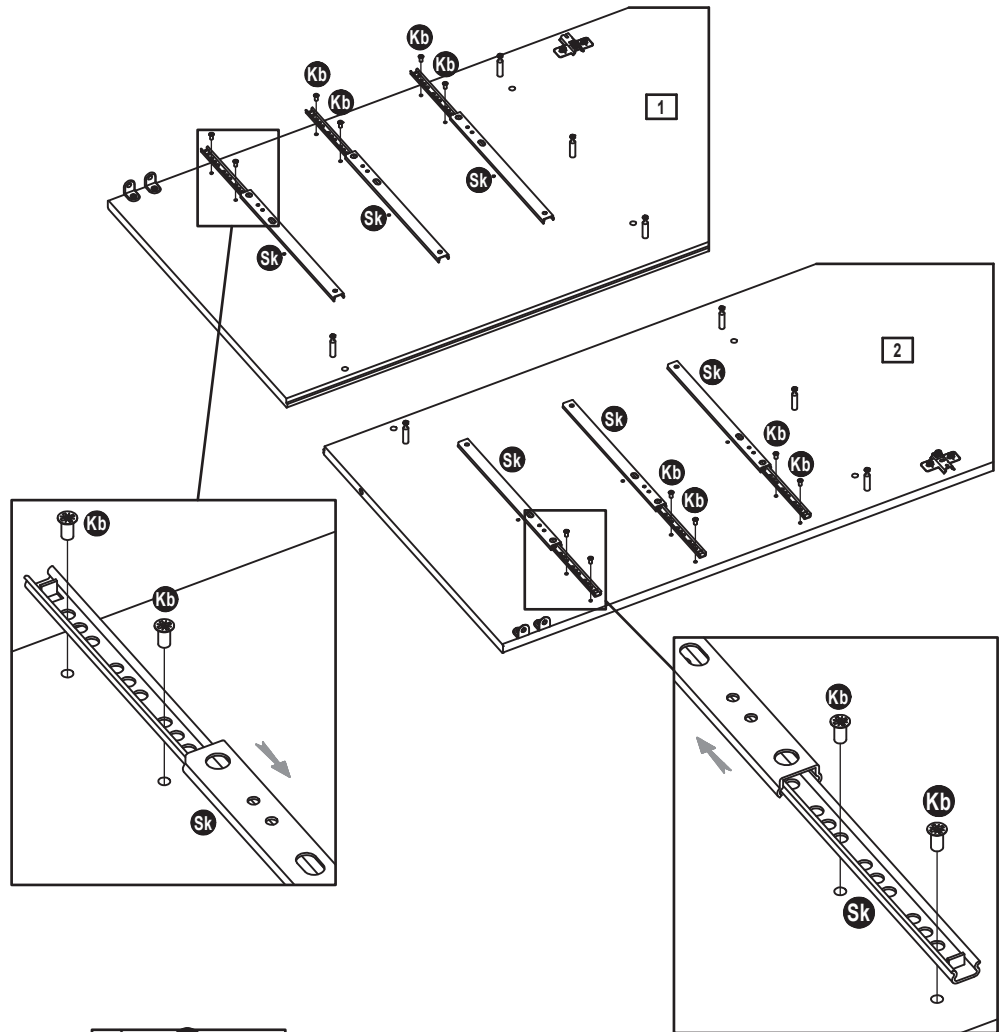


Step 10

Slide the top of the drawer runners **Sk** forwards.

Fix the back end of the drawer runners **Sk** to the sides **1** and **2** using screws **Kb** through the holes indicated.

 See details.

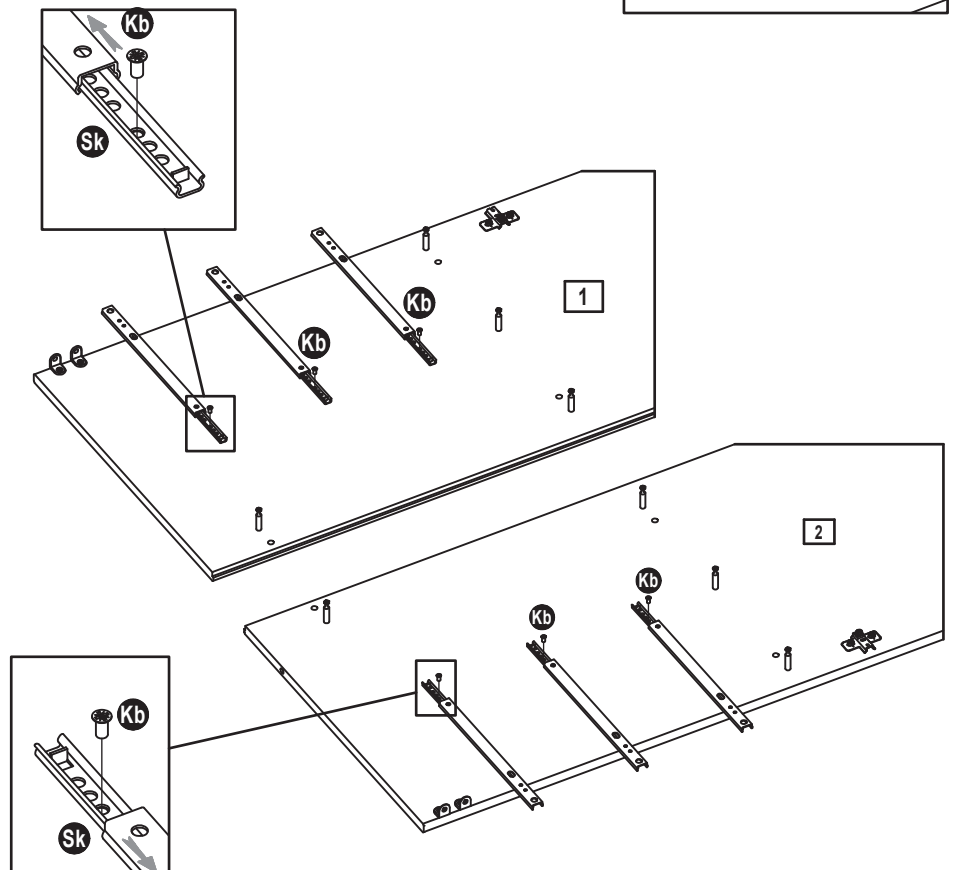


Assembly Instructions

Step 11

Knock the dowels **Aa** into the holes indicated on the top/bottom **3** and the back plinth **4** using a small hammer.

 Press the magnets **Pc** into the holes indicated on the top/bottom **3**.

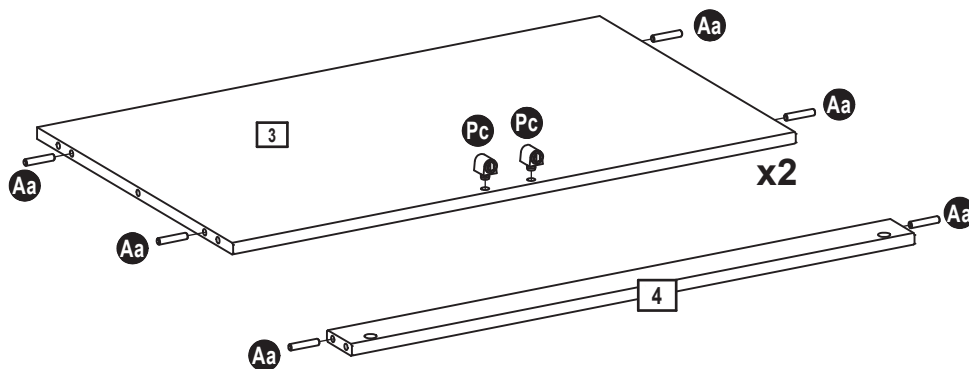


Step 12

Place the sides **1** and **2** onto the top **3**, the bottom **3** and the back plinth **4**.


Push cams **Ca** into the holes indicated on the top **3**, the bottom **3** and the back plinth **4**. Arrows pointing towards the sides **1** and **2**.

 Turn the cams **Ca** to the right to fix the sides **1** and **2**.

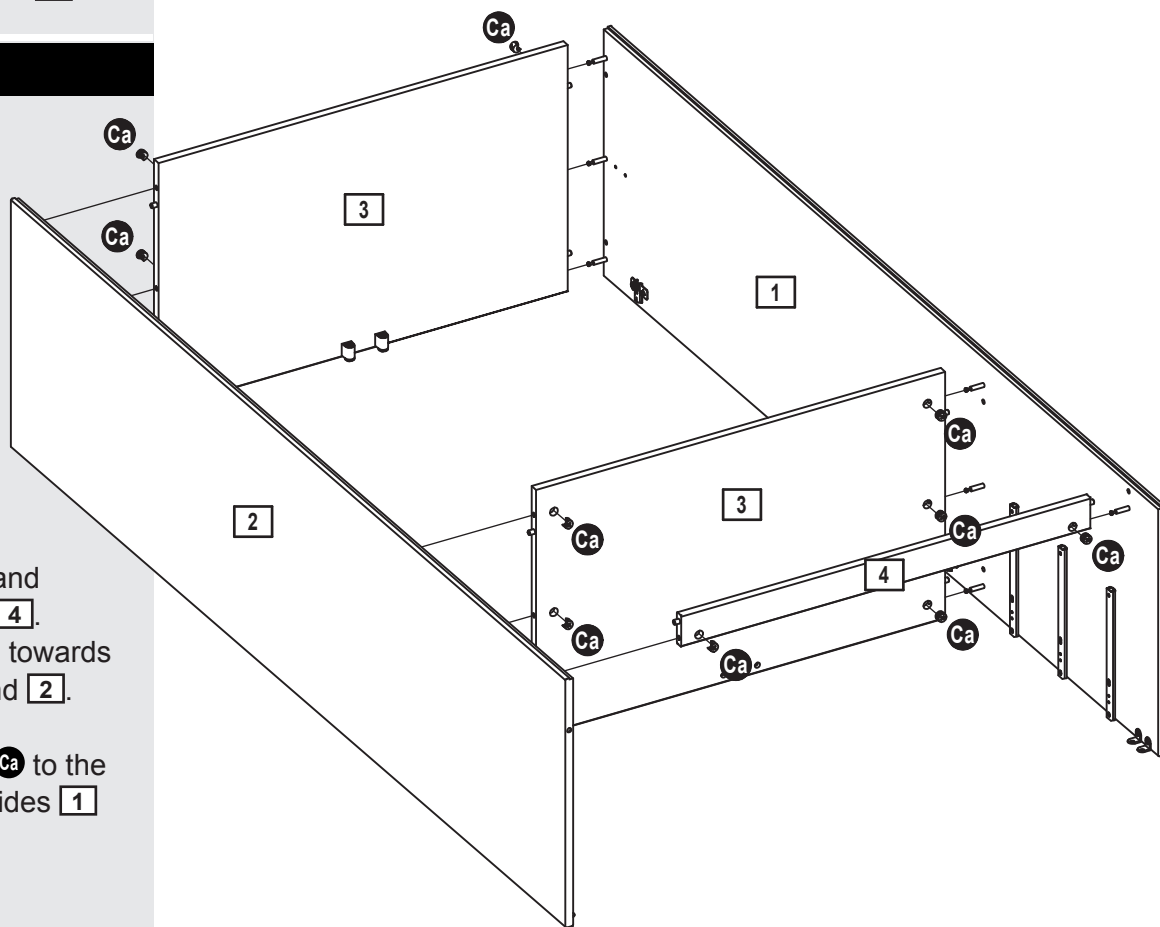

Step 13

 Fix the front plinth **5** onto the angles **Va** using screw **Ke**.

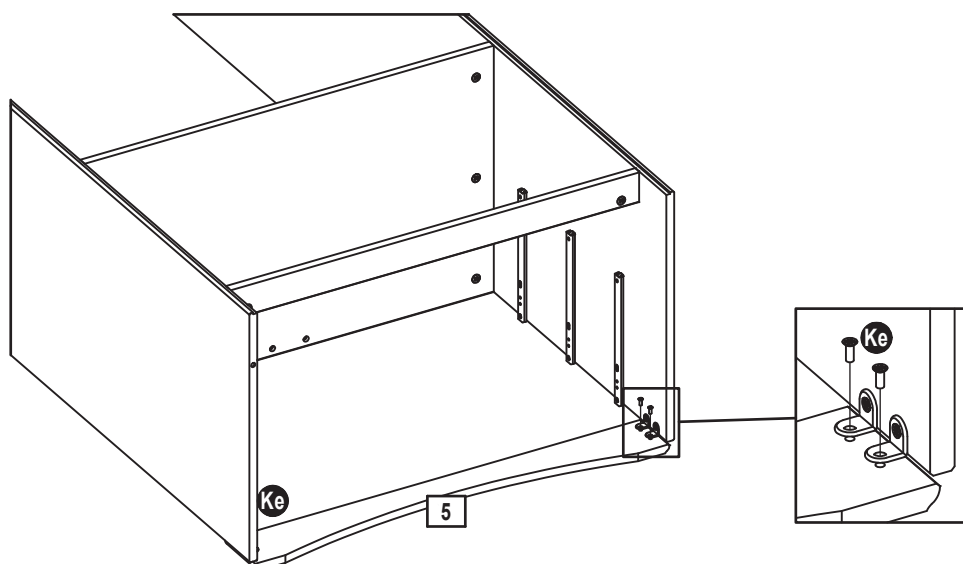

Assembly Instructions

Step 14

Place the backs **7** into the rabbets in the sides **1** and **2** and the H-profile **15**.

 
 
 


Important!

Make sure the angle between the top **3** and the sides **1** and **2** is 90° when the backs **7** is attached.

Fix the backs **7** to the sides **1** and **2**, the top **3** and the back plinth **4** using nails **Da**.


Use the nail holder **Yd** and a small hammer.

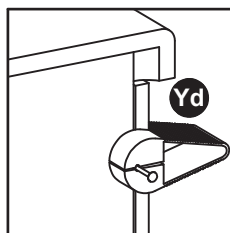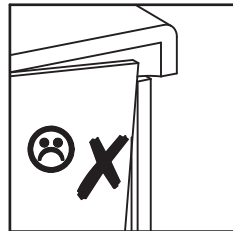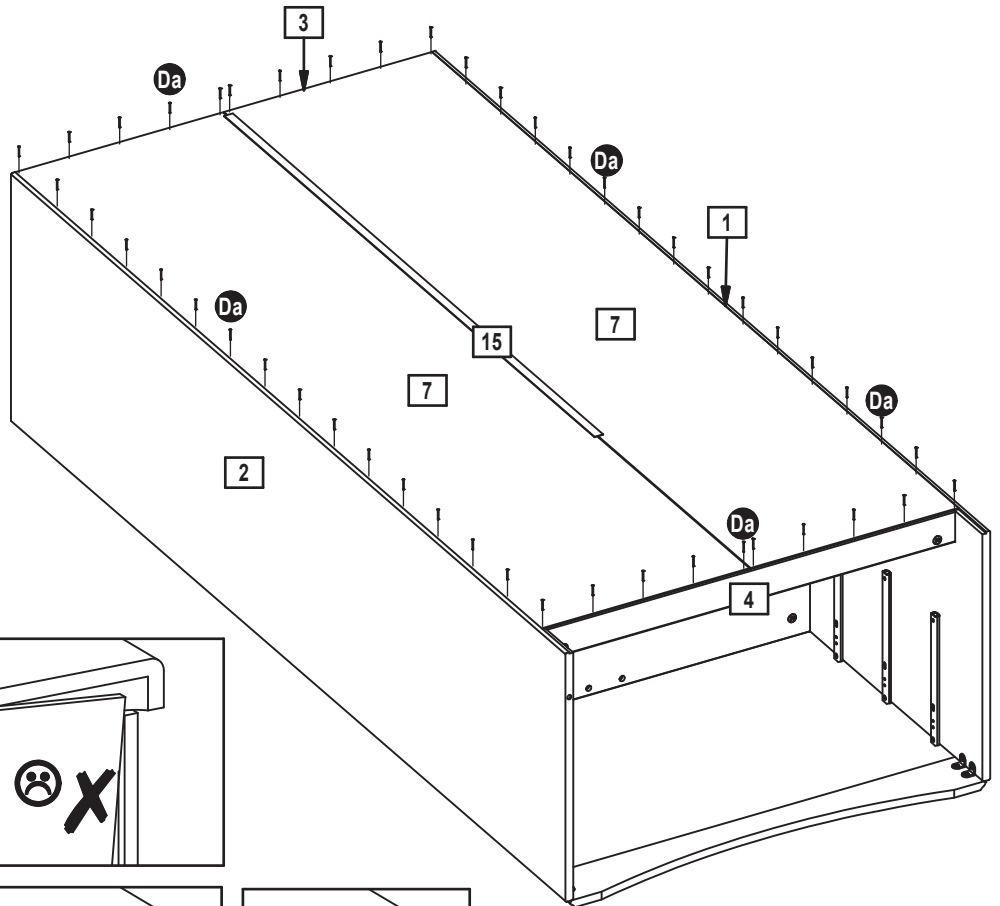

Step 15

Place the top rail **6** onto the top **3**.

 Fix the top rail **6** to the top **3** using angles **Vg** and screws **Bc**.

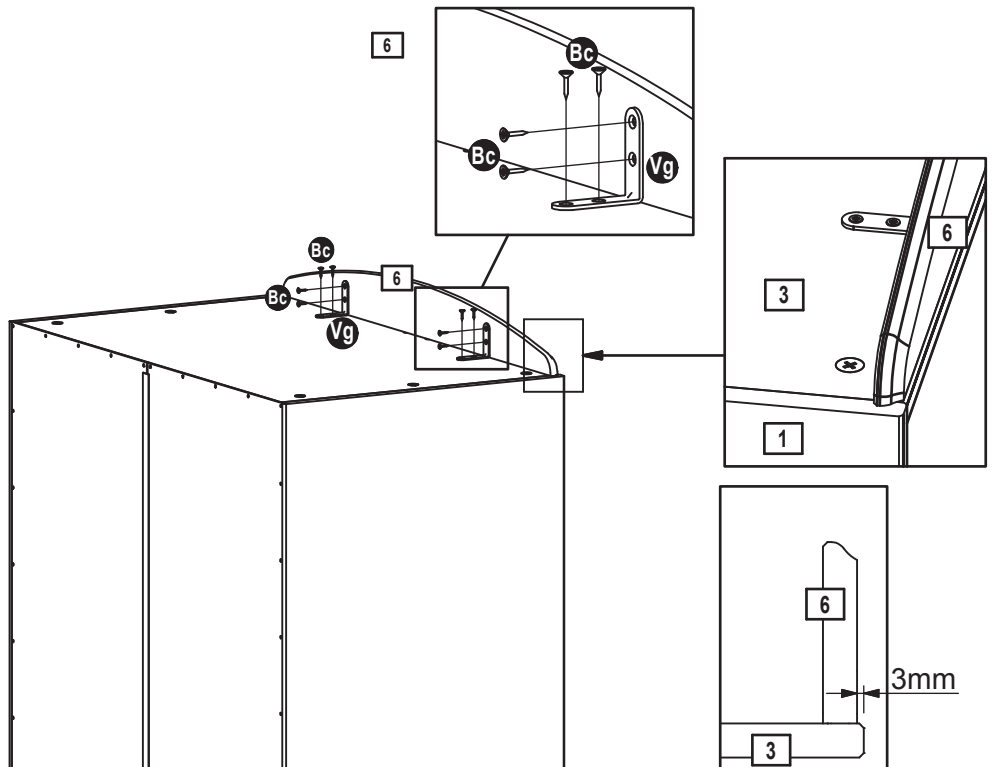

Assembly Instructions

Step 16



Warning!

The wardrobe is heavy.
Lift with care.

 
 
It's recommended that the wardrobe is fixed to the wall.

Use the fittings **Fh**. Follow the instructions included with the fittings.

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws **Hk**.

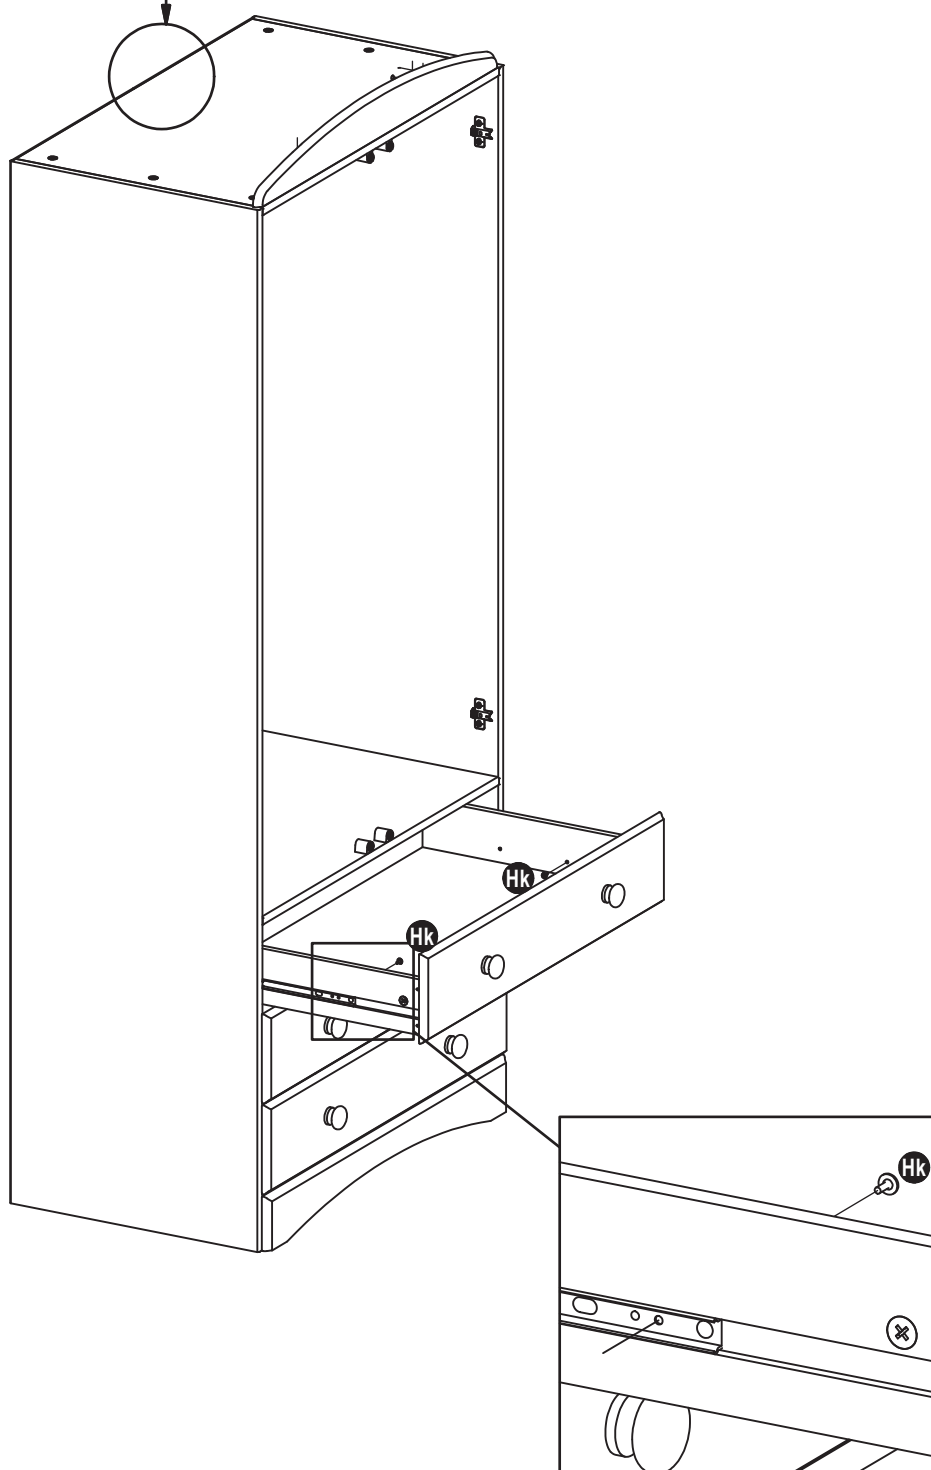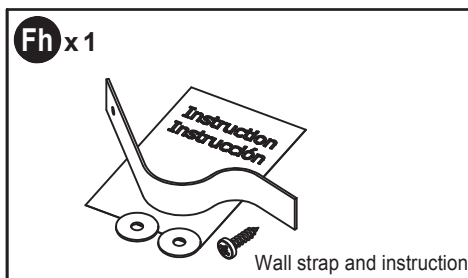


Assembly Instructions

Step 17

Place the cup hinges **Me** into the holes indicated on the doors **8** and **9**.

Fix the hinges using screws **Bc**.

 Fix the magnet catches **Pd** using screws **Bo** into the holes indicated.


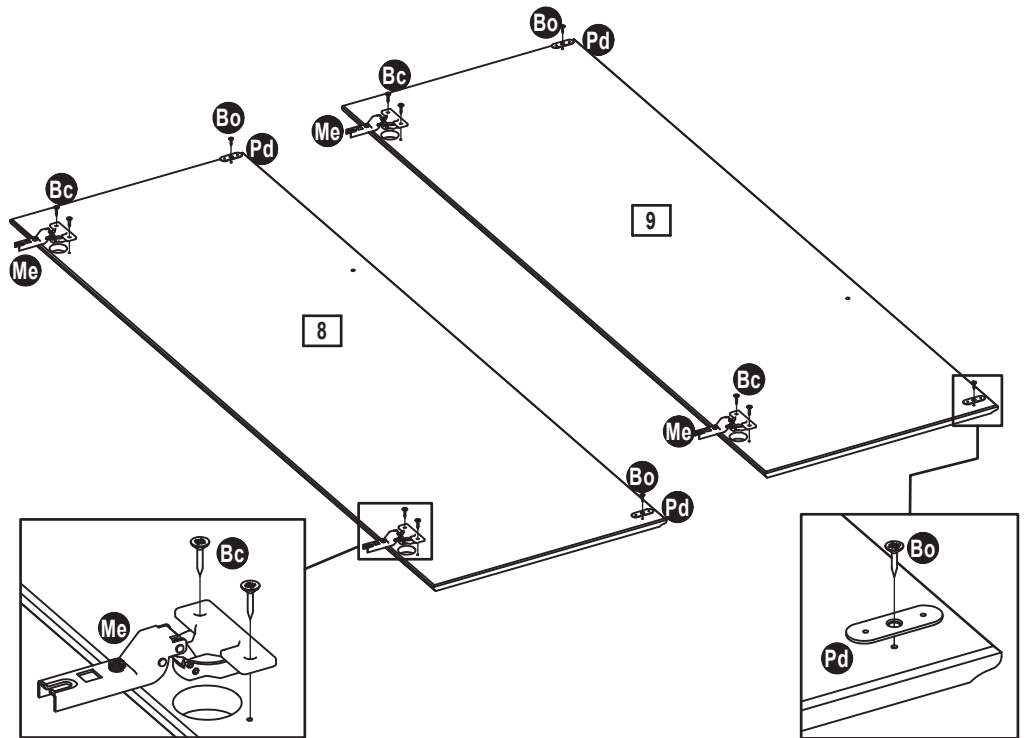


Step 18


Place the hanger rail **10** into the supports **Fi**.

Slide the cup hinges **Me** onto the crossplates **Mc**.
Fix the hinges using the premounted screw in the crossplates.

  See details above on how to fit the cup hinge **Me** onto the cross plate **Mc**.

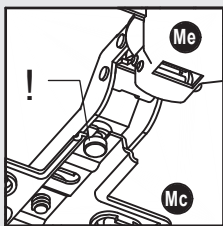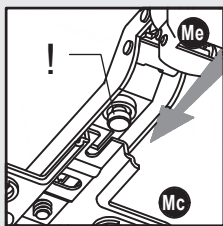

 Fix the wooden knobs **Gc** to the doors **8** and **9** using screws **Jc** and adjust the magnets **Pc**.

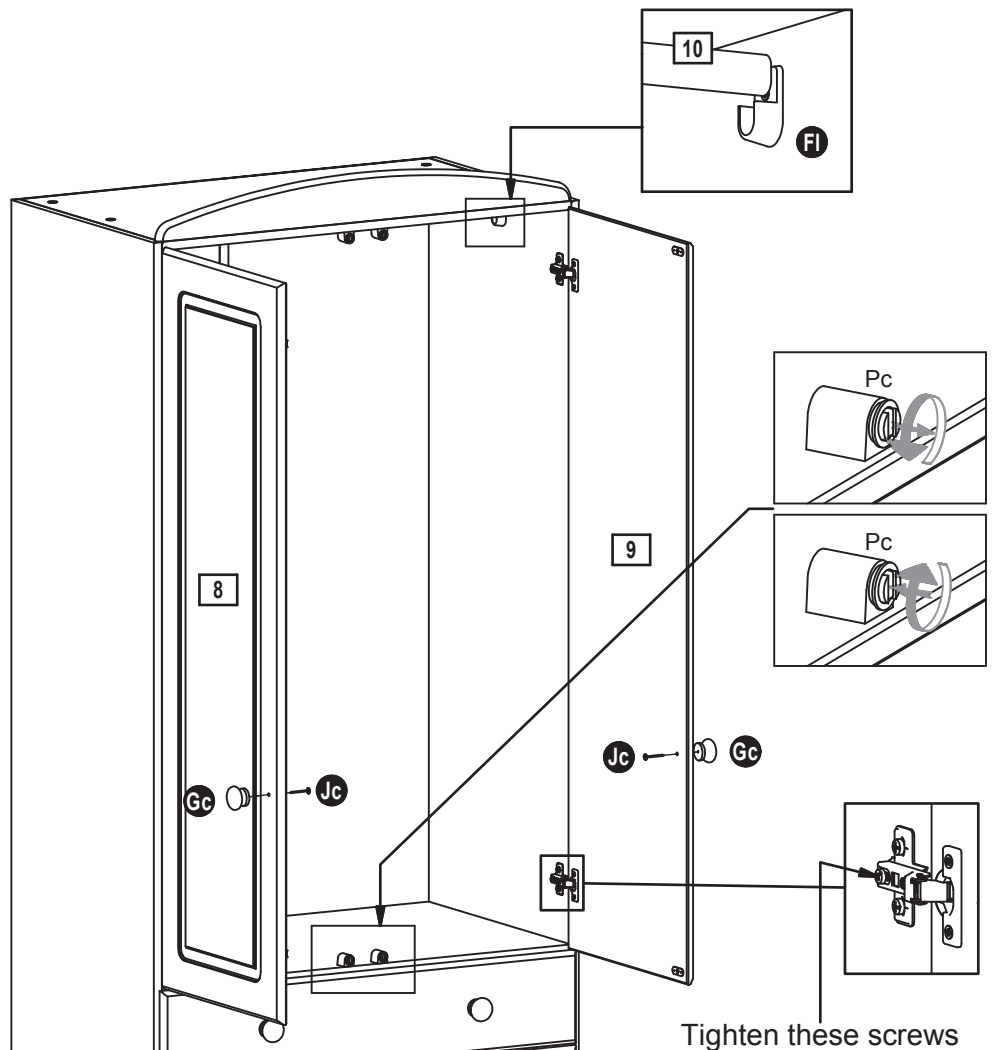


Assembly Instructions

Step 19

Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

 b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

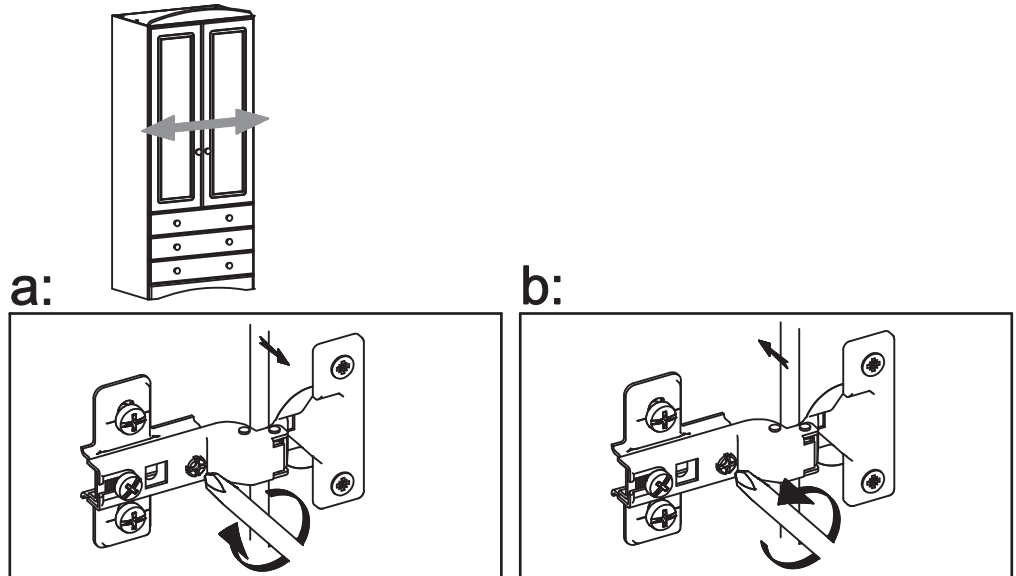


Adjusting the doors forwards/backwards.

a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.

 c:
Tighten the fixing screws of ALL the crossplates.

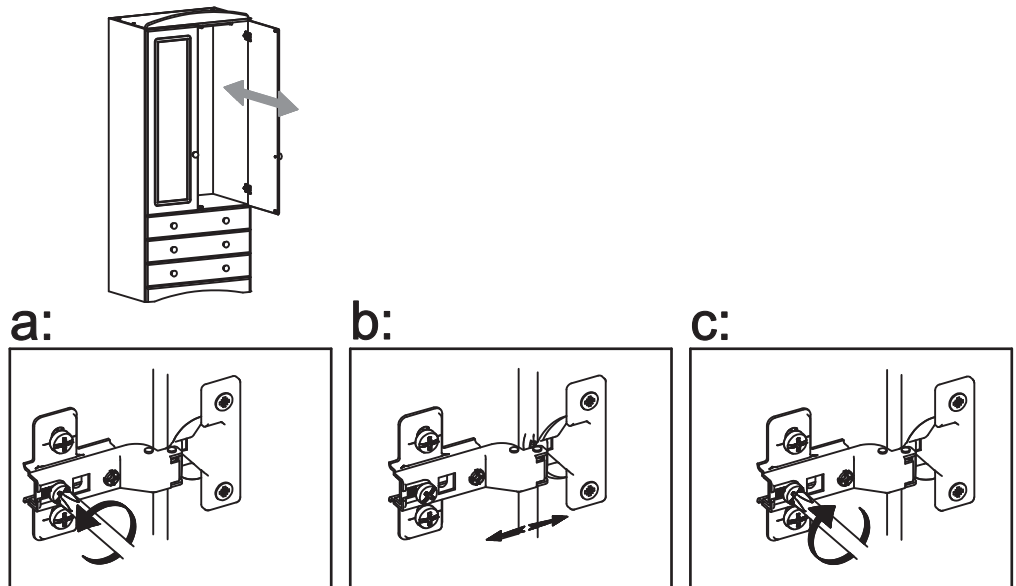

Adjusting the doors up/down.

a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.

c:
Tighten the pre-mounted screws of ALL the crossplates.

