
# Illustration 1

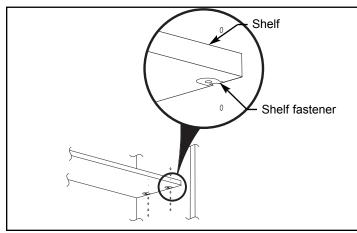


# Read all instructions and review illustrations before installing.

Tools required for assembly: Phillips screwdriver


# Shelf Adjustment:

- 1. Fully open cabinet doors.
- 2. Refer to Illustration 1. Using Phillips screwdriver, loosen shelf by turning shelf fasteners 1/2 turn counter-clockwise or until loose.
- 3. Lift shelf off fastener pins and set aside.

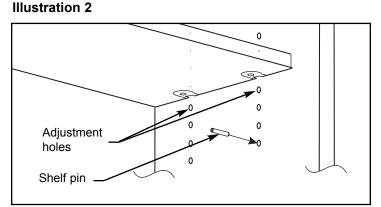

- 4. Refer to Illustrations 1 and 2. Remove fastener pins from holes and insert at desired position. Ensure all four pins are installed at same height.
- 5. With notches down, position the shelf onto the fastener pins. Ensure fastener pins are seated into the shelf fasteners in bottom of adjustable shelf.
- Using Phillips screwdriver, tighten shelf by turning shelf fasteners 1/2 turn clockwise or until fully locked on pins.


# Illustration 3

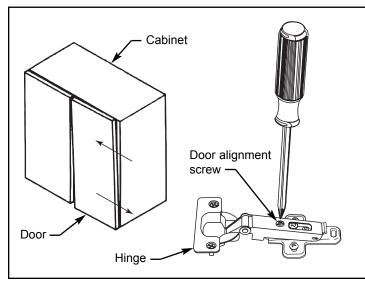

# **Illustration 4**

# Cabinet

### **Illustration 5**

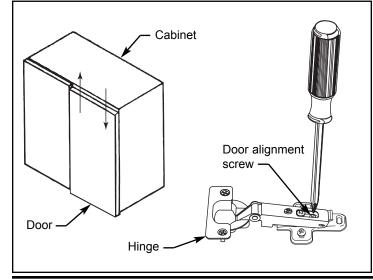

# Side-To-Side Door Hinge Adjustment Instructions (refer to Illustration 3):

- 1. Fully open cabinet door.
- 2. Locate door alignment screw on door hinge assembly.
- 3. Use the Phillips screwdriver to adjust door alignment screw.
- 4. Turn door alignment screw clockwise to adjust door out or counterclockwise to adjust door in.

# Front-To-Back Door Hinge Adjustment Instructions (refer to Illustration 4):

- 1. Fully open cabinet door.
- 2. Locate hinge mounting screw on door hinge assembly.
- 3. Use the Phillips screwdriver to loosen (but do not remove) the hinge mounting screw.
- 4. Adjust alignment of door and retighten hinge mounting screw.

# Up-Or-Down Door Hinge Adjustment Instructions (refer to Illustration 5):

- 1. Fully open cabinet door.
- 2. Locate door alignment screw on door hinge assembly.
- 3. Use the Phillips screwdriver to adjust door alignment screw.
- 4. Turn door alignment screw clockwise to adjust door down or counterclockwise to adjust door up.

### 242-7288 SIDE 2 OF 2 (02/04)