

## 88 5180 35 Arts & Crafts Bistro Table Cottage Oak Finish

## **IMPORTANT NOTE**

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

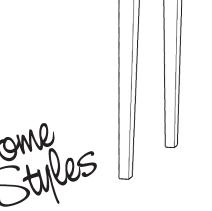


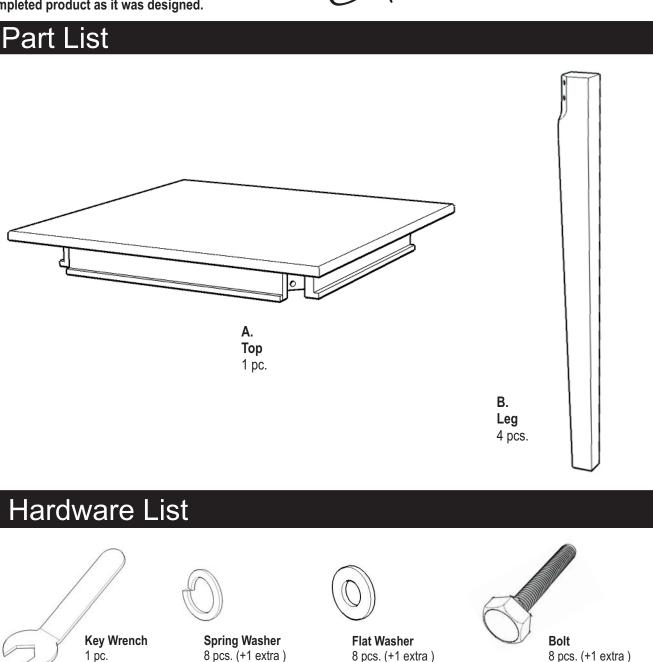

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

## IMPORTANT

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the Bolts in the future.

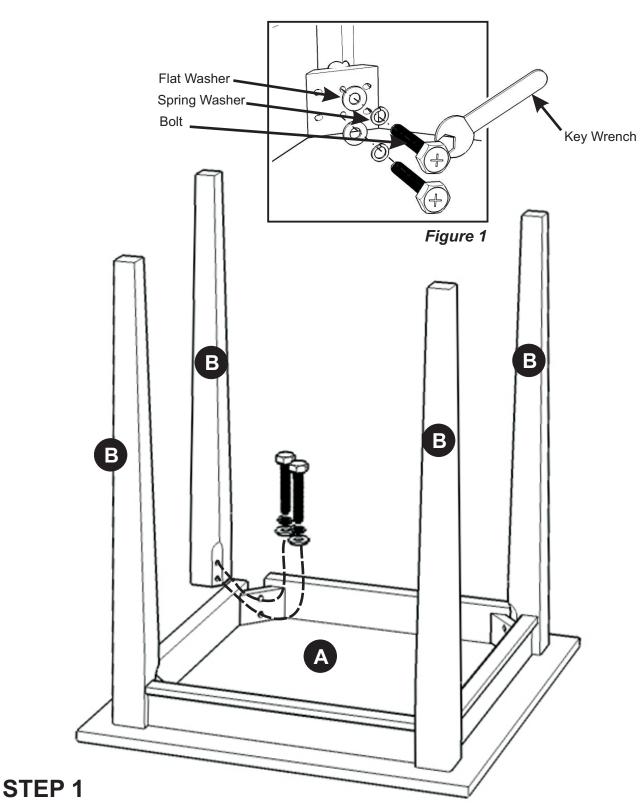

## Turn Top (A) upside down and place on a soft cloth.

Attach Legs (B) to Top (A) with Flat Washers, Spring Washers and Bolts (see Figure 1). Turn the table over to its' upright position.