

88 5004 94DLX1 Deluxe Kitchen Island

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

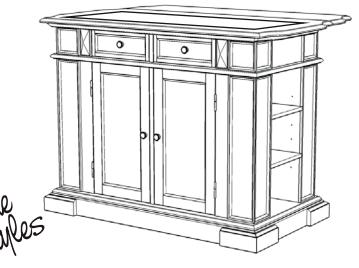

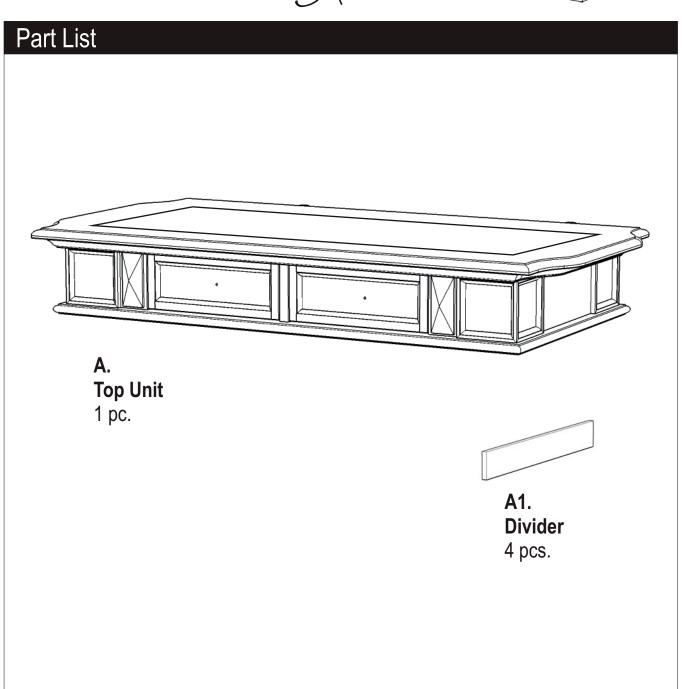

For assembly see instructions in carton 88 5002 94DLX3

Tools required for assembly: Phillips screwdriver Tools recommended for assembly :Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com

Revised date: 20Aug2012


88 5004 94DLX2 Deluxe Kitchen Island


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



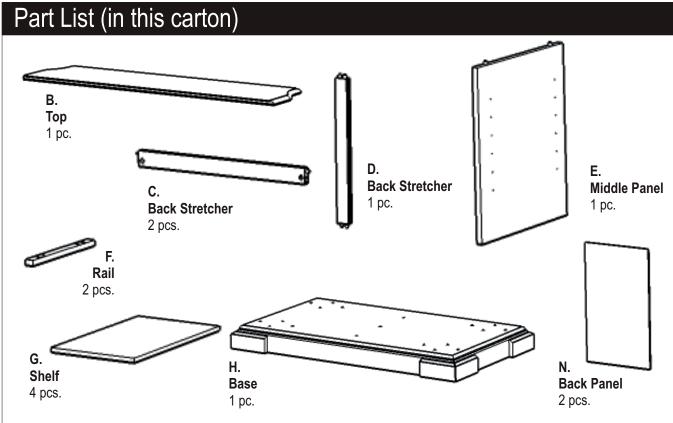

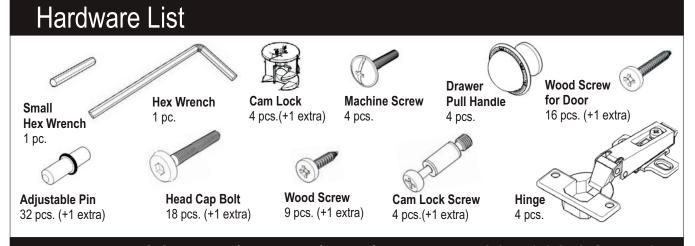

For assembly see instructions in carton 88 5002 94DLX3

Tools required for assembly: Phillips screwdriver Tools recommended for assembly: Level

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319 servicedesk@homestyles-furniture.com Revised date: 20Aug2012


88 5004 94DLX3 Deluxe Kitchen Island

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



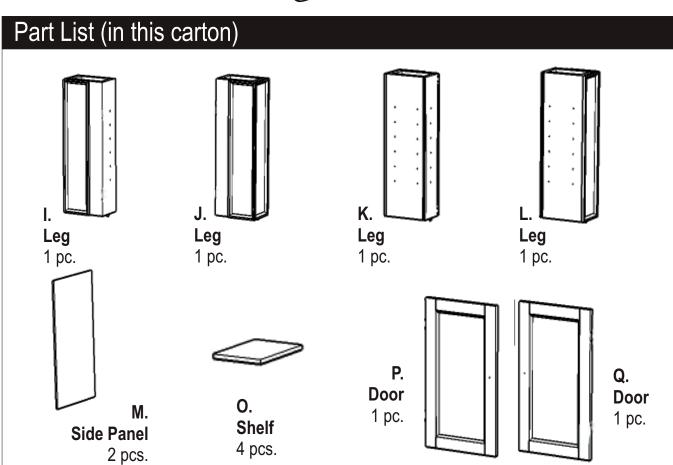

Also need the following from carton 88 5002 94DLX1, 88 5002 94DLX2

Top Unit (A)	1 pc.	Hex Wrench	1 pc.
Divider (A1)	4 pcs.	Small Hex Wrench	1 pc.
` '	- 	Cam Lock	5 pcs
Part List in carton 88 5002 94DLX2		Cam Lock Screw	5 pcs
Top (B)	1 pc.	Head Cap Bolt	19 pc
	2 pcs.	Adjustable Pin	33 pc
Back Stretcher (D)	1 pc.	Machine Screw	4 pc
Middle Panel (E)	1 pc.	Drawer Pull Handle	4 pcs
Rail (F)	2 pcs.	Wood Screw	10 pcs
Shelf (G)	4 pcs.		•
Base (H)	1 pc.	Wood Screw for Door	17 pcs
Back Panel (N)	2 pcs.	Hinge	4 pcs

Tools Required For Assembly: Phillips screwdriver

Tools recommended for assembly :Level


Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com Revised date : 20Aug2012


Assembly Instructions 2/5

IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * After assembly item must be level to work properly. Use the included adjustable levelers to level.

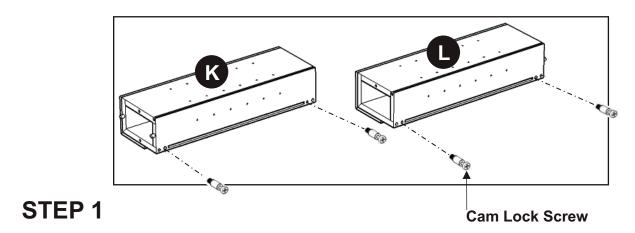


Put Cam Lock Screws into the pre-drilled holes of Leg (K),(L) and tighten.

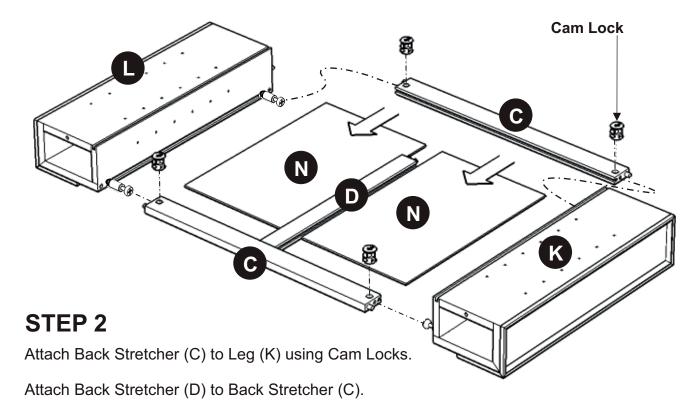

Slide Back Panel (N) to unit, then attach Back Stretcher (C) to unit using Cam Locks.


Attach Leg (L) to the unit using Cam Locks.

Assembly Instructions 3/5

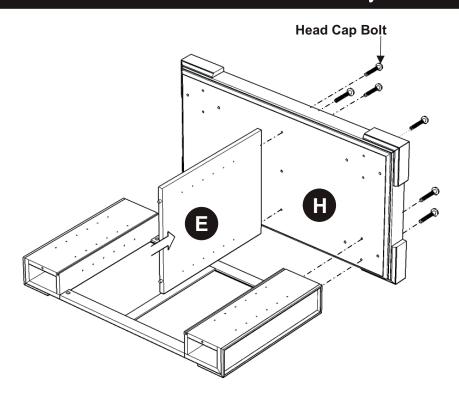

STEP 3

Attach unit from Step 2 and Middle Panel (E) to Base (H) with Head Cap Bolts.

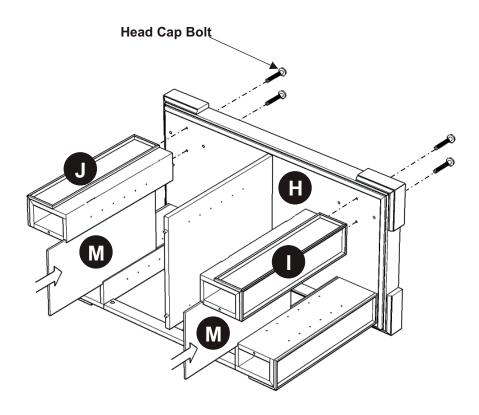


STEP 4

Attach Leg (I) and (J) to Base (H) with Head Cap Bolts.


Slide Side Panels (M) into position.

Assembly Instructions 4/5

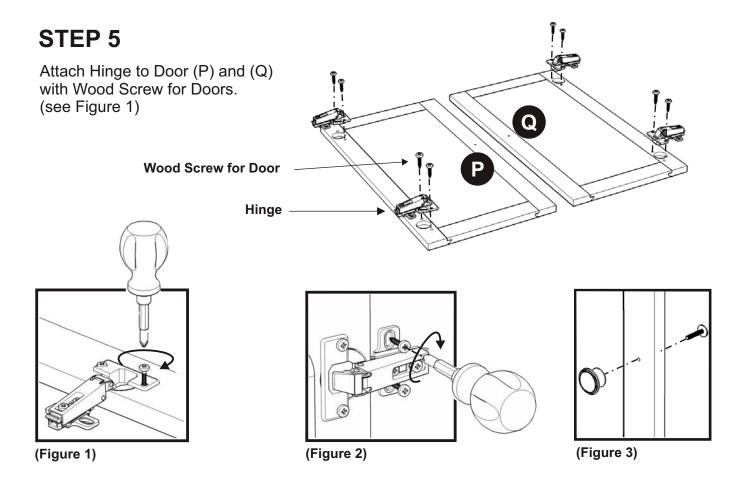



STEP 6

Attach Rail (F) to unit with Head Cap Bolts.

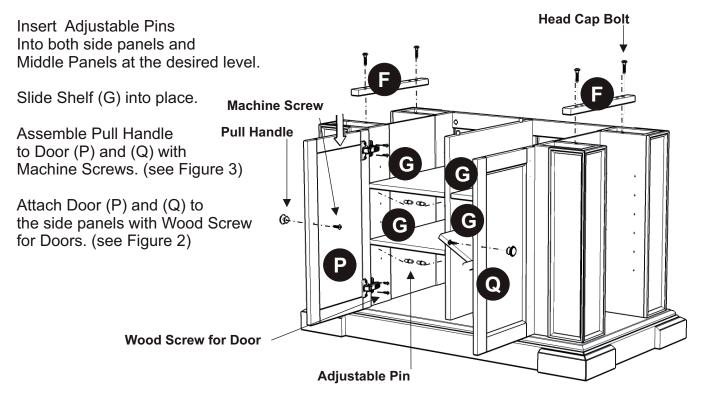

Assembly Instructions 5/5

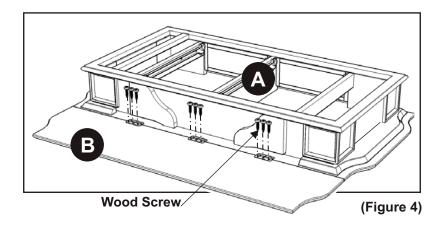

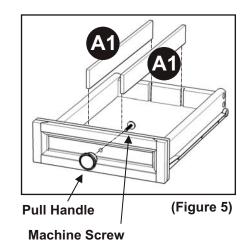

STEP 7

Attach Top (B) to Top Unit (A) with Wood Screws. (see Figure 4)


Remove the drawers in Top Unit (A), assemble Pull Handle with Machine Screws and Dividers (A1). (see Figure 5)

Place Top (A) on the unit with Head Cap Bolts.

Slide the drawers into position.

Insert Adjustable Pins Into both side panels at the desired level.

Slide Shelf (O) into Place.

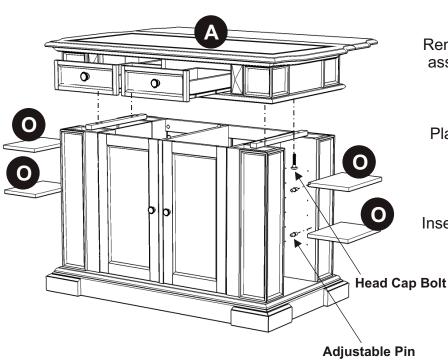

To level the unit, adjust the adjustable levelers on the bottom of unit. (see Figure 6)

Note: Unit must be level to work properly.

