

**Tools Required For Assembly : Phillips screwdriver** 


Tools Recommended For Assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

### Assembly Instructions 2/8


#### **IMPORTANT**

- \* Do not tighten up all the bolts until each part is properly assembled.
- \* You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

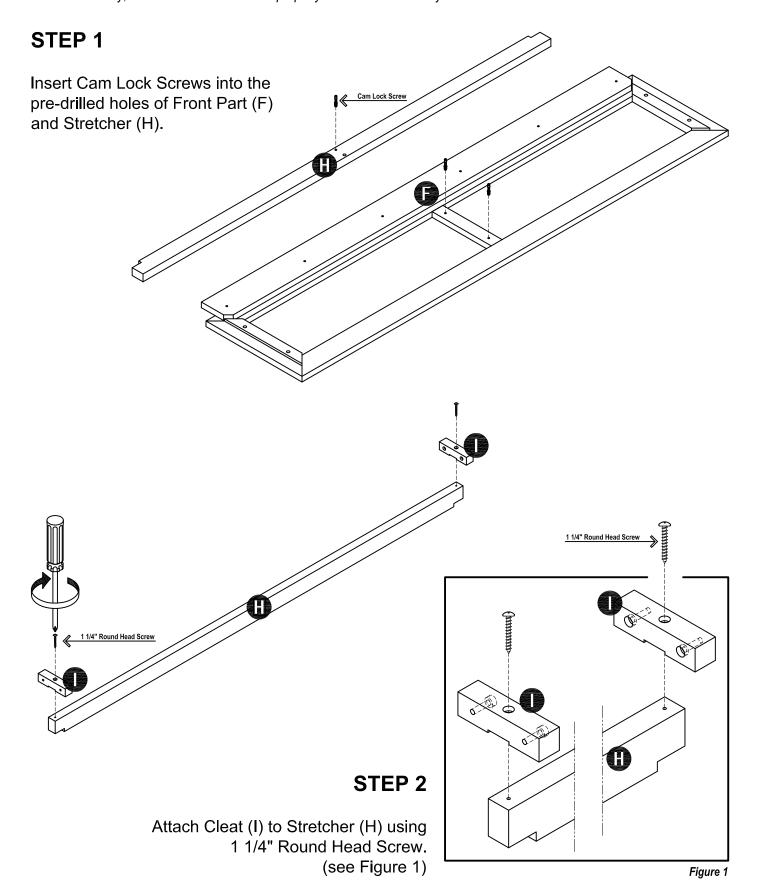


### Assembly Instructions 3/8

#### STEP 3

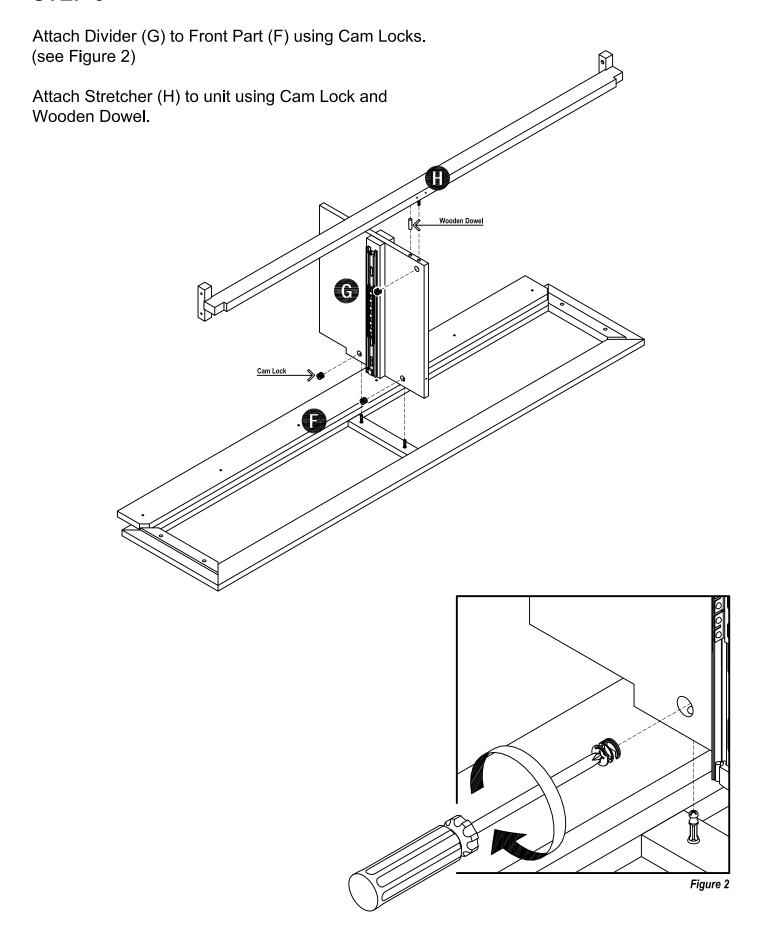


### Assembly Instructions 4/8


#### STEP 4

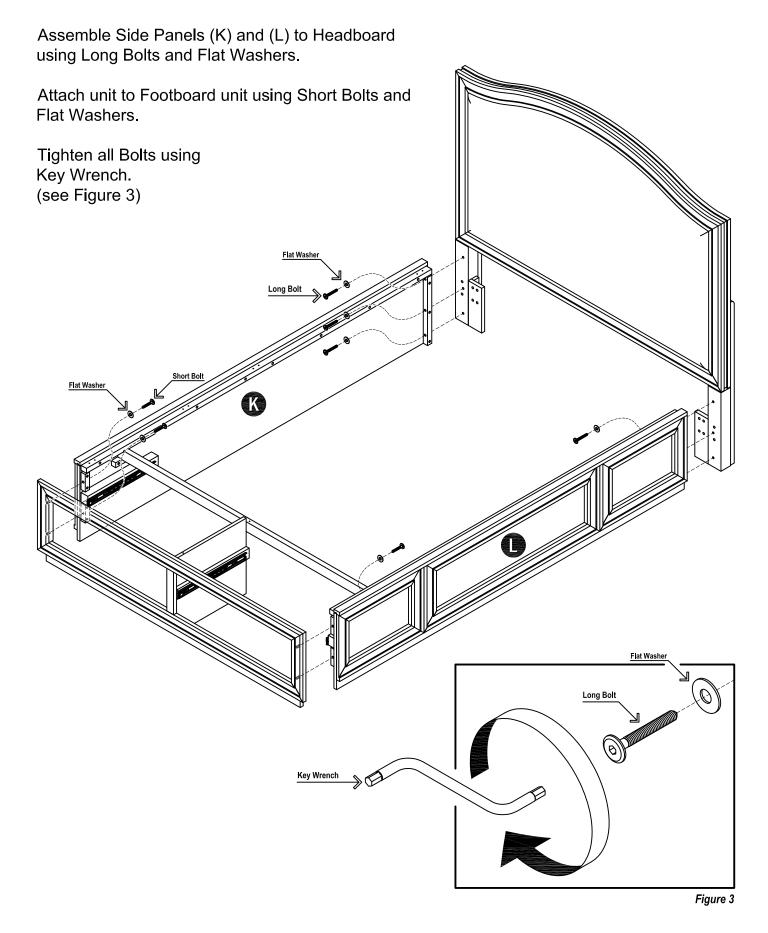


### Assembly Instructions 5/8

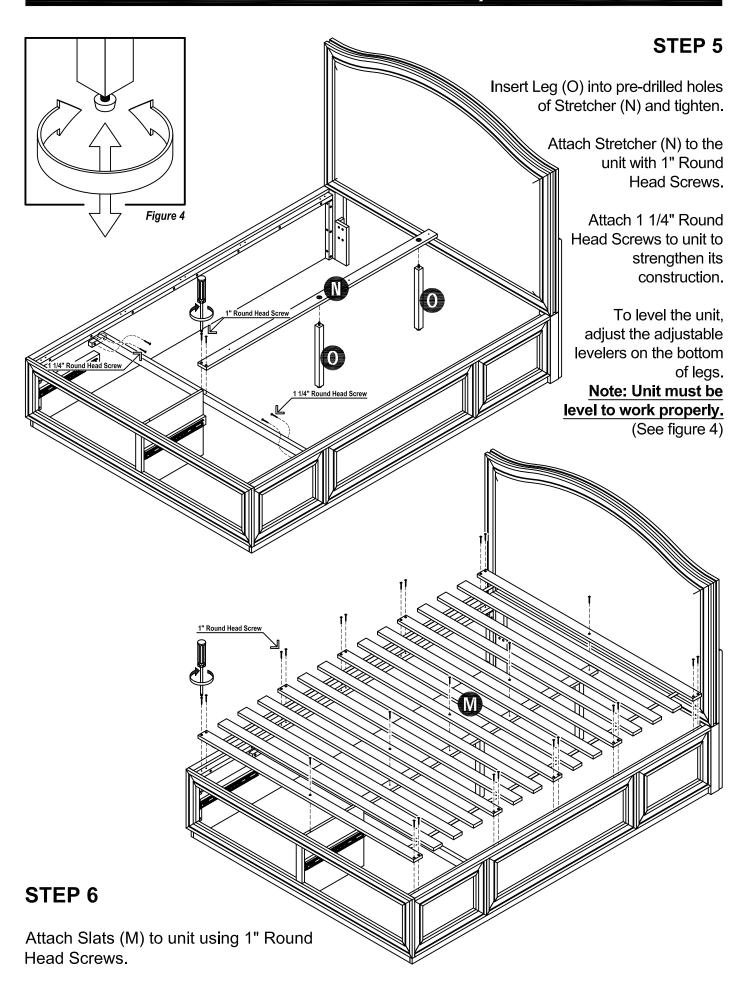

### Assembly Instructions 6/8

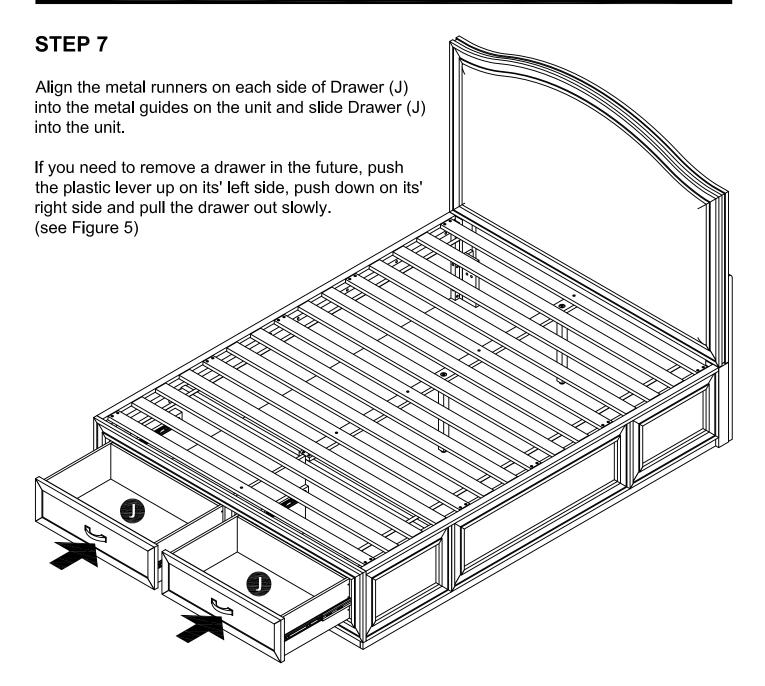

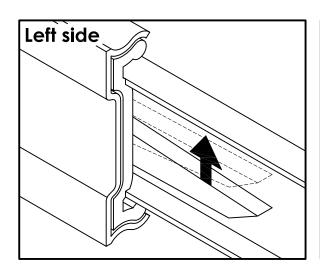


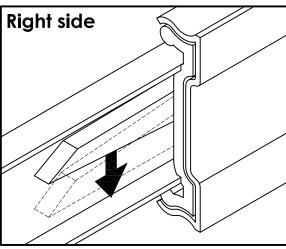


Figure 5


### Assembly Instructions 7/8


# Drawer (O)

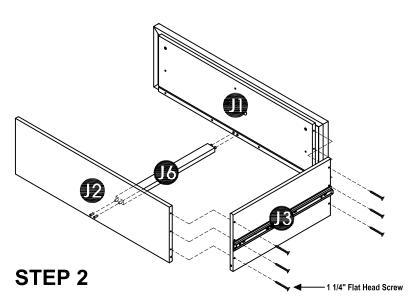

Insert Base Part (J5) into the groove.


Attach Side Part (J4) to unit using 1 1/4" Flat Head Screws.

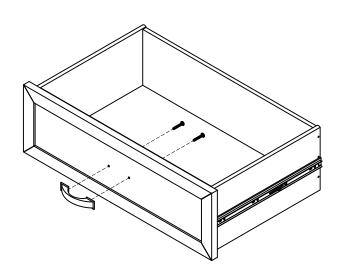

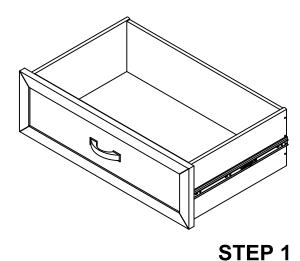


Attach Base Part (J6) to Front Part (J1) and Back Part (J2).

Attach Side Part (J3) to Front Part (J1) and Back Part (J2) using 1 1/4" Flat Head Screws.

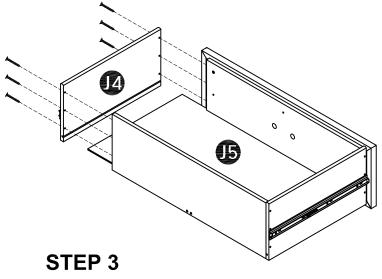


Attach Handle with Machine Screws.

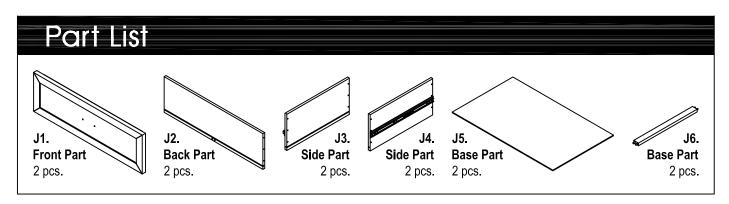



### Assembly Instructions 8/8

#### **IMPORTANT**

\* Please follow step 4 when you need to remove and insert the drawers in this adjustment step.

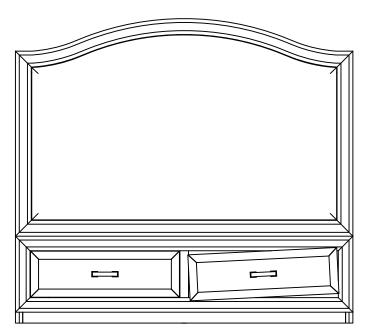


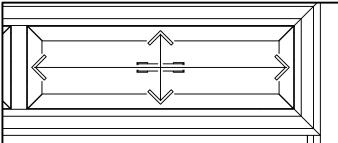

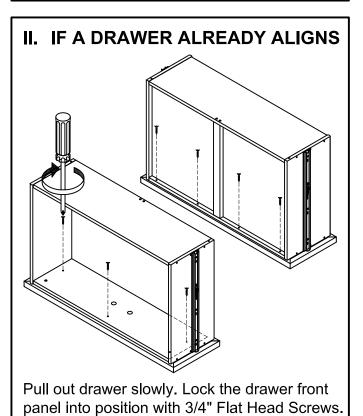


#### I. IF A DRAWER DOES NOT ALIGN

#### STEP 1

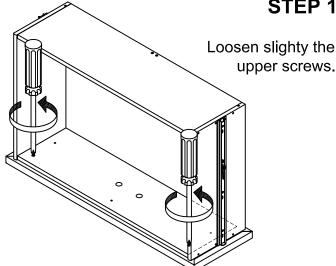

#### STEP 2

Insert the drawer into the main body, then adjust the drawer front panel left or right and up or down, until the drawer gaps look proportional.

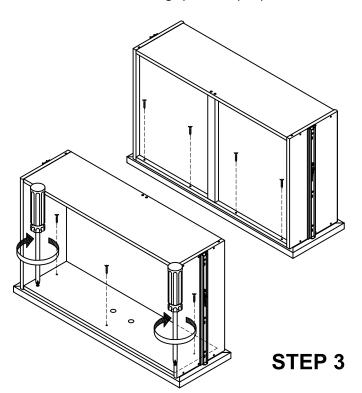

Pull the drawer open slowly and tighten the upper screws. Make sure the front panel does not move and lock the drawer front panel into position with 3/4" Flat Head Screws.

# **VERY IMPORTANT!!**

#### **CARE INSTRUCTIONS**

#### **NEVER-**

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

#### **NEVER-**

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE.
ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT WRITE DIRECTLY ON SURFACE.



PREVENT MARKING

DO NOT PLACE IN DIRECT SUNLIGHT.



PREVENT FADING

DO NOT USE COMMERCIAL WAXES AND POLISHES.



PREVENT YELLOWING

DO NOT PLACE HOT OBJECTS ON SURFACE.



PREVENT FINISH DAMAGE


DO NOT USE RUBBER ( BASED PLACE MATS



PREVENT DISCOLORING

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

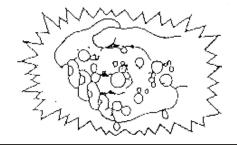

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer\_service

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319