DOREL ASIA

SWIVEL GLIDER

Model No: WM6095

UPC CODE:

0-65857-16300-1

NOTE:

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Lot number: (TAKEN FROM CARTON)

Date of purchase:


____/____/_____

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

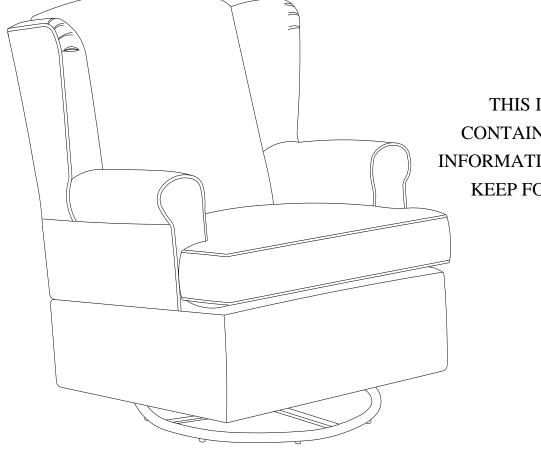

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

T CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413 12345 Albert-Hudon Boulevard, Suite 100 Montreal, Quebec Canada H1G 3L1 E-MAIL: das@dorel.com

NOTES

- * Ensure all parts and components are present before beginning assembly.
- * Assemble on a clean, smooth surface to prevent damage to product finish.
- * **DO NOT** use power tools.
- * CAUTION: Adult assembly required.
- * Assembly and handling will require two people.
- * Estimated assembly time: 8 minutes.

CARE AND CLEANING

Dust regularly with a soft, dry cloth to prevent soil build up. Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

MAINTENANCE


Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY


Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing or fading of the fabric is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

HARDWARE LIST

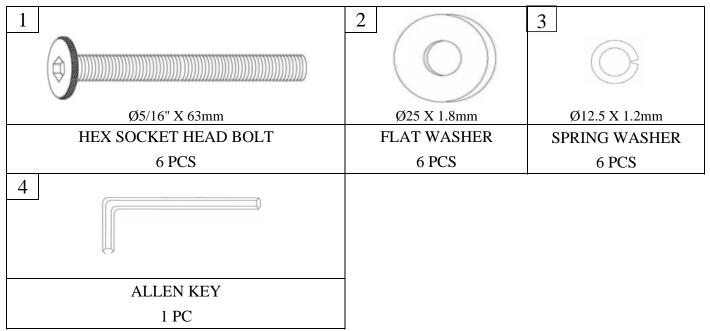


PARTS LIST

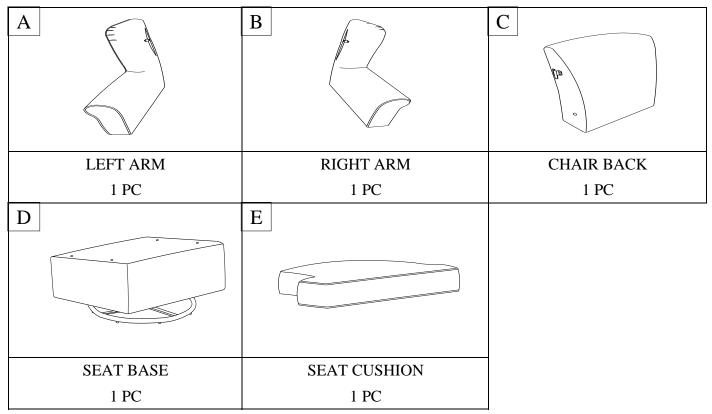

STEP 1:

Place all parts on a clean, smooth surface.

Attach left arm (A) to chair back (C) by inserting the metal bracket on left arm (A) into the metal glide on chair back (C). Push the left arm (A) with a downward force to secure it into place. Repeat this step to attach right arm (B) to chair back (C).

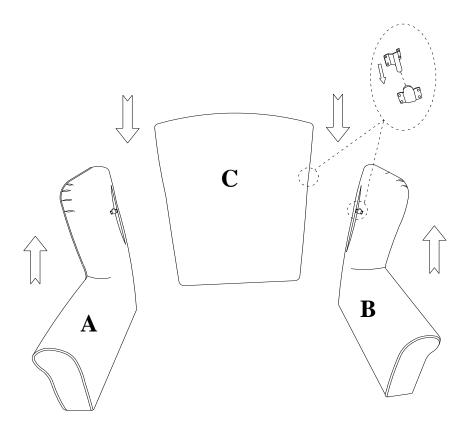


STEP 2:

Gently turn the assembled unit upside side down and open the fabric lining underneath chair back (C). Secure the chair back (C) to the left arm & the right arm (A & B) with flat washers (2), spring washers (3) and hex socket head bolts (1).

Use Allen Key (4) to tighten the bolts.

Place the fabric lining back into place.


Turn the assembled unit upright.

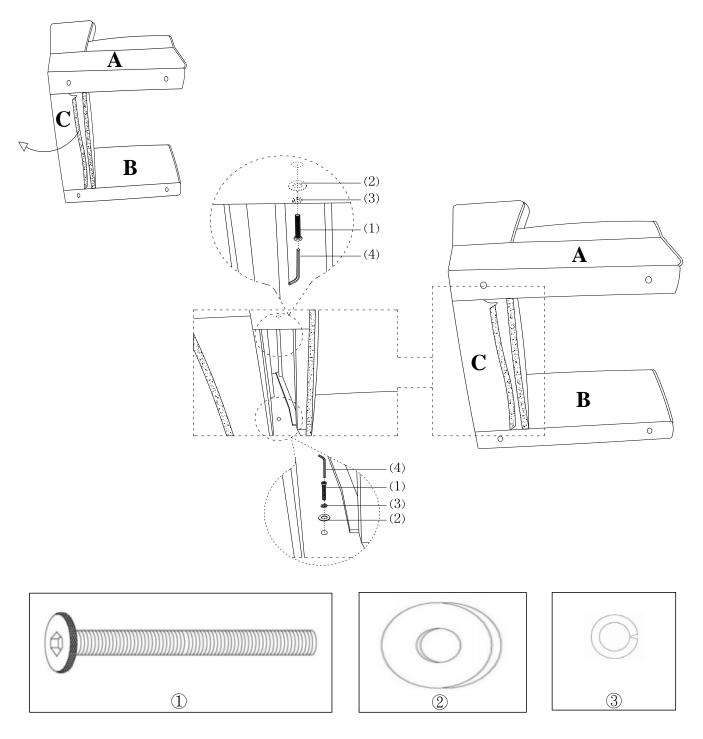

STEP 3:


Place the assembled unit onto the seat base (D). Open the fabric lining underneath seat base (D). Secure the assembled unit to the seat base (D) with flat washers (2), spring washers (3) and hex socket head bolts (1). Use Allen key (4) to tighten the bolts.

Place the fabric lining back into place.

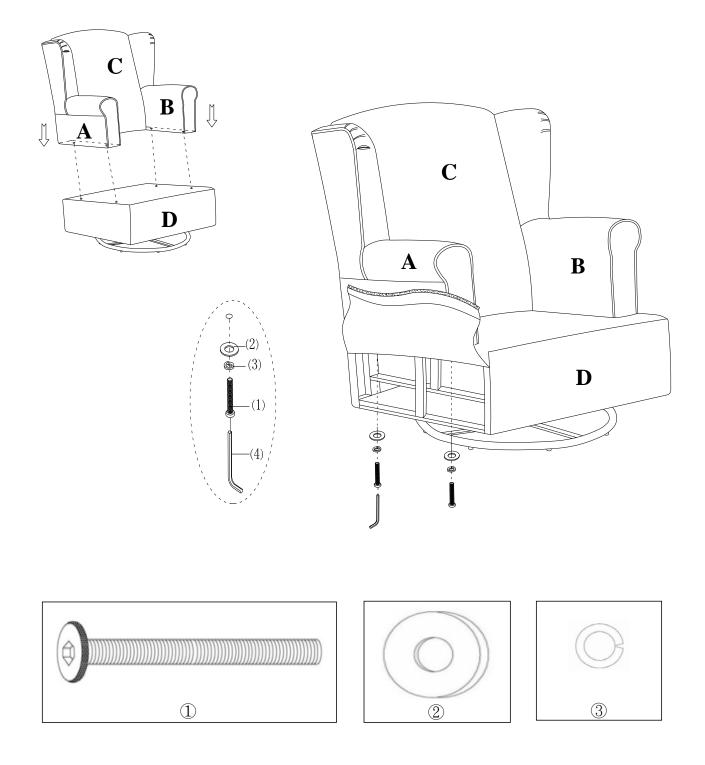


STEP 4:

Place the seat cushion (E) onto the chair.

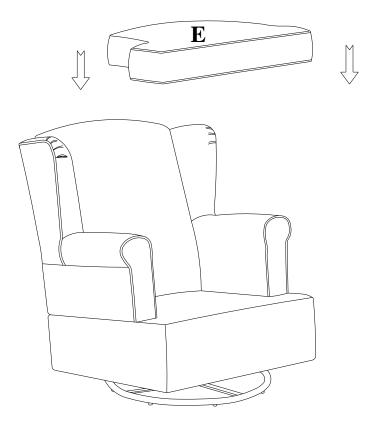


CAUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

Dust regularly with a soft, dry cloth to prevent soil build up. Wipe away spills immediately to prevent staining. Use a cloth dampened with water or a professional product to clean the fabric. Always test an inconspicuous area first. Allow upholstery to dry and brush lightly. Keep away from heat to avoid glazing, melting or scorching.

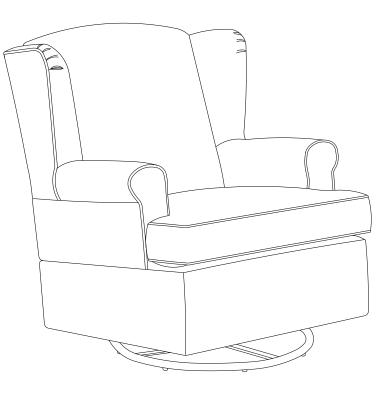

Congratulations! You've finished assembling your swivel glider.

 DO <u>NOT</u> **RETURN PRODUCT TO THE STORE.** If a part is missing or damaged, contact our customer service





Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

Customer Service Phone Number 1-800-295-1980		Email: das@dorel.com
Customer Service Fax Number 514-353-7819		
Request Date:		
Name:		
Shipping Address:		
Street & Number:		
City & State: Zip Code:		
Day Time Phone Number: (including area code)		
Date & Place of Purchase:		
	Part(s) description and quantity (Please be sure to	o list model number or SKN number):

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1