

850 SLAT PORCH SWING INSTRUCTIONS



Thank you for purchasing a quality porch swing from Hinkle Chair Company. The product you have purchased requires some assembly. This item has been carefully inspected before packing to ensure it's adherence to our strict Quality Control Standards. Proper assembly will ensure not only your safety, but many years of enjoyable use of this quality product. We STRONGLY suggest that you familiarize yourself with these instructions prior to assembling this product. It's up to you to follow carefully EACH STEP of the assembly process. For your safety, DO NOT SKIP any step indicated in these instructions. Use all the hardware provided as indicated. Be sure to tighten all fasteners securely. The manufacturer will not be responsible for any damage or injury that results from improper assembly of the swing. If you have any questions regarding the assembly of this swing, feel free to contact us using the Hinkle Chair Company Helpline (800) 251-3025



HINKLE CHAIR COMPANY
est. 1834

4669 Mt. Sharon Rd. P.O. Box 410 Springfield, TN. 37172
800-251-3025 615-384-8477 Fax 615-384-0055

www.hinklechaircompany.com

****Attention/Stop****



Please read before assembling this product!

Hinkle Chair Company has made every effort to provide you with a ready-to-assemble product that has the same quality as our fully assembled rocking chairs. In the unlikely event that there are incorrect or missing parts or that parts become damaged during shipping, following the instructions below will protect you (The Customer) from accepting responsibility for a product that is damaged or incomplete.

1st) Inspect all parts for any imperfection that might have occurred during shipping.

 
2nd) In the case of damaged parts, individual parts will be sent as replacements.

3rd) When you have determined that all parts are available and undamaged, proceed with steps 1 through 4.

This product is intended for a covered porch or indoors. This product should be cleaned weekly as you would with any other wooden furniture product.

If at any time during these steps, assistance is needed, please contact The Hinkle Chair Company Customer Service (800) 251-3025

850 SWING ASSEMBLY INSTRUCTIONS

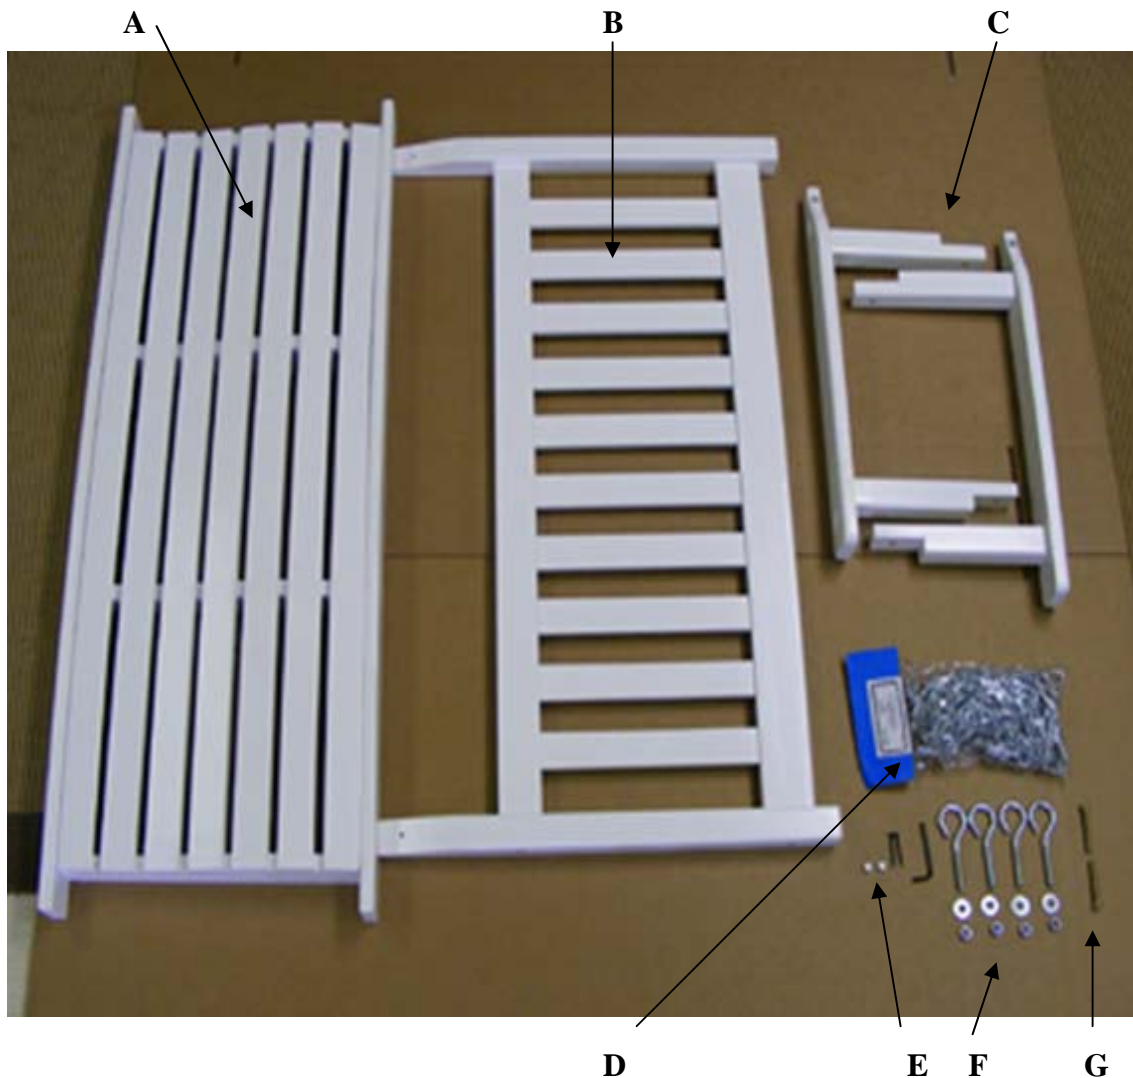

Parts Included:

- 1 - Swing Seat (A) *marked front and back
- 1 - Swing Back (B) *marked front and back
- 2 - Swing Arms (C) *marked left and right
- 1 - Chain Assembly (D)
- 2 - Back Screws w/Buttons (E)
- 4 - Eye Bolts, Washers, and Nuts (F)
- 2 - Arm Bolts (G) w/wrench

Tools Required For Assembly (not included)

- Small Hammer
- Screwdriver
- Crescent Wrench or 1/2" Wrench

STEP 1:

Lay Swing on the shipping box during assembly to protect it from scratching. Attach swing arm (C) to swing seat (A) using eyebolts. (F). Place the bolt through, place washer on the inside and then the nut. Hand tighten Fig. 1. Complete this for both front and back. Then repeat for other side.

FIG. 1



Note : **BACK**

FRONT

STEP 2:

Place Swing Back (B) in between the Arms (C) at back of swing. Place Arm Bolts in pre-drilled hole and align with Swing Back (B). Hand tighten nut and repeat for other side. Fig. 2.


FIG. 2



STEP 3:

Push Swing Back (B) so that it makes contact with the back of Swing Seat (A). Place Back Screw (E) into pre-drilled hole in Swing Back (B). Thread screw all the way in until tight. Fig. 3. Complete this for the other side.

 
FIG. 3

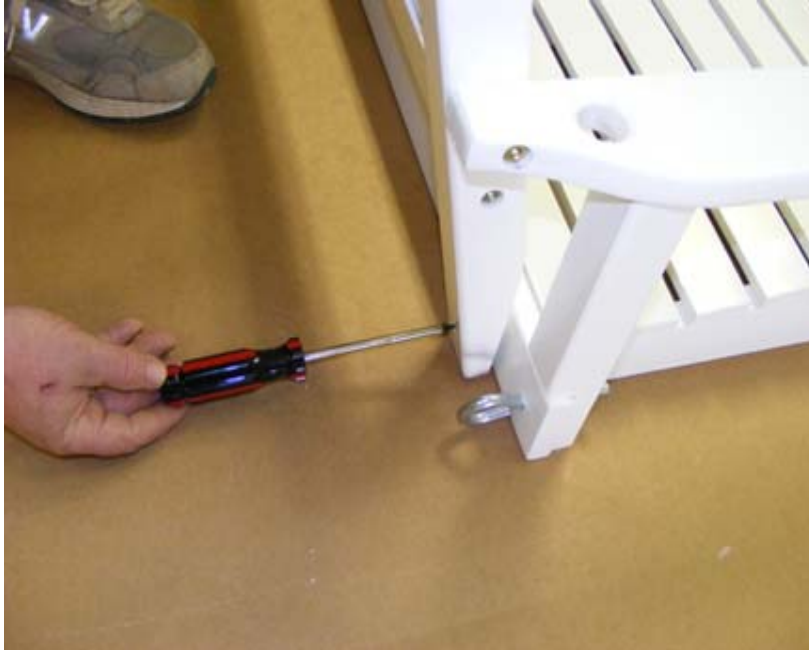

STEP 4:

Place Button (E) into hole after the Back Screw is installed and tap in with hammer. Assembly is now complete. Go back through all steps and fully tighten all hardware.

 FIG. 4

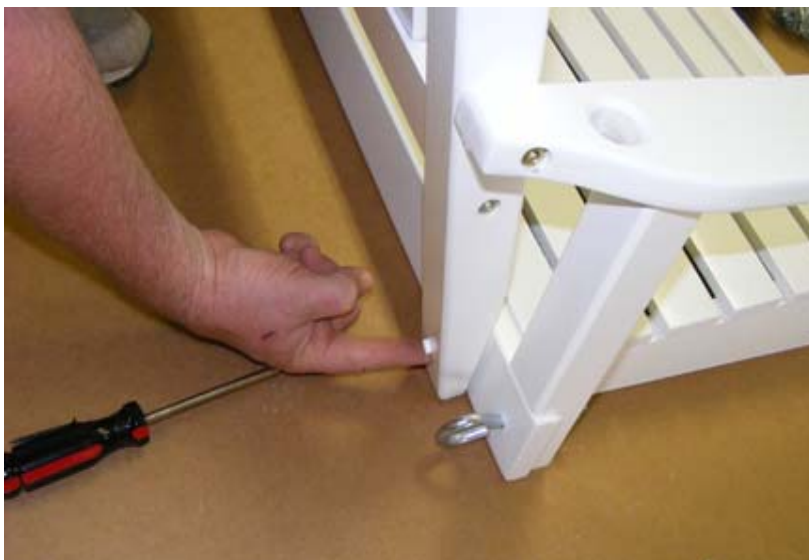

STEP 5:

Place Swing Chain (D) through holes in Swing Arms (C) and attach to Eye Bolts (F). Fig. 5. Complete this for both sides. .


FIG. 5



STEP 6:


When installing the provided ceiling hooks it is very important that the pilot hole drilled for the ceiling bolts is no larger than 5/32". Also, the wood must be solid and sturdy enough to handle the load being placed on it.

 CAUTION: Not screwing the ceiling bolt all the way into the material can cause hardware failure and possible injury. Fig. 6 Ensure the ceiling hook is correctly threaded all the way in the material. Fig. 7

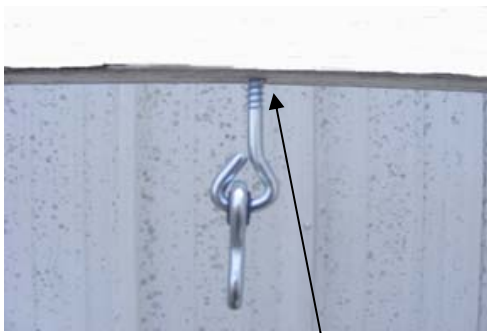

WRONG EXPOSED THREADS

 FIG.6

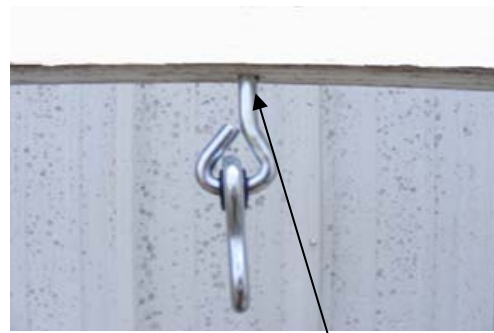

CORRECT NO EXPOSED THREADS

FIG.7

Thank you for your purchase. This solid hardwood furniture has been provided by the Hinkle Chair Company and we certainly appreciate your business. Our products are designed for lasting quality which can be enjoyed for generations, making your purchase a family heirloom.

Care Instructions:

To preserve our standard finish on stained or painted furniture, it is highly recommended that your Hinkle Chair Company products be placed either indoors or in a protected environment such as a covered porch. The product needs to be protected from rain and exceeding amounts of direct sunlight. Please note that if this product is used in an unprotected environment or exposed to excessive elements your warranty will be affected.

Our products need the same attention as any other solid wood furniture. A monthly cleaning with any quality household furniture polish will keep your furniture looking new for many years to come. Should you have issues with the finish such as weathering, general wear, mold or mildew, etc. or to just refresh the look of your product, please see the following general recommendations for application of an additional top coat.

To remove mold and mildew - dilute one part bleach in four parts water and apply with a soft cloth. If necessary, repeat the process after the product is dry. Replacing the topcoat after this procedure should reduce the probability of mold or mildew returning for some time.

Touch up any blemishes or imperfections that may have occurred.

Lightly scuff sand the entire product by hand with 220 grit sand paper. This process will scratch the surface allowing the new top coat to hold. Use a tack cloth to remove any dust left from sanding, and then wipe down with a good solvent cleaner, such as denatured alcohol.

Apply a coat of Acrylic Crystal Clear or Polyurethane (Warning: Do not use polyurethane on white furniture as it will turn it yellow). Please refer to the manufacturer's recommendation for application and drying times. Apply a second coat for added protection.

This process can be used on painted or stained items, although a coat of paint may be preferred on painted products that need to be refreshed.

All products come with a limited warranty and some products have weight restrictions. For more detailed information concerning refinishing, warranties and weight restrictions, or if you have any questions or concerns about your products, please contact Customer Service at 1-800-251-3025 or go to our web site at www.hinklechair.com Adult furniture not recommended for child use.