

103630(B1&B2)

ROUND DINING TABLE

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



www.coastercompany.com

REVISION 0: 06/22/2012

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the Store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

A		TABLE TOP	1PC
В		TABLE BASE	1PC
C		LEG	4PCS
D		TOP STRETCHER	1PC
E		BOTTOM STRETCHER	1PC
\mathbf{F}		FOOT	4PCS
HARDWARE IDENTIFICATION			
1		LONG BOLT	4PCS
2		MEDIUM BOLT	8PCS
3		SHORT BOLT	4PCS
4	0	LOCK WASHER	16PCS
5	0	FLAT WASHER	16PCS
6	√unnum	LONG SCREW	4PCS
7	-annin	SHORT SCREW	1PC
8		ALLEN WRENCH	1PC




ITEM: 103630(B1&B2)

ASSEMBLY INSTRUCTIONS

STEP 1


Place table top upside down on soft surface. Align and fasten table leg to table top using short bolt, lock washer and flat washer, then tighten with Allen wrench.

DO NOT FULLY TIGHTEN THE BOLT.

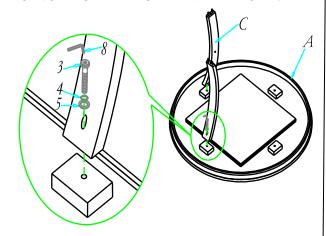


STEP 2


- 2.1 Align and fasten the other two table legs to table top using short bolt, lock washer and flat washer and partially tighten with Allen wrench.
- 2.2 Align and fasten upper and lower stretcher together using short screw and stretchers to table leg using long screw then tighten all screws using screw driver (not included).

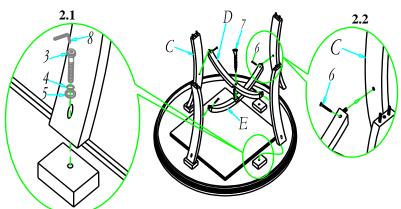

FULLY TIGHTEN ALL BOLTS FROM STEP 1 & 2

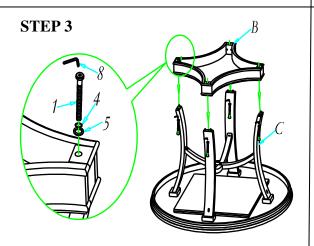

Align and fasten table base to table leg using long bolt, lock washer and flat washer, then tighten with Allen wrench.

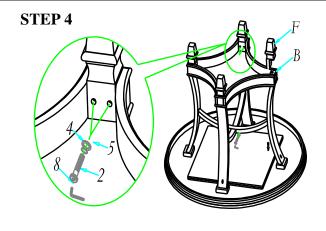

Align and fasten foot to table base using medium bolt, lock washer and flat washer, and tighten with Allen wrench

STEP 5:

Flip table over using two people to lift and flip this table.

