

600186

ROCKER CHAIR

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



www.coastercompany.com

PAGE 1 OF 4

REVISION 0: 09/23/2011 REVISION 1: 02/23/2012

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



Warning!


- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION							
A		CHAIR BACK	1PC	D		WOOD SEAT	1PC
B1		LEFT ARM REST	1PC	E	\$	LONG STRETCHER	1PC
B2		RIGHT ARM REST	1PC	F		SHORT STRETCHER	1PC
C1		LEFT LEG	1PC				
C2		RIGHT LEG	1PC				
HARDWARE IDENTIFICATION							
1		LONG BOLT	6PCS	6	0	SMALL FLAT WASHER	15PCS
2		MEDIUM BOLT	2PCS	7		ALLEN WRENCH	1PC
3	Oliman	SHORT BOLT	9PCS	8		BARREL NUT	6PCS
4		LOCK WASHER	17PCS	9		WOOD PLUG	9PCS
5	\bigcirc	BIG FLAT WASHER	2PCS				




STEP 1

Align and fasten short and long stretchers to left and right leg frame using long bolt, lock washer and flat washer, tighten with Allen wrench. Insert wood plug into leg frame stretcher.

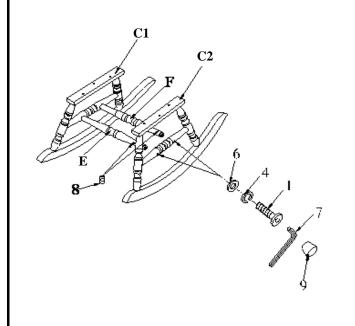


STEP 2

Place wood seat upside down on soft surface, align and hand tighten left and right leg frame to wood seat using short bolt, lock washer and flat washer, tighten all bolt with Allen wrench.

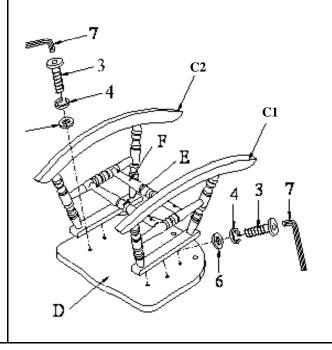


STEP 3

Align and fasten chair back to wood seat using short bolt, lock washer and flat washer then tighten with Allen wrench. Insert wood plug into the chair back brace.

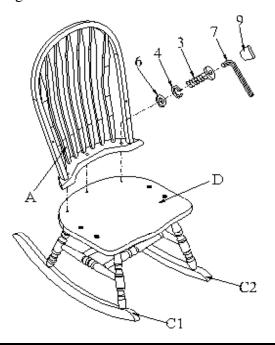

STEP 4

Align and fasten left and right arm rest to chair back using medium bolt, lock washer and small flat washer and tighten with Allen wrench.

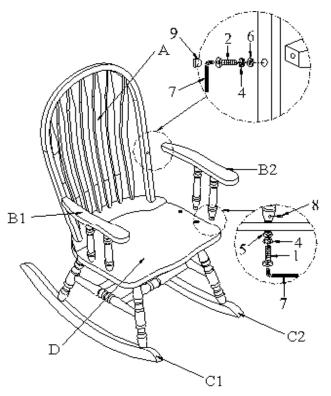

STEP 5 Complete.

