

# COASTER®

FINE FURNITURE

# 102092

SIDE CHAIR WITH PU SEAT

---

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



[www.coastercompany.com](http://www.coastercompany.com)

**ASSEMBLY TIPS:**

 
 


1. Remove hardware from box and sort by size
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.










**Warning!**

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment

 **PARTS IDENTIFICATION**

<b>A</b>		CHAIR BACK	2PCS
<b>B</b>		SEAT FRAME	2PCS
<b>C</b>		CUSHION SEAT	2PCS
<b>D</b>		FRONT LEG	4PCS


**HARDWARE IDENTIFICATION**

<b>1</b>		ALLEN WRENCH	1PC
<b>2</b>		SHORT BOLT	6PCS
<b>3</b>		MEDIUM BOLT	8PCS
<b>4</b>		LONG BOLT	8PCS
<b>5</b>		LOCK WASHER	22PCS
<b>6</b>		FLAT WASHER	22PCS
<b>7</b>		SCREW	8PCS

**NOTE : QUANTITIES SHOWN ARE FOR TWO CHAIRS**


**STEP 1**

Align and fasten front legs to seat frame using medium bolt, lock washer and flat washer and tighten with Allen wrench.

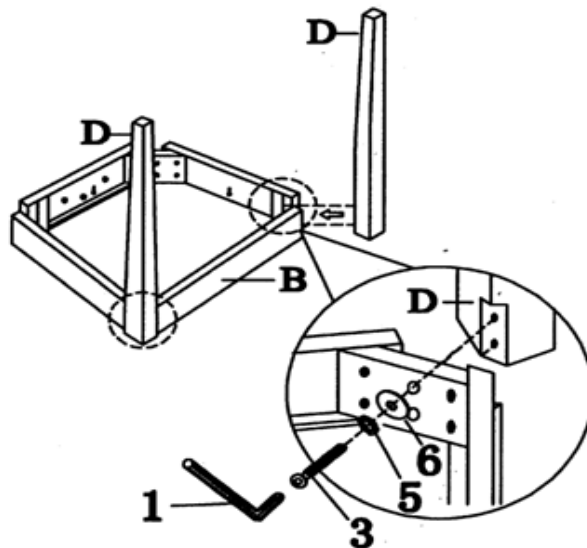


**STEP 2**

Align and hand tighten seat frame to chair back bottom rail using short bolt, lock washer and flat washer then hand tighten seat frame to chair back leg using long bolt, lock washer and flat washer. Tighten all bolts with Allen wrench.

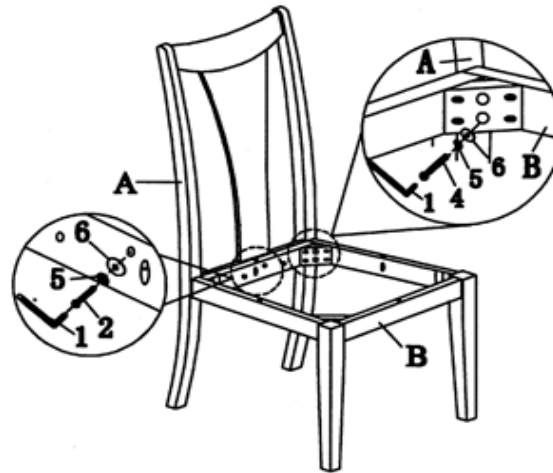

**STEP 3**

Align and fasten cushion seat to seat frame using screw and tighten with screw driver (not provided).

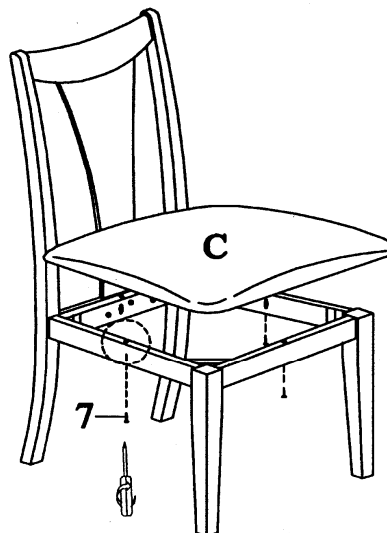

**STEP 4**

Complete

