

# *Elite* SCREENS

Fixed Frame Screen

*Elite SilverFrame Series*


User's Guide




HIGH GAIN WHITE, MATTE WHITE & HIGH CONTRAST GRAY



# ASSEMBLING THE FRAME

1. Insert both corner joint connectors into the long (horizontal) frame (see fig.1)

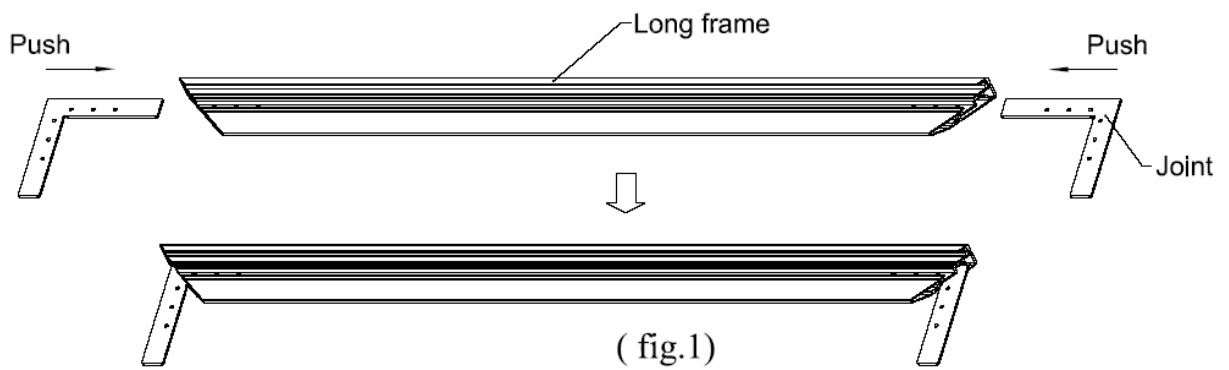


2. Join all four frame parts together following the steps showed below. (fig.2)

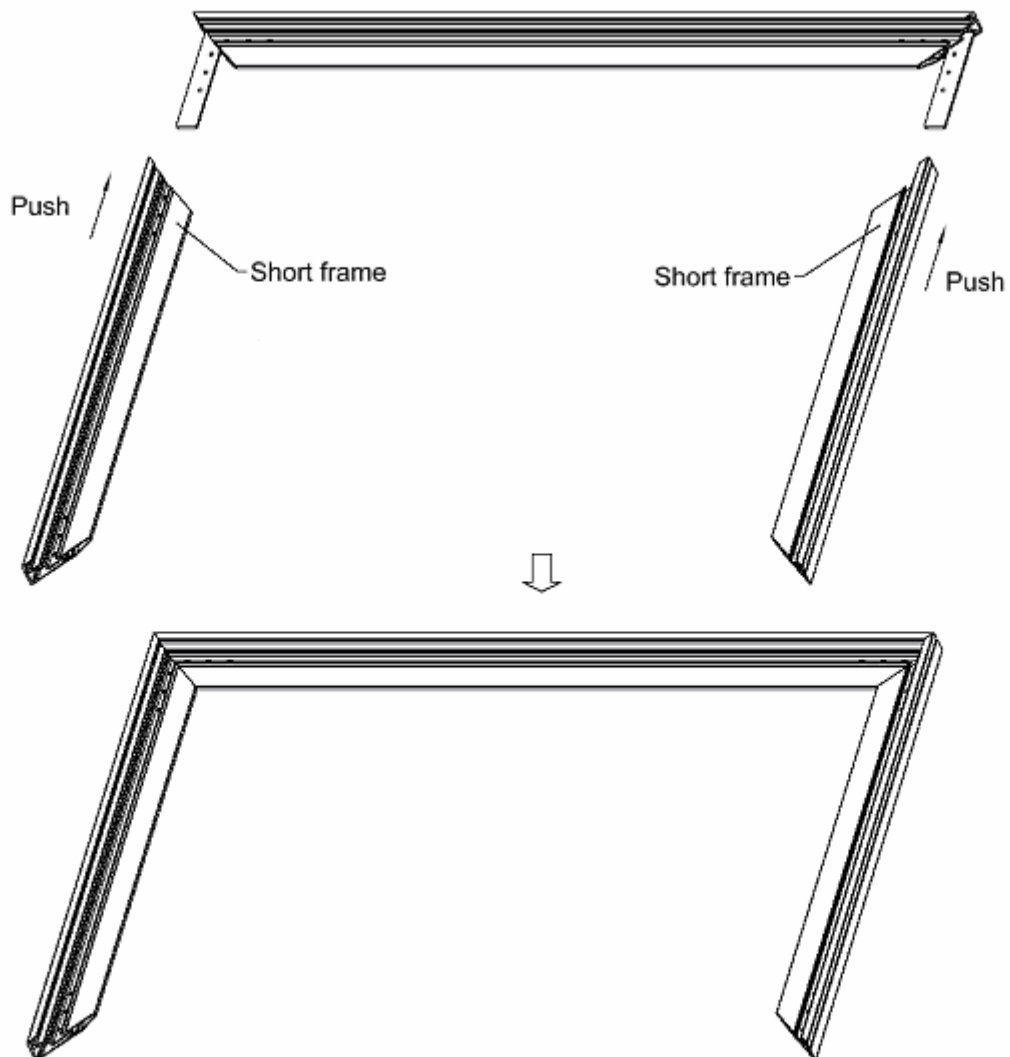

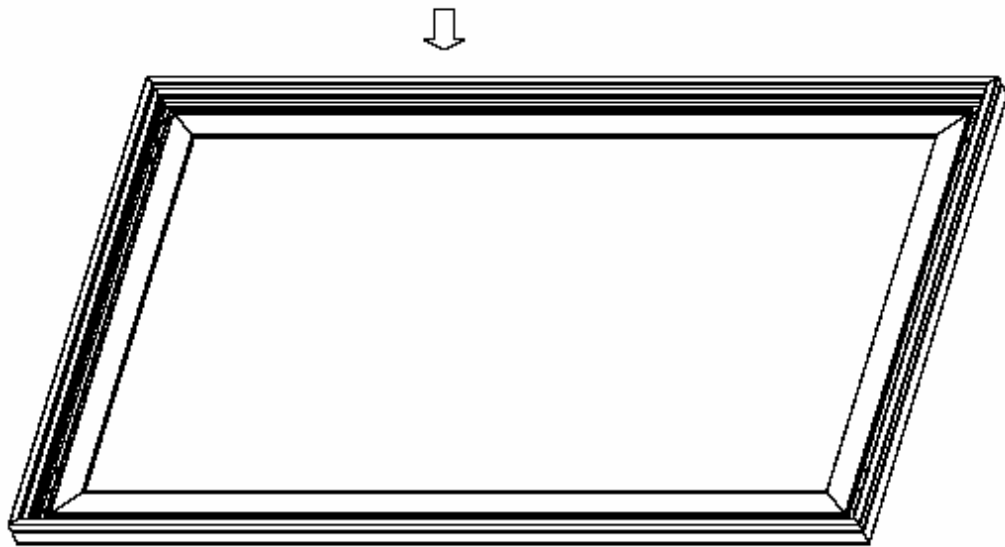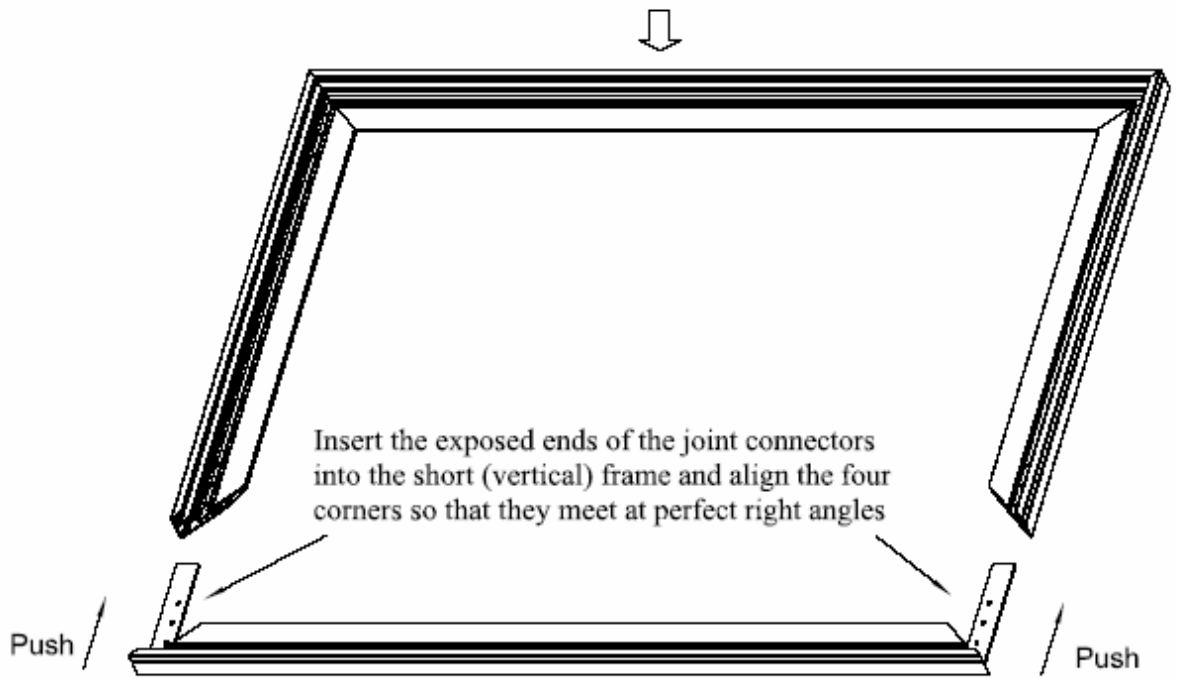

( fig.2)


3. After making sure that all four corners join at right angles to form a perfect rectangle, fasten the four angles together by using the (x24) joint screws included. (see fig.3)

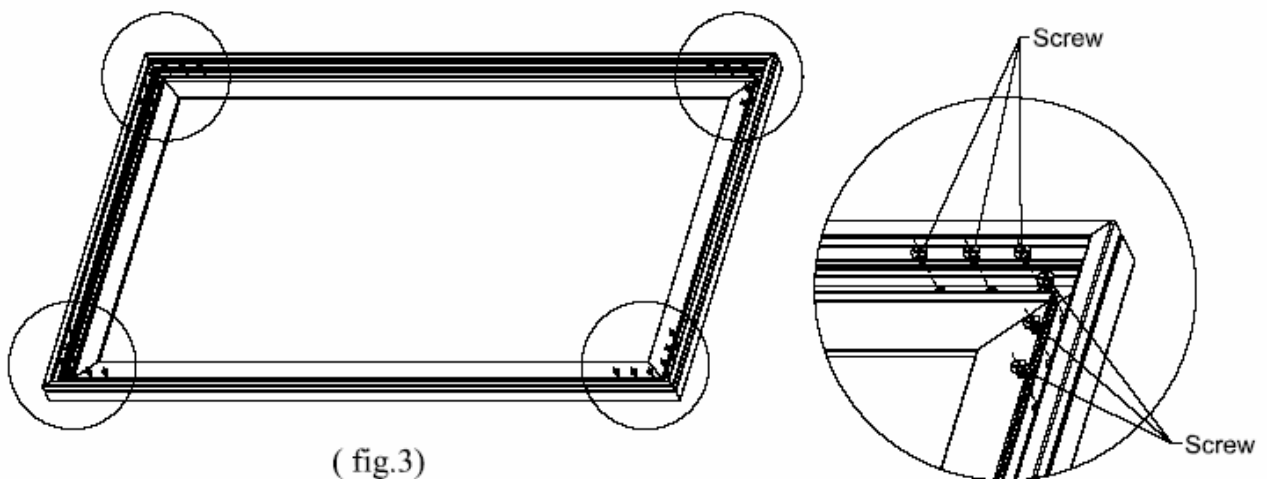

( fig.3)


# INSTALLING THE SCREEN MATERIAL

4. Lay out the screen and tension rods on a clean and dry surface. Pass the screen's tension rods through the sleeves according to their corresponding lengths on each edge of the screen as seen below. (see fig.4)

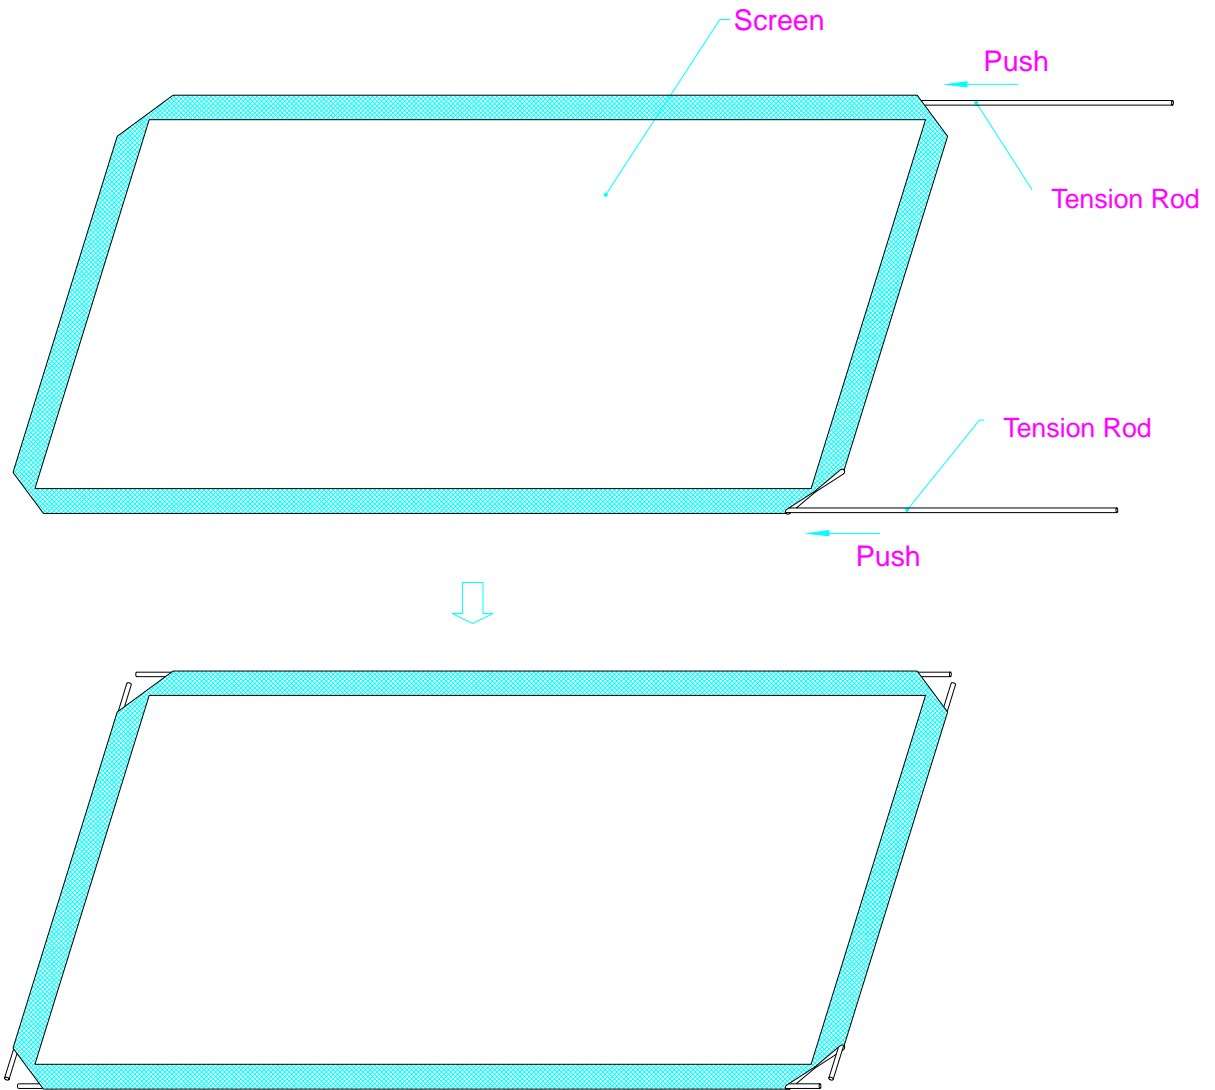


( fig.4)

5. Slip the screen tension rods into the grooves running along each side on the back of the frame. Clip on the fix plates to the back of the frame to secure the rods into place creating tension for a tight and flat surface(see fig5 & fig6)

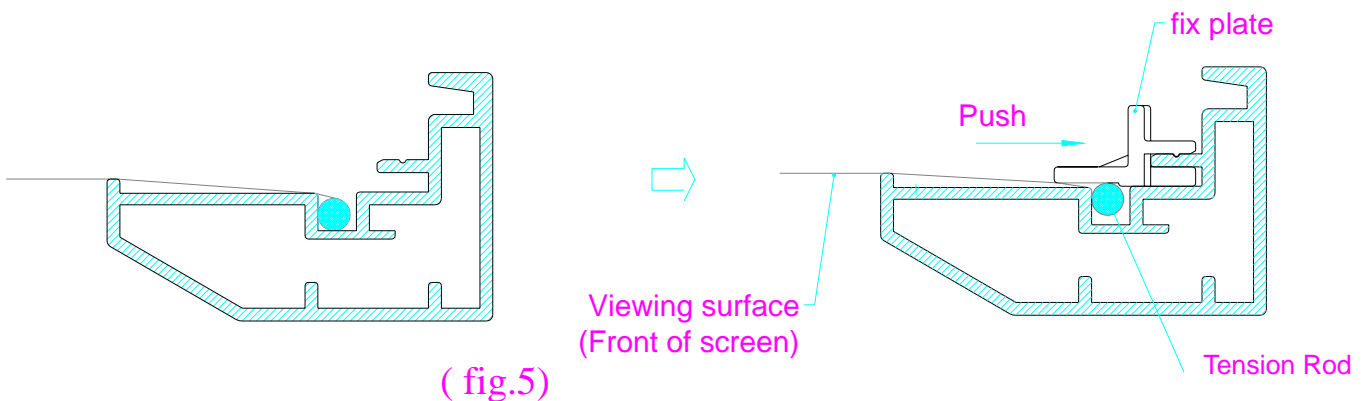

( fig.5)

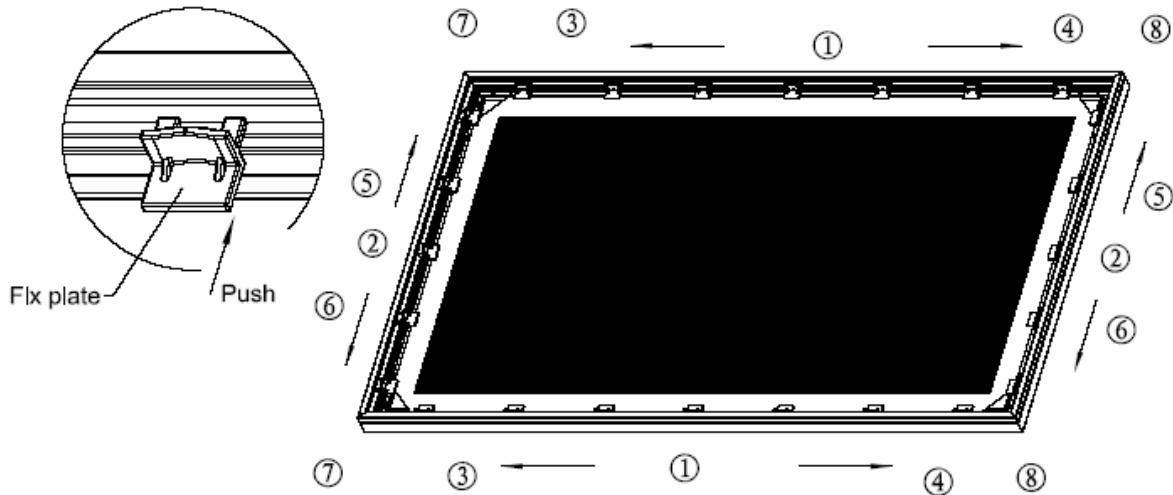


( fig.6)

### Attaching Fix Plates


Make sure that the material and frame are both laying face down on a clean, dry and non-abrasive surface. Center the material inside the frame. It will be noticeably smaller because stretching the material is required to create a sufficient amount of tension for perfect material flatness. Start in the center of the long horizontal edge and then alternate with the short sides as shown in the diagram (fig.6). Numbers 1-8 indicate the recommended order that you should attach your fix plates per section for an even tension distribution.

### FINAL ASSEMBLY AND INSTALLATION


Insert the Center Support Bar into the groove on the back of the frame with the bottom end near the approximate center of the frame. Place it in at an angle so that both ends of the bar are in alignment with the groove. Slide the top end of the bar into place forming right angles to the top and bottom of the frame. This will provide added stability to your frame and added tension to the material.

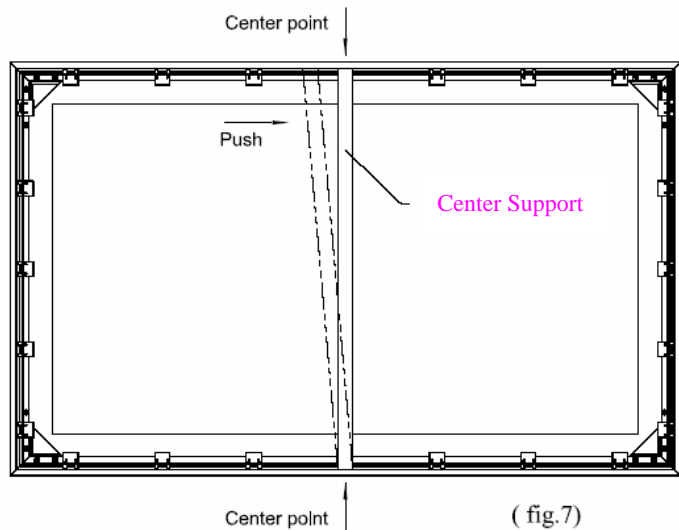

( fig.7)

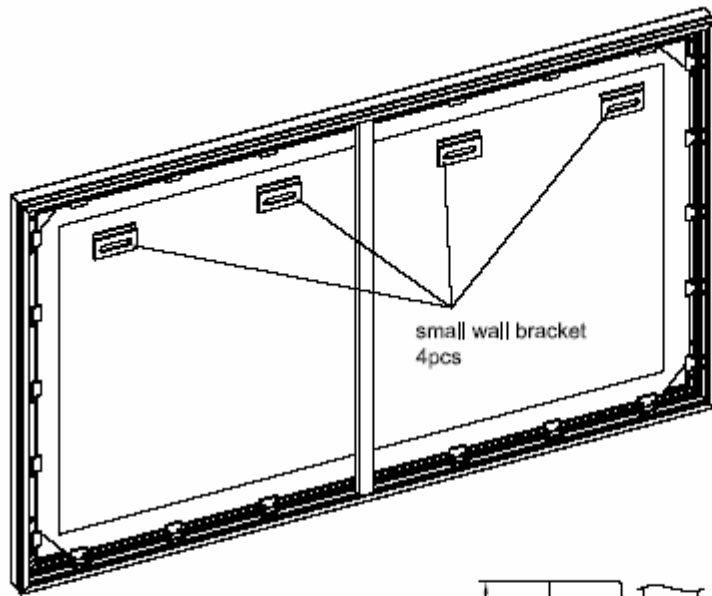

Position the screen with the attached surface onto the wall bracket as shown in (fig.8).

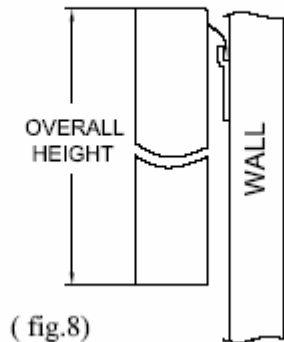

Use a stud finder to locate the wall studs nearest the center of your desired screen location. Mount the sliding wall brackets firmly into the wood using the wood screws from the installation kit included with the SilverFrame Screen. Hang the screen onto the wall as illustrated in (fig. 8). The frame will slide on the wall brackets so that it can be perfectly centered.

## CAUTION

Please follow these instructions carefully to ensure proper maintenance and safety with your EZ-Frame Screen

### Components List

1. Frame Part	4 pcs. (2 long + 2 short)
2. Tension Rod	4 pcs. (2 long rods + 2 short rods)
3. Screen	1 pc.
4. Joint	4 pcs.
5. Fix Plate	30~50 pcs.
6. Wall bracket	4 pcs.
7. Screw	24 pcs.
8. Center Support	1 pc.
9. Manual	1 pc.

1. When hanging the screen up, please make sure that no other objects such as power switches, outlets, furniture, ladders, windows, etc. occupy the space designated for your Fixed-Frame screen.
2. Regardless if the screen is hung on or installed into the wall, make sure that the proper mounting anchors are used and that the weight is supported appropriately by a strong and structurally sound surface just as any large and heavy picture frame should. (Please consult a home improvements specialist for the best advice on installation)
3. Frame parts are made of high quality velour-surfaced aluminum and should be handled with care.
4. When not in use, cover over the screen with a furniture sheet to protect it from dirt, grime, paint or any other impurities.
5. When cleaning, use a damp soft cloth with warm water to remove any marks on the frame or screen surface.
6. Never attempt to use any solutions, chemicals or abrasive cleaners on the screen surface.
7. In order to avoid damaging the screen, avoid touching it directly with your fingers, tools or any other sharp or abrasive objects.
8. Spare Parts should be placed out of reach for small children's in accordance with household safety guidelines.

## **WARNING**

The projection screen frame is made of high-quality aluminum alloy and should be handled with care.

Use a soft cloth with warm water to remove any spots on the screen surface.

To avoid damaging the screen material, never attempt to use any solutions, chemicals or abrasive cleaners on the screen itself and never attempt to touch screen with your fingers or sharps/abrasive objects.

### **Warranty Policy - Manual, Tripod, Floor Pull-up, and Fixed Frame Screens**

*\*Valid in the United States of America. All international claims must go through their international distributor.*

- Two (2) year warranty on parts and labor from purchase date as follows (except for refurbished units as specified below):
- Refurbished units carry a 90-day parts and labor warranty.
- Demo units or open box items are "AS IS" items and do not carry a warranty.
- Each party will be responsible for one way shipping during the warranty return/exchange.
- DOA (Defective on Arrival): Must be reported within 7 business days of receipt. An RMA (Return Merchandise Authorization) number must be issued in order to process a replacement. Elite Screens will replace the DOA (Defective on Arrival) unit with a brand new replacement \*(see exceptions below) after the DOA unit is received and/or confirmed defective. Once the product is received, Elite Screens will send out a new \*unit to the customer by ground service (subject to inventory availability). Should a problem be reported after the 7-day grace period, the item must be shipped to us for warranty repair.
- Missing Parts must be reported within the 7-day (DOA) grace period. If reported after 7 days, customer will be only be responsible for shipping and handling fees up to 30 days. If reported after 30 days of receipt, customer is responsible for cost of the parts and shipping & handling fees.

***Please visit the link below for full warranty information***

<http://www.elitescreens.com>

# **REGISTER YOUR ELITE PRODUCT**

## TWO WAY TO REGISTER YOUR WARRANTY WITH ELITE SCREENS INC.

A. On Line (Faster and Easier) [www.elitescreens.com/register.html](http://www.elitescreens.com/register.html)

B. Fill out & Fax to (562) 483-8498, Attn: Customer Service Dept.

\*Your Name: \_\_\_\_\_

Address: \_\_\_\_\_

City/State/Zip \_\_\_\_\_

\*Email Address: \_\_\_\_\_

\*Phone: \_\_\_\_\_

\*Screen Model: \_\_\_\_\_

\*Serial Number: \_\_\_\_\_

\*Date of Purchase: \_\_\_\_\_

\*Dealer / Reseller Purchased from (name of the reseller): \_\_\_\_\_

What is your Projector Model: \_\_\_\_\_

Application:  Home  Education  Corporation  Government  
 Others

How would you rate this screen?  Excellent  Good  Ok  Improvement needed

Comments:

---

---

---

---

Contact info:

If you have pictures of your screen you'd like to share with us, please email your pictures to [eliteinfo@elitescreens.com](mailto:eliteinfo@elitescreens.com) or call us at 877-511-1211 EXT 203 or EXT 233

*Elite*SCREENS

[www.elitescreens.com](http://www.elitescreens.com)

For any technical inquiries,

[techsupport@elitescreens.com](mailto:techsupport@elitescreens.com)