

ITEM NO.: LS-3414

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and place all lamp parts on a flat surface.
2. Screw the handle (B) onto the shade (A) until snug.
3. Place the piano arm on the right angle and secure with screw until snug as shown in Fig:1.
4. Enjoy your new lamp.

Use Type-J (T) MAX 120V/ 100W (bulb included).

WARNING — TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK EXPOSURE TO EXCESSIVE UV RADIATION, OR INJURY TO PERSON.

1. Turn off/unplug and allow to cool before replacing bulb.
2. Bulb gets HOT quickly! Only contact switch/plug when turning on.
3. Do not touch hot lens, guard, or enclosure.
4. Do not remain in light if skin feels warm.
5. Do not look directly at lighted lamp.
6. Keep lamp away from materials that may burn.
7. Use only with a Type-T 100W or smaller bulb.
8. Do not touch the bulb at any time. Use a soft cloth. Oil from skin may damage bulb.
9. Do not operate the portable luminaire with a missing or damaged guard, lamp containment barrier, or UV filter.

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as safety a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

SUPPLIED WITH UV PROTECTIVE GLASS SHIELD

This unit is comes with a protective glass shield which provides ultraviolet radiation protection. User is cautioned to replace these protective shields after either installation or replacement of tungsten halogen bulb.

※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.

※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

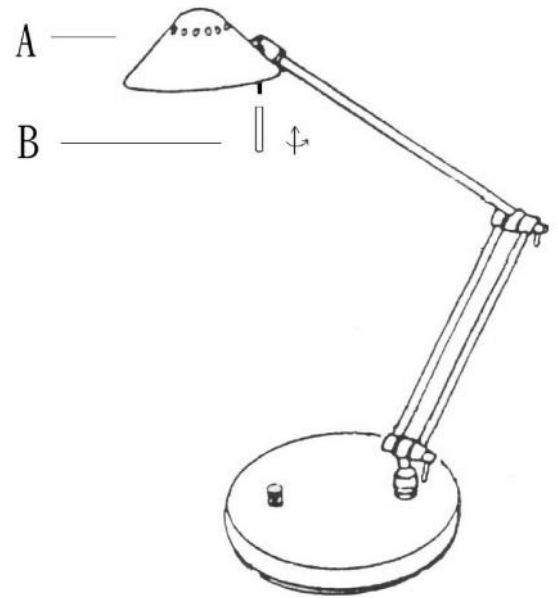


Fig:1

