


ASSEMBLY INSTRUCTIONS:

ITEM NO.: BO-2029

1. Carefully unpack and lay out the parts as shown in illustration.
2. Unscrew nut (B) out of pole (F), remove washer (C), put base (D), washer (C) onto pole (F) in turn, make sure the cord behind the base as the drawing, then tighten it by nut (B) with tool (A).
3. Screw connector (G) onto pole (F) and gently pull the cord (E), loosen nut (H) a little, adjust pole (I) to a suitable height and tighten nut (H).
4. Unscrew nut (K) out of the socket, put shade (J) onto the socket and tighten it by nut (K), adjust the shade location and remove the plastic cover out of shade (J).

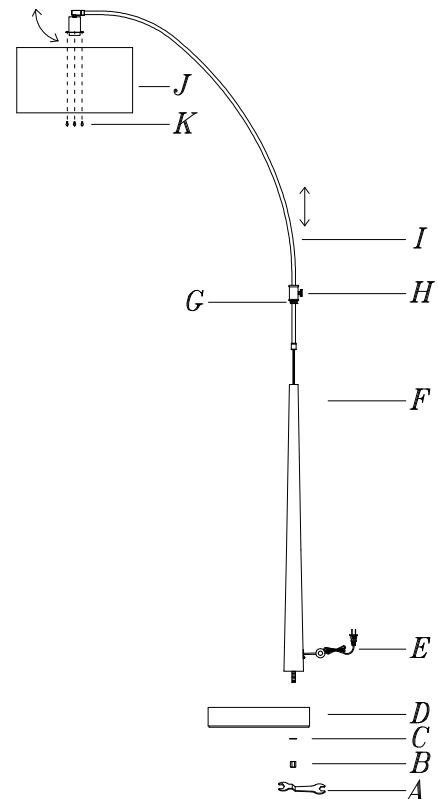

Your lamp now is ready to enjoy

Use 150 Wattage (Maximum) type A bulb (bulb not included)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

326114B