


BONNET FLOOR LAMP

MODEL # 3188



PLEASE READ AND SAVE THESE INSTRUCTION:

1. REMOVE ALL PARTS AND LAY ON A FLAT SURFACE.
2. SCREW POLE (B) CLOCKWISE INTO BASE (A) TO TIGHTEN.
3. SCREW POLE (C) CLOCKWISE INTO POLE (B) TO TIGHTEN.
4. SCREW POLE (D) CLOCKWISE INTO BASE (C) TO TIGHTEN.
5. SET SHADE (F) ON SOCKET (E) AND TIGHTEN CLOCKWISE WITH SOCKET RING (G) TO SECURE SHADE.

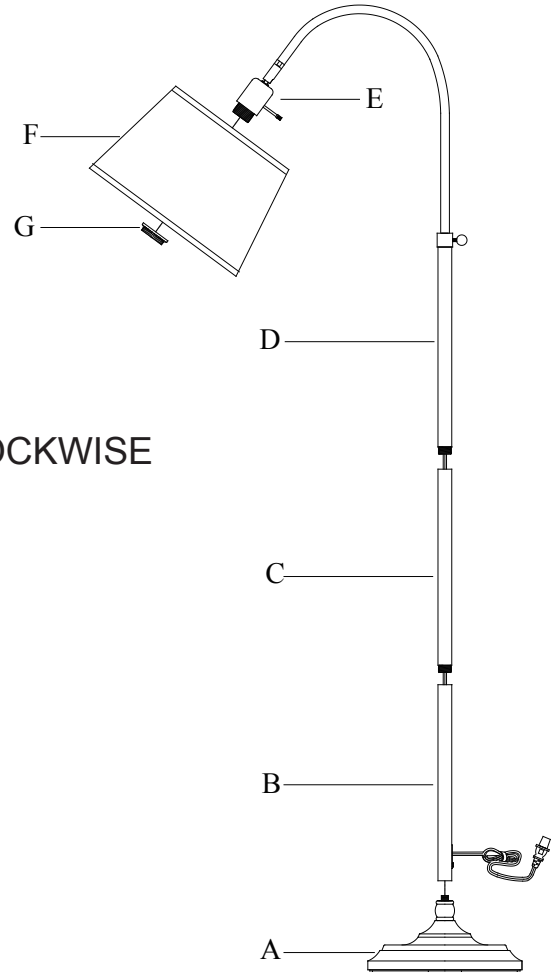

MAINTENANCE:

BULB INFORMATION: This lamp requires the use of a maximum 29-watt 3-way CFL light bulb or a 150-watt maximum 3-way standard incandescent bulb (bulbs are not included). Wattages listed are maximums - lower wattages may be used .

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. DO NOT ALTER PLUG.



21 Penn Plaza #909 New York, NY 10001
Tel : (212) 736 4440 Fax : (212) 736 4806