

## Farmhouse Table & Chair Set

Item # 21421B Natural, 21431A Cherry, 21451A Pecan, 21453A Espresso

To order replacement parts, please visit www.kidkraft.com

Please retain this information for future reference

#### **HARDWARE: PARTS LIST:**

A. Threaded Rod x 8

B. Bolt Anchor x 4



C. Flat Washer x 8 





E. Hex Screw x 24 (2 1/8 inches, 53 mm)

F. Cross Dowel Bolt x 8 (1 5/8 inches, 41 mm)

G. Cross Dowel Nut x 8



H. Wooden Dowel x 8



Wrench x 1 pc



Allen Wrench x 1



The following tool (not included) is required for assembly:




## Flathead screwdriver

A CAUTION:

ADULT ASSEMBLY REQUIRED. Hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children.

# **Assembly Instructions**

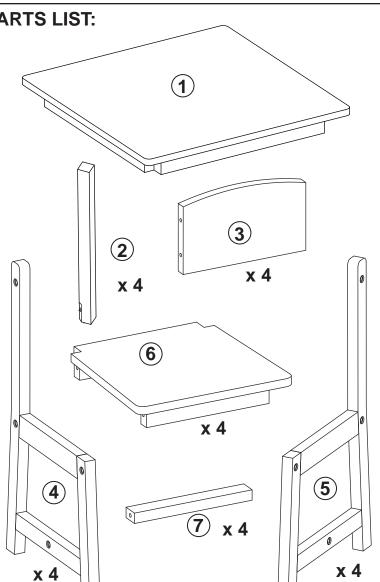

Helpful Hint: We recommend you dip the bottom 1/2" of the screws into dishwashing liquid immediately before you screw them into the product.


-Use on level surfaces only


cease to function properly.


-Please check assembly at regular intervals, and


maintenance is not carried out, the product could


frequently tighten hardware if necessary. If

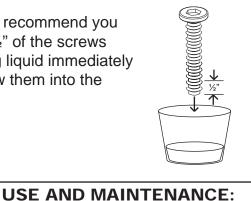

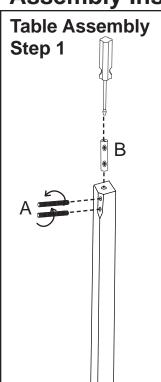

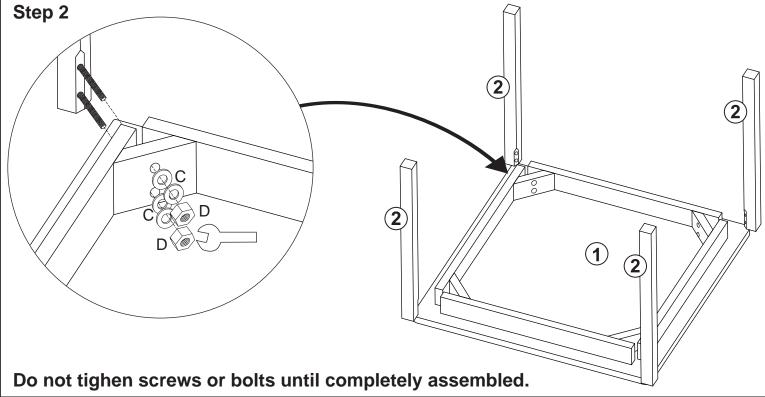

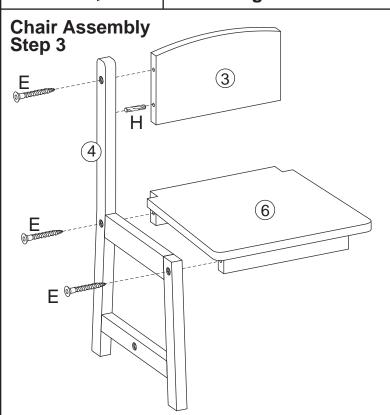

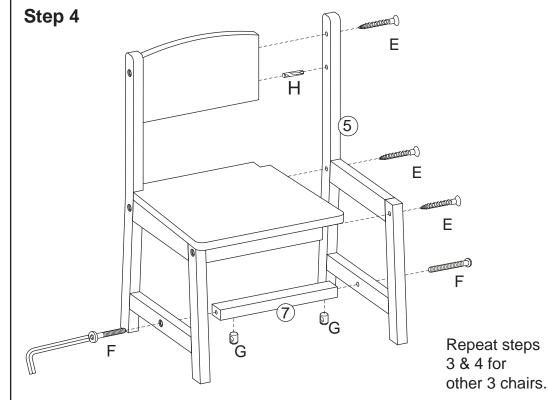

### **MARNING:**

CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

**Customer Service** 1-800-933-0771 www.kidkraft.com