




My Dreamy Dollhouse Assembly Instructions

Item #65823

© 2011 KidKraft, LP

Please retain this information for future reference

To order replacement parts, please visit www.kidkraft.com

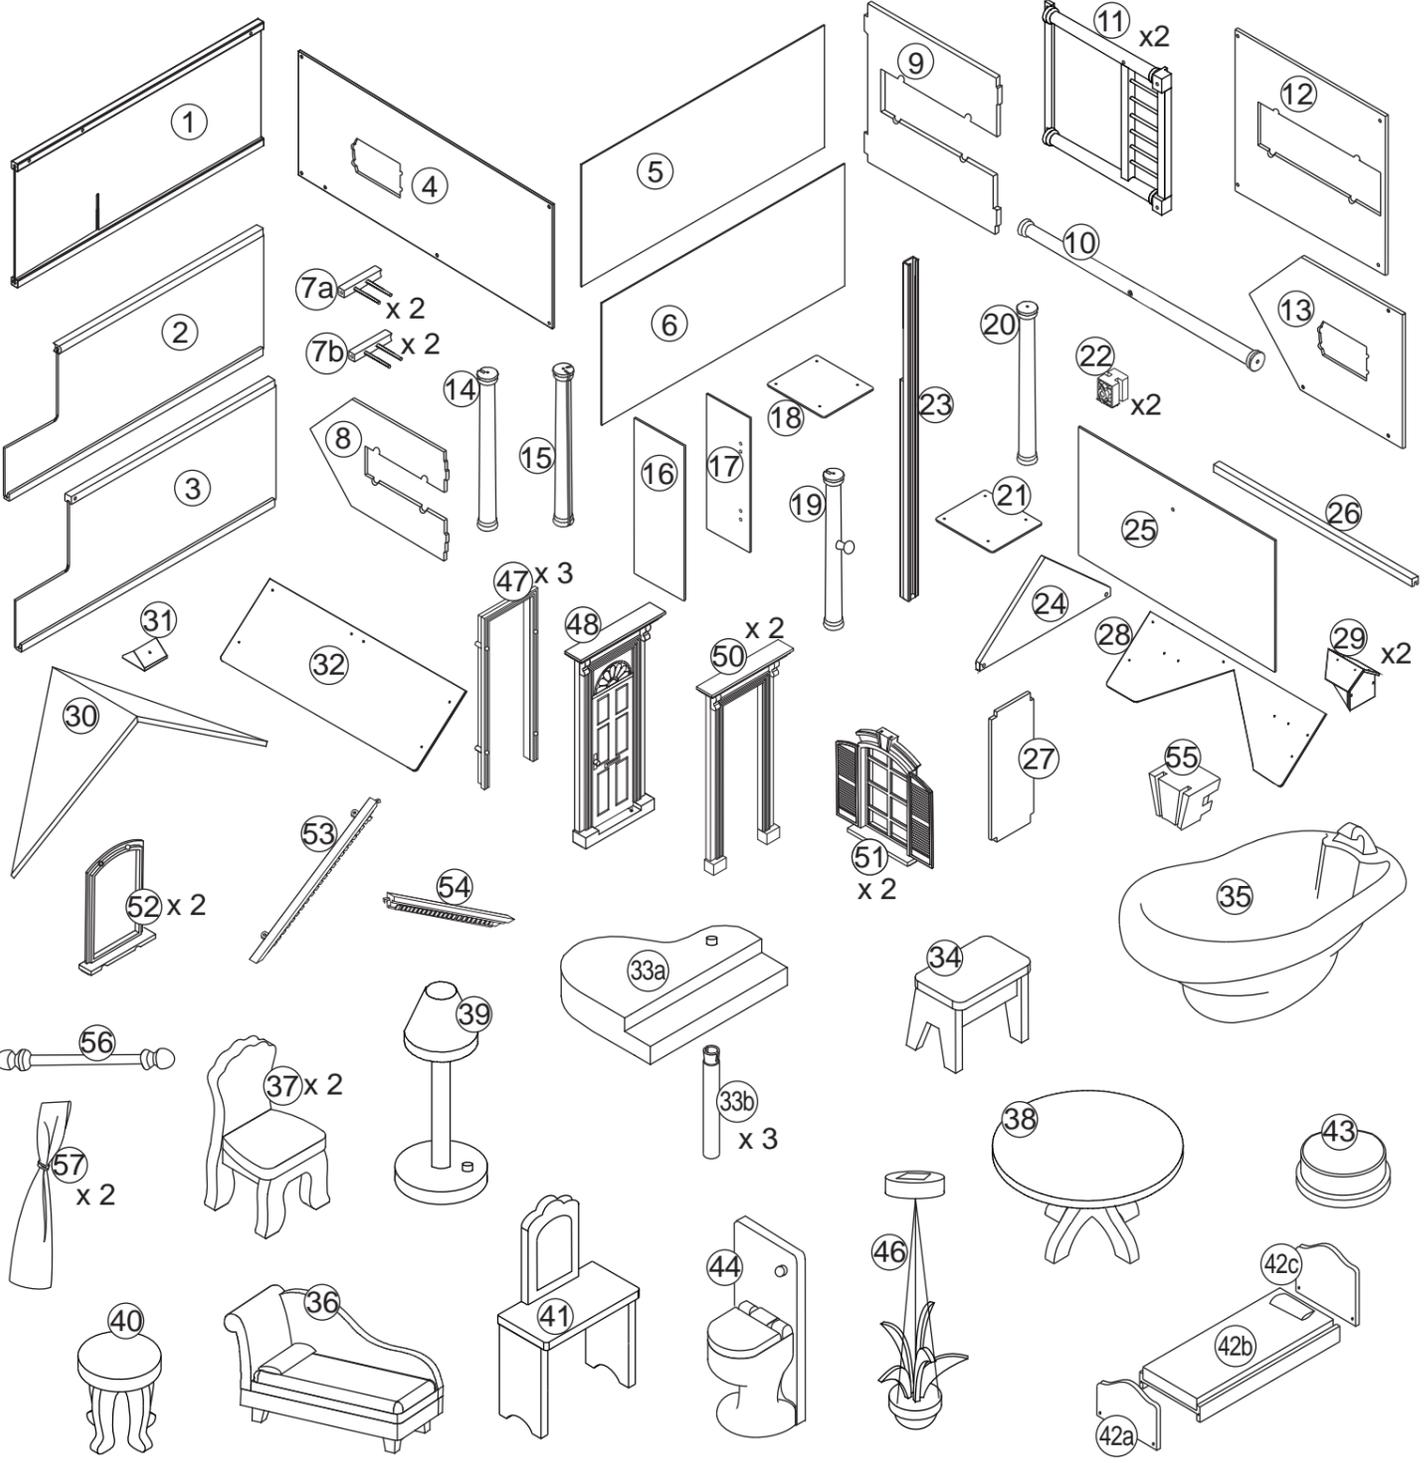HARDWARE			PARTS LIST
A. Blue Cross Dowel Bolt x 4 pcs  2 in / 52 mm	I. Espresso Large Head Screw x 4 pcs  3/4 in / 18 mm	R. Purple Screw x 4 pcs  7/8 in / 22 mm	PARTS LIST 
B. Cross Dowel Nut x 13 pcs 	J. Yellow Cross Dowel Bolt x 2 pcs  1/2 in / 12 mm	S. Light Blue Large Head Screw x 13 pcs  7/8 in / 22 mm	
C. Yellow Cross Dowel Bolt x 4 pcs  2 in / 52 mm	K. White Cross Dowel Bolt x 2 pcs  1/2 in / 12 mm	T. Yellow Screw x 2 pcs  3/4 in / 18 mm	
D. Hex Bolt x 2 pcs  1 9/16 in / 40 mm	L. Pink Insert Bolt x 2 pcs 	U. Screw x 4 pcs  7/8 in / 22 mm	
E. White Cross Dowel Bolt x 1 pc  2 in / 52 mm	M. Large Head Screw x 4 pcs  3/4 in / 18 mm	V. White Screw x 27 pcs  1/2 in / 12 mm	
F. White Cross Dowel Bolt x 2 pcs  2 7/8 in / 72 mm	N. Pink Small Head Screw x 2 pcs  1/2 in / 12 mm	Allen Wrench x 1 pc 	
G. Yellow Cross Dowel Bolt x 2 pcs  2 7/8 in / 72 mm	O. Espresso Small Head Screw x 2 pcs  1/2 in / 12 mm	The following tool (not included) is required for assembly : 	
H. Pink Large Head Screw x 2 pcs  7/8 in / 22 mm	P. White Screw x 7 pcs  3/8 in / 10 mm	Phillips® screwdriver	
	Q. White Insert Bolt x 2 pcs 		

⚠ CAUTION:
 ADULT ASSEMBLY REQUIRED. Hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children.

⚠ WARNING:
 If used improperly, your dollhouse may be pulled over or fall, creating risk of injury or damage. To minimize this risk, we recommend that you use the enclosed wall anchor kit, which gives you the option of attaching the dollhouse to a wall. In addition, children should not be permitted to climb or pull on the dollhouse.

USE AND MAINTENANCE:
 -Use on level surfaces only
 -Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

⚠ WARNING:
 CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.

Customer Service
 1-800-933-0771
www.kidkraft.com




My Dreamy Dollhouse Assembly Instructions


© 2011 KidKraft, LP

Item #65823


Bed Assembly Step 1

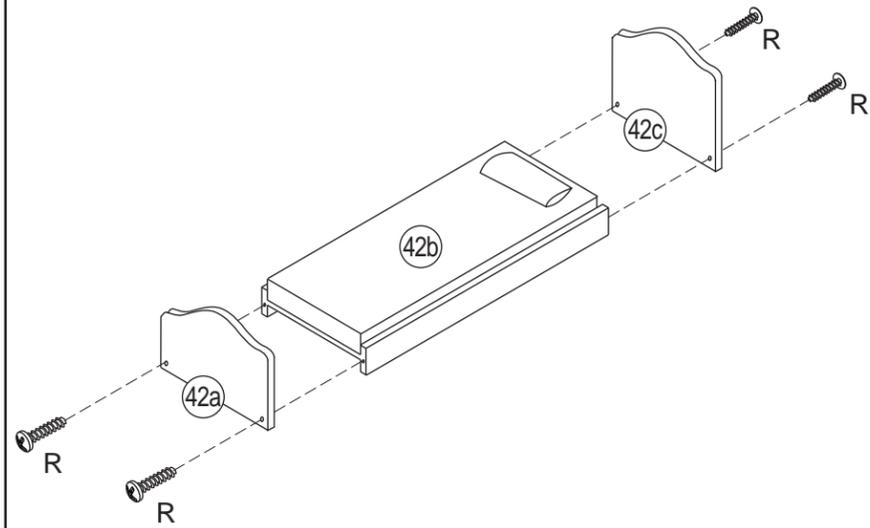


Piano Assembly Step 1

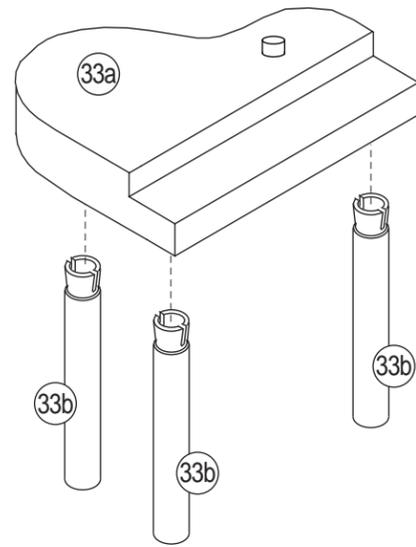


Dollhouse Assembly Step 1

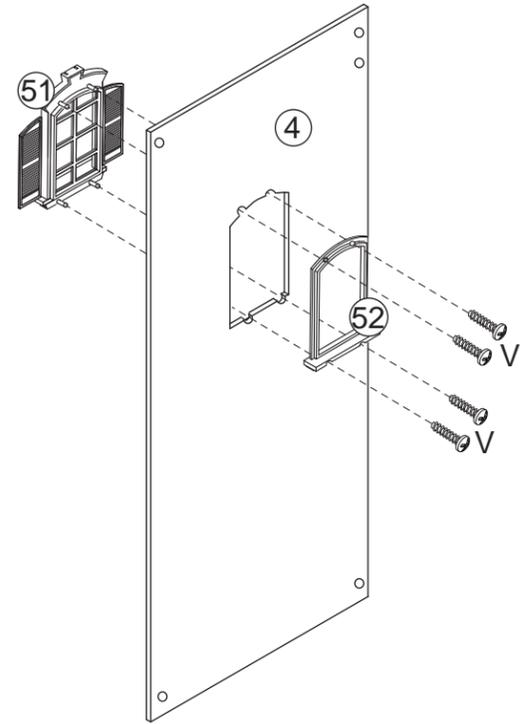


Step 2

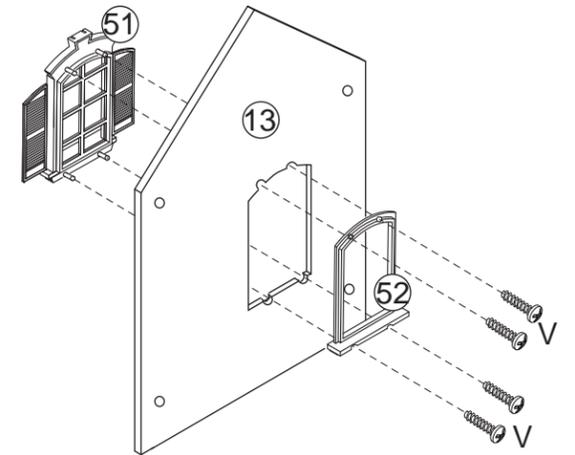


Step 3

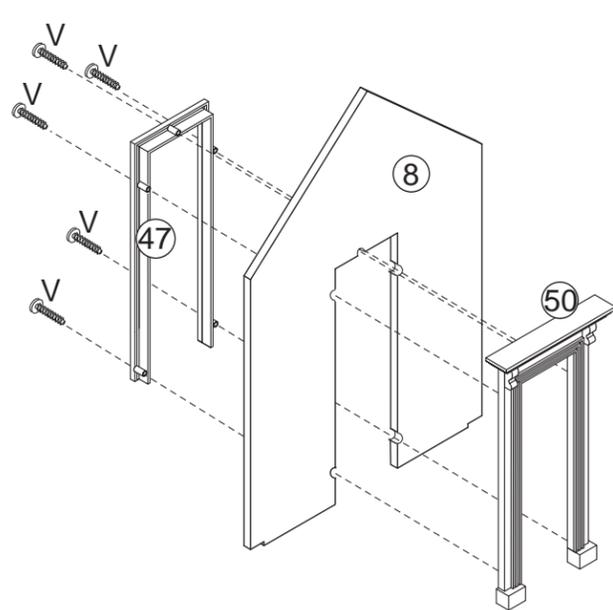


Step 4

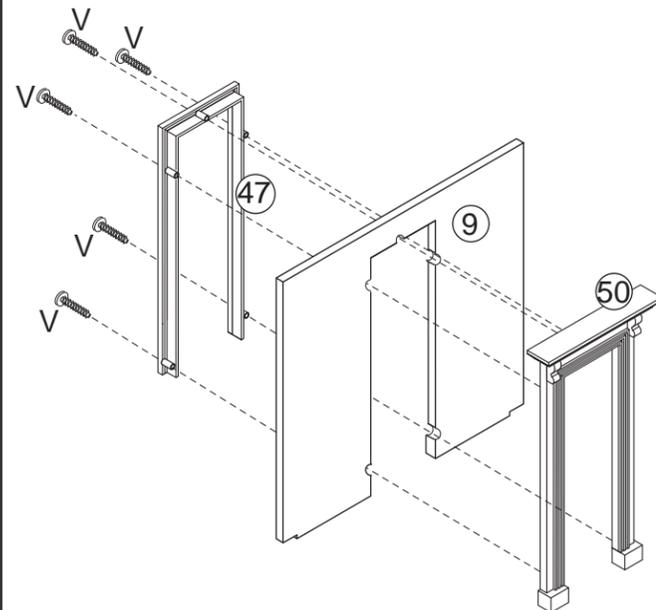


Step 5

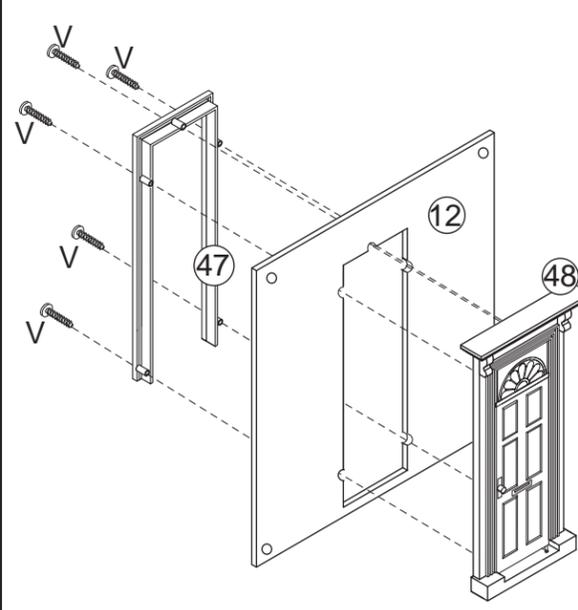

Step 6

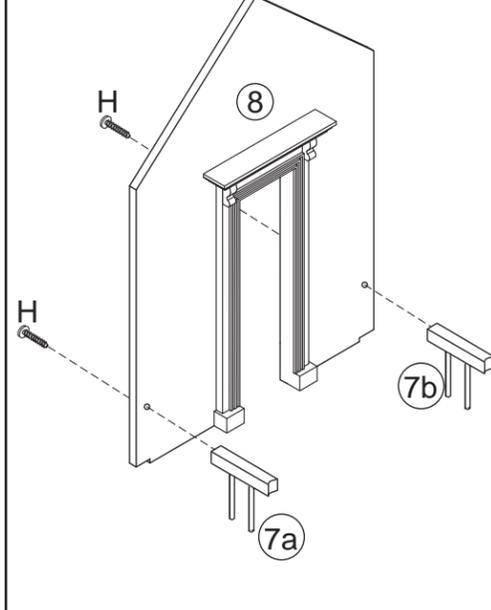

Step 7

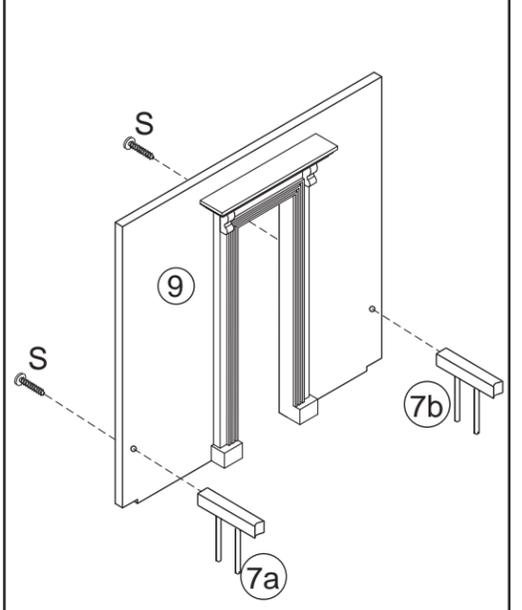

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

Customer Service
1-800-933-0771
www.kidkraft.com



My Dreamy Dollhouse


Assembly Instructions

© 2011 KidKraft, LP


Item #65823

Step 8


*Be sure to match artwork on these parts to match the artwork in each room of the dollhouse.

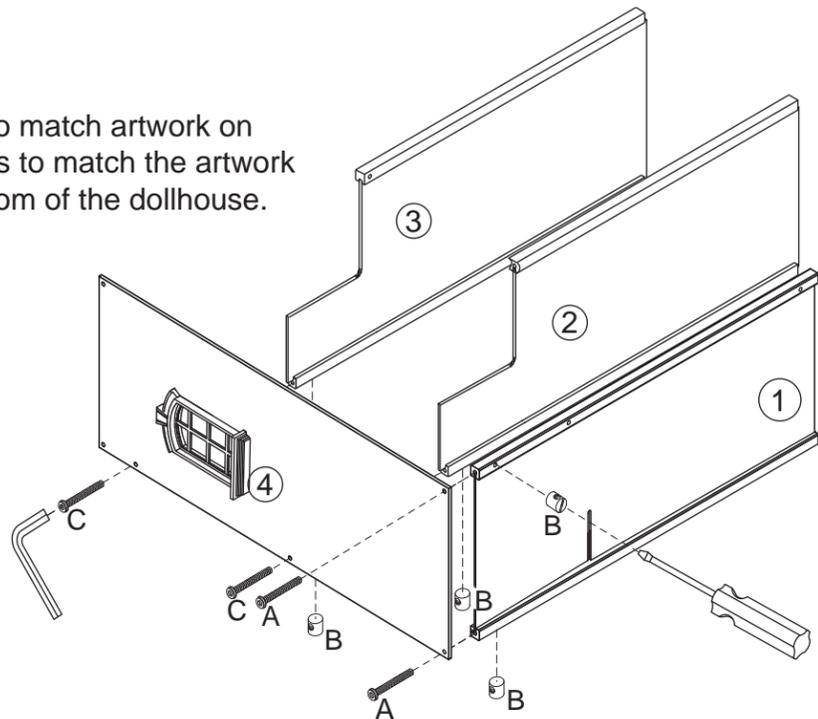


Step 9

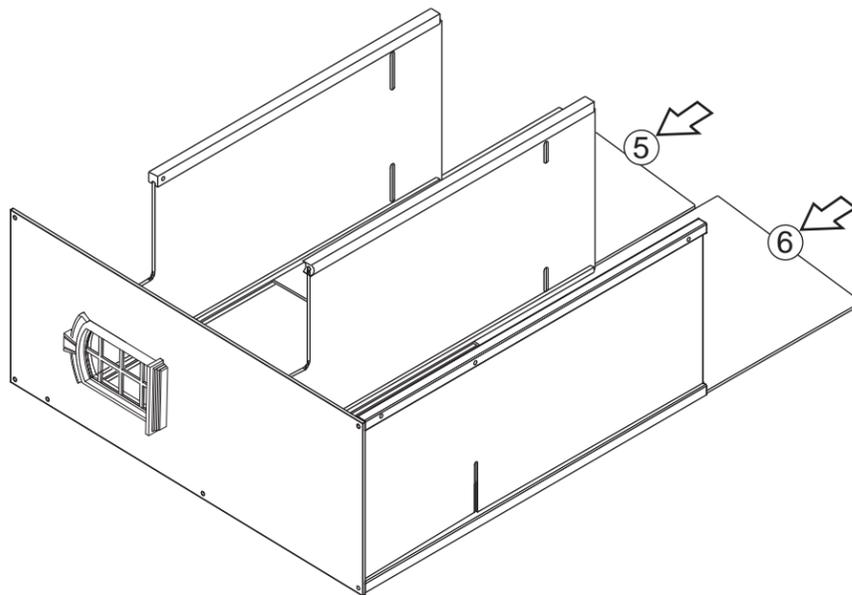


Step 10

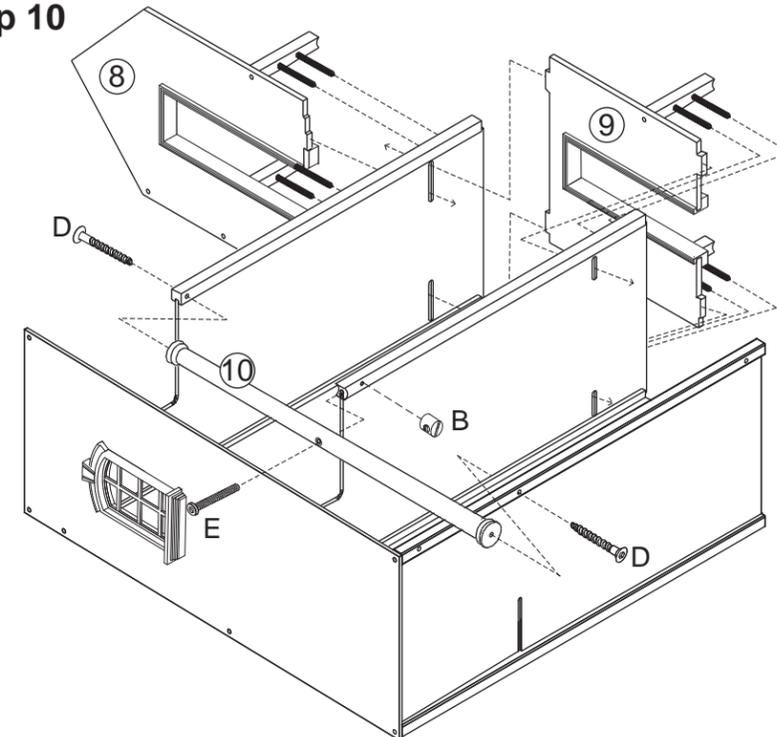


Step 11

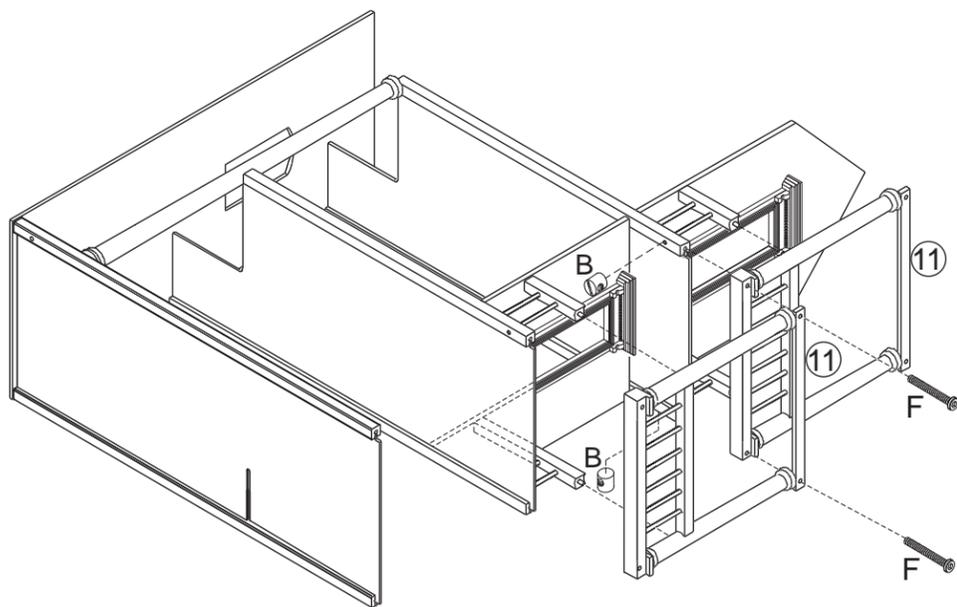


Step 12

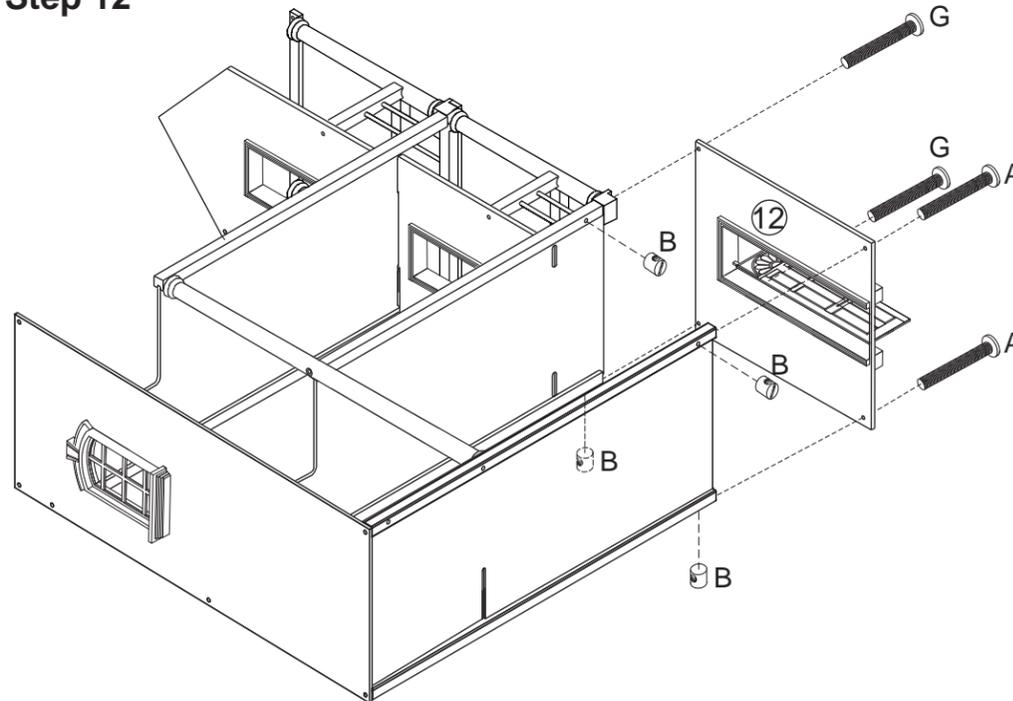


Step 13

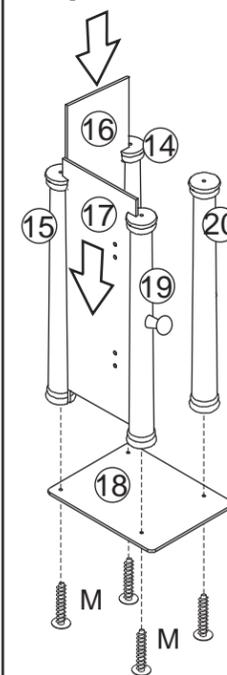

Step 14

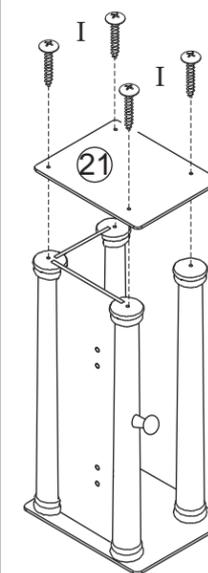

Step 15

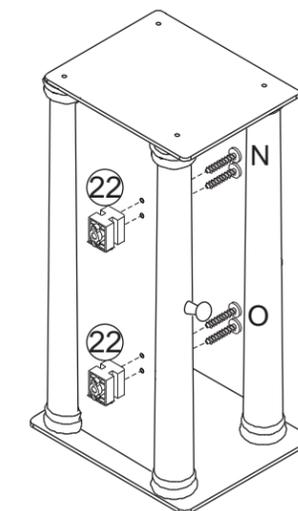

Customer Service
1-800-933-0771
www.kidkraft.com



My Dreamy Dollhouse Assembly Instructions

© 2011 KidKraft, LP

Item #65823

Step 16

Insert elevator slide into track before attaching to dollhouse wall.

Adults can loosen or tighten the screws on part 22 to adjust the elevator resistance.

Step 17

Step 18

Step 19

Step 20

Step 21

Do not tighten Hardware "V" completely until after step 22.

Step 22

Step 23

Step 24


Customer Service
1-800-933-0771
www.kidkraft.com



My Dreamy Dollhouse

Assembly Instructions

Step 25

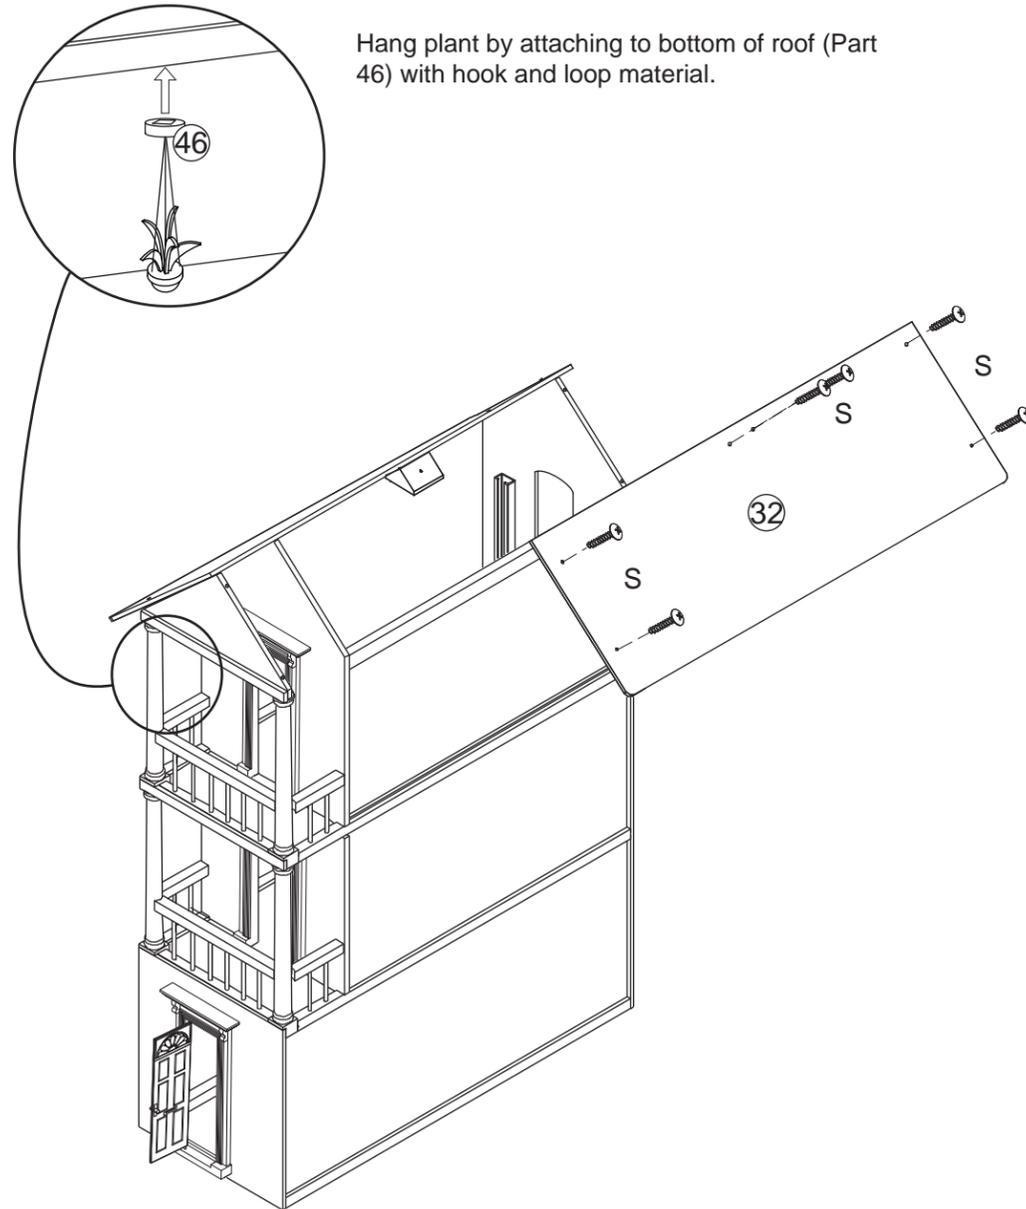

Hang plant by attaching to bottom of roof (Part 46) with hook and loop material.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.




My Dreamy Dollhouse Assembly Instructions

© 2011 KidKraft, LP

Item #65823


Piano Battery Assembly Instructions

Prior To Use:

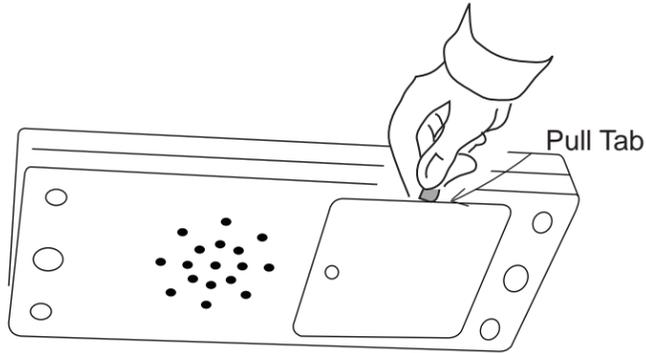

- Locate the Battery Compartment underneath the piano (part 33)
- Pull the tab outward to remove and activate play mode.
- Three (3) LR44 / AG13 (1.5V) Batteries are included in each piece.


Instructions for Use:

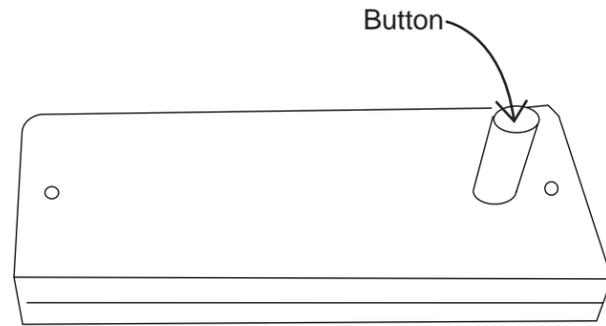

- Sounds are activated when button is pressed.


To replace battery:

Step 1

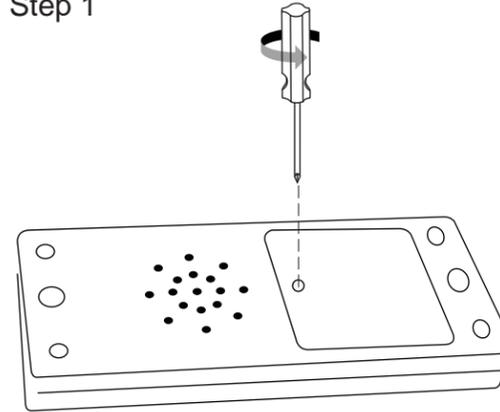

- Locate the Battery Compartment underneath the piano.
- Use a Phillips® head screwdriver and remove cover and set aside.


Step 2

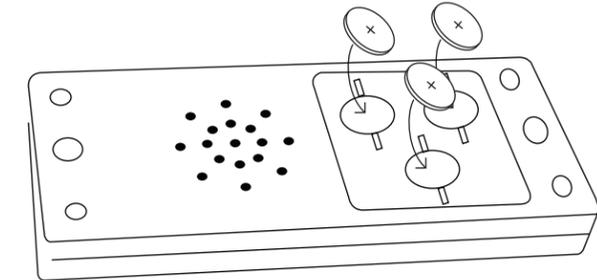

- Replace old batteries with three (3) new LR44 / AG13 (1.5V) batteries.
- Be sure to insert new batteries with positive (+) side up.
- Rechargeable batteries are to be removed from the toy before being charged.

Step 3

- Screw the cover back into place with a Phillips® head screwdriver.

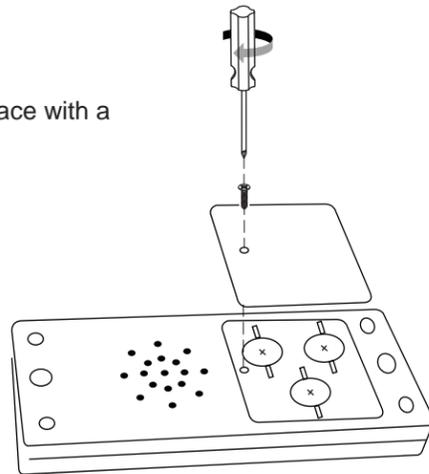


Battery Tips:

- Batteries should always be installed and changed under adult supervision.
- Non-Rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy and disposed of properly.
- The supply terminals are not to be short circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries.


Toilet Battery Assembly Instructions

Prior To Use:

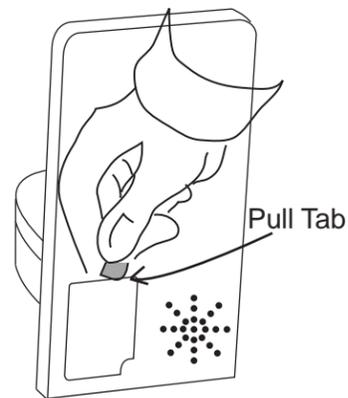

- Locate the Battery Compartment on the back of the toilet (part 44)
- Pull the tab outward to remove and activate play mode.
- Three (3) LR44 / AG13 (1.5V) Batteries are included in each piece.


Instructions for Use:

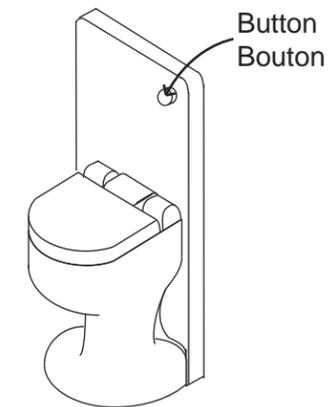

- Sounds are activated when button is pressed.

To replace battery:

Step 1

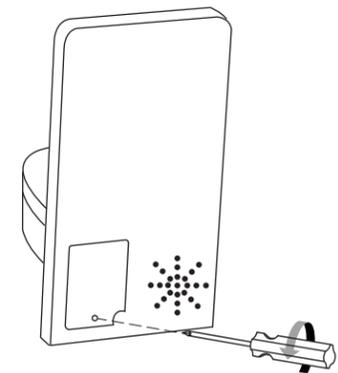

- Locate the Battery Compartment on the back of the toilet.
- Use a Phillips head screwdriver and remove cover and set aside.








Customer Service
1-800-933-0771
www.kidkraft.com



My Dreamy Dollhouse Assembly Instructions

© 2011 KidKraft, LP

Item #65823

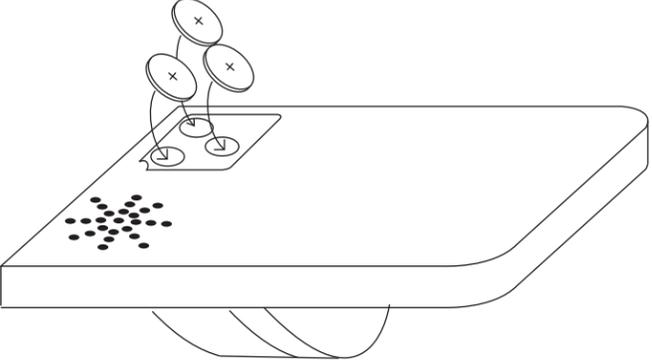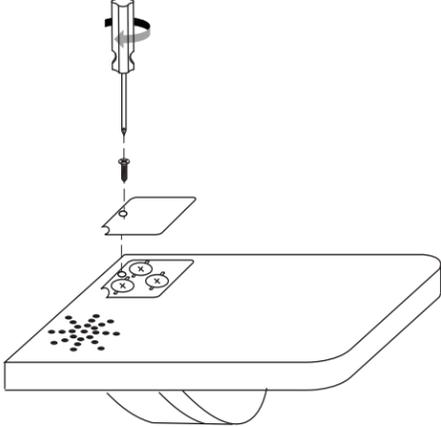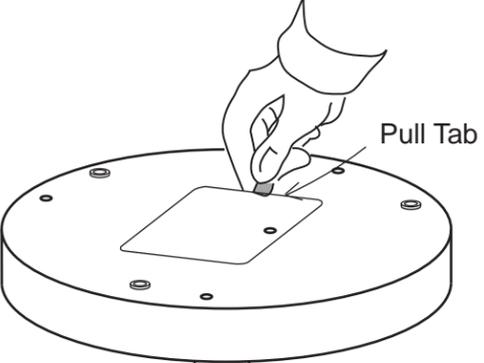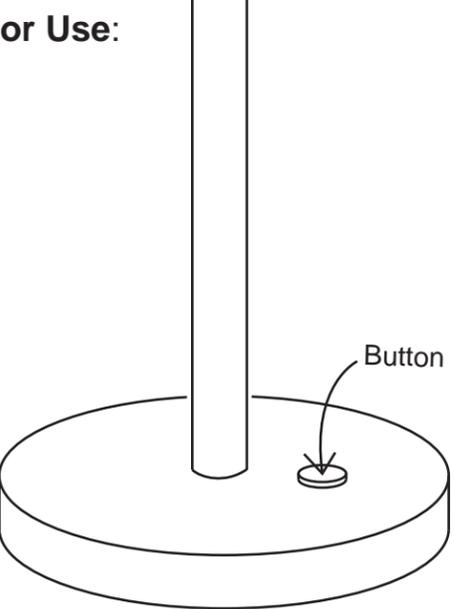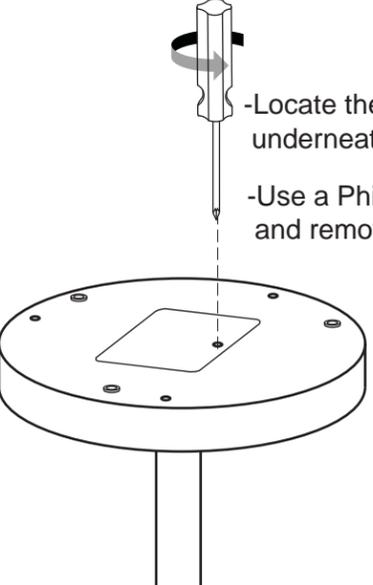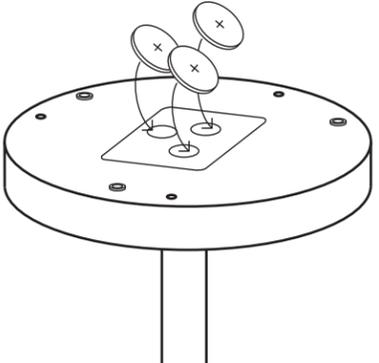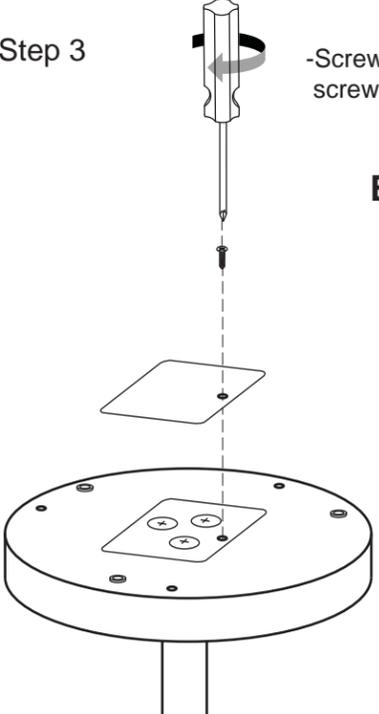Toilet Battery Assembly Instructions Continued		Floor Lamp Battery Assembly Instructions	
<p>Step 2</p>  <ul style="list-style-type: none"> - Replace old batteries with three (3) new LR44 / AG13 (1.5V) batteries. - Be sure to insert new batteries with positive (+) side up. - Rechargeable batteries are to be removed from the toy before being charged. 	<p>Step 3</p>  <p>Battery Tips:</p> <ul style="list-style-type: none"> - Batteries should always be installed and changed under adult supervision. - Non-Rechargeable batteries are not to be recharged. - Rechargeable batteries are only to be charged under adult supervision. - Only batteries of the same equivalent type as recommended are to be used. - Batteries are to be inserted with the correct polarity. - Exhausted batteries are to be removed from the toy and disposed of properly. - The supply terminals are not to be short circuited. - Different types of batteries or new and used batteries are not to be mixed. - DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries. 	<p>Prior To Use:</p>  <ul style="list-style-type: none"> - Locate the Battery Compartment underneath the floor lamp (part 39) - Pull the tab outward to remove and activate play mode. - Three (3) LR44 / AG13 (1.5V) Batteries are included in each piece. 	
<p>Instructions for Use:</p>  <ul style="list-style-type: none"> - Lights are activated when button is pressed. 	<p>To replace battery:</p> <p>Step 1</p>  <ul style="list-style-type: none"> - Locate the Battery Compartment underneath the piano. - Use a Phillips® head screwdriver and remove cover and set aside. 	<p>Step 2</p> <ul style="list-style-type: none"> - Replace old batteries with three (3) new LR44 / AG13 (1.5V) batteries. - Be sure to insert new batteries with positive (+) side up. - Rechargeable batteries are to be removed from the toy before being charged. 	<p>Step 3</p>  <ul style="list-style-type: none"> - Screw the cover back into place with a Phillips® head screwdriver. <p>Battery Tips:</p> <ul style="list-style-type: none"> - Batteries should always be installed and changed under adult supervision. - Non-Rechargeable batteries are not to be recharged. - Rechargeable batteries are only to be charged under adult supervision. - Only batteries of the same equivalent type as recommended are to be used. - Batteries are to be inserted with the correct polarity. - Exhausted batteries are to be removed from the toy and disposed of properly. - The supply terminals are not to be short circuited. - Different types of batteries or new and used batteries are not to be mixed. - DO NOT mix alkaline, standard (carbon-zinc) or rechargeable batteries.

Customer Service
1-800-933-0771
www.kidkraft.com



Parental supervision required.

This toy is intended for children of a specific age or above. Parents should supervise the play area so that children younger than the intended age range do not interact with this toy. Use this toy on the floor. Do not allow children to climb on or around or in the toy.

IMPORTANT INFORMATION - PLEASE READ FIRST

ALL OF OUR WOODEN ITEMS ARE HANDCRAFTED, HAND ASSEMBLED, AND HAND PAINTED. EACH ONE IS UNIQUE. SLIGHT IMPERFECTIONS MAY OCCUR AND ARE NOT MANUFACTURING DEFECTS.

PLEASE NOTE THAT WE DO NOT WARRANTY AGAINST THE USE OF PERMANENT MARKERS, NON-WATER-BASED PAINTS, CRAYONS, OR WASHABLE MARKERS. SOME OF THESE ITEMS CONTAIN PERMANENT COLOR DYES THAT COULD DAMAGE THE SURFACE.

CLEANING INSTRUCTIONS

CLEAN THE SURFACE USING A SLIGHTLY DAMP CLOTH AND MILD DISH WASHING LIQUID IF NECESSARY. DO NOT USE ANY CLEANING PRODUCT CONTAINING ALCOHOL OR AMMONIA. THESE WILL DULL THE SHINY SURFACE OF THE PRODUCT. FURNITURE POLISH WILL ALSO WORK TO CLEAN AND DUST OFF THE SURFACE.

WE RECOMMEND THAT YOU TEST ALL CLEANING MATERIALS ON THE UNDERSIDE OF ANY SURFACE THAT WOULD NOT BE SEEN DURING NORMAL USE OF THE PRODUCT. IF YOU HAVE QUESTIONS REGARDING THE MAINTENANCE OF THIS PRODUCT PLEASE FEEL FREE TO CALL US.

SOLE AND LIMITED WARRANTY

THIS TOY IS WARRANTED SOLELY AGAINST MANUFACTURING DEFECTS FOR A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, WHICH RUNS ONLY TO THE ORIGINAL USER OF THE TOY. IN THE EVENT OF A MANUFACTURING DEFECT, PARTS WILL BE REPLACED OR THE ENTIRE PRODUCT WILL BE REPLACED OR THE PURCHASE PRICE WILL BE REFUNDED, AT THE ELECTION OF THE MANUFACTURER. TO ACTIVATE AND PROTECT THIS WARRANTY, PRESERVE EVIDENCE OF ORIGINAL PURCHASE AND CAREFULLY INSPECT THE CONDITION OF THE TOY PRIOR TO AND AFTER ASSEMBLY, LOOKING FOR MISSING, DEGRADED, BROKEN OR HAZARDOUS PARTS, INCLUDING PARTS WHICH CAN BE SWALLOWED BY A CHILD, CAUSE A CHILD TO CHOKe, OR OTHERWISE CAUSE INJURY. SUCH PARTS MAY INCLUDE MAGNETS, WHEELS, HUBS, FASTENERS, AND CONNECTORS. SHOULD YOU OBSERVE ANY DEFECTS, DO NOT USE THE TOY AND IMMEDIATELY NOTIFY THE MANUFACTURER. FAILURE TO DO SO SHALL CONSTITUTE MISUSE. MISUSE, IMPROPER ASSEMBLY, FAILURE TO HONOR A WARNING, FAILURE TO SUPERVISE, INSPECT OR MAINTAIN THE TOY, OR DAMAGE TO THE TOY, WHETHER INTENTIONAL OR INADVERTENT, SHALL INVALIDATE THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

TO SUBMIT A WARRANTY CLAIM PLEASE CONTACT KIDKRAFT CUSTOMER SERVICE AT 1-800-933-0771 FOR INSTRUCTIONS ON HOW TO PROVIDE PROOF OF PURCHASE AND HOW TO RETURN THE ITEM FREIGHT PRE-PAID.

CUSTOMER SERVICE 1-800-933-0771

www.kidkraft.com