



© 2012 KidKraft, LP






Please retain this information for future reference

Bright Toaster Set

Assembly Instructions

Item #63315

To order replacement parts, please visit www.kidkraft.com

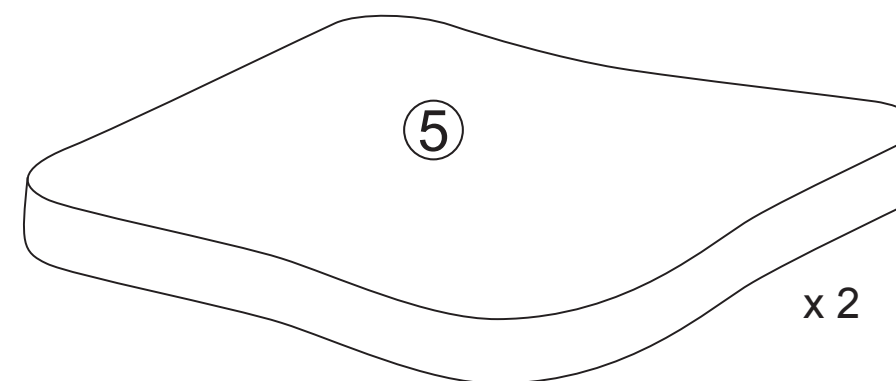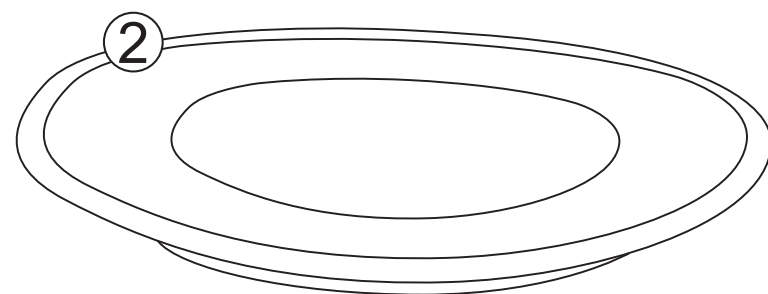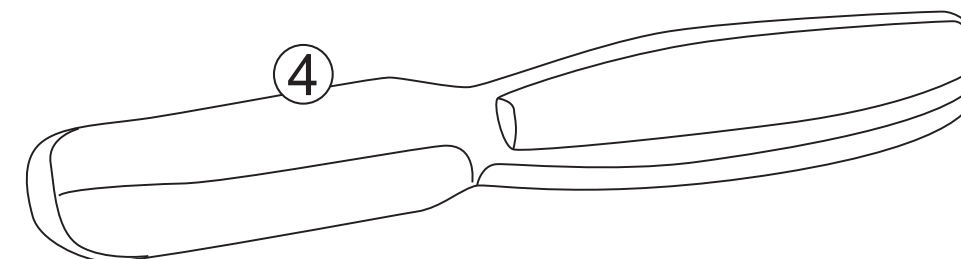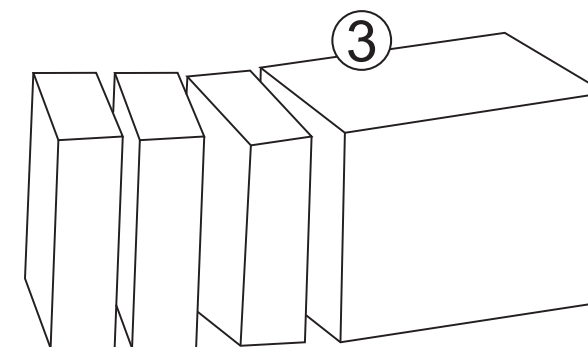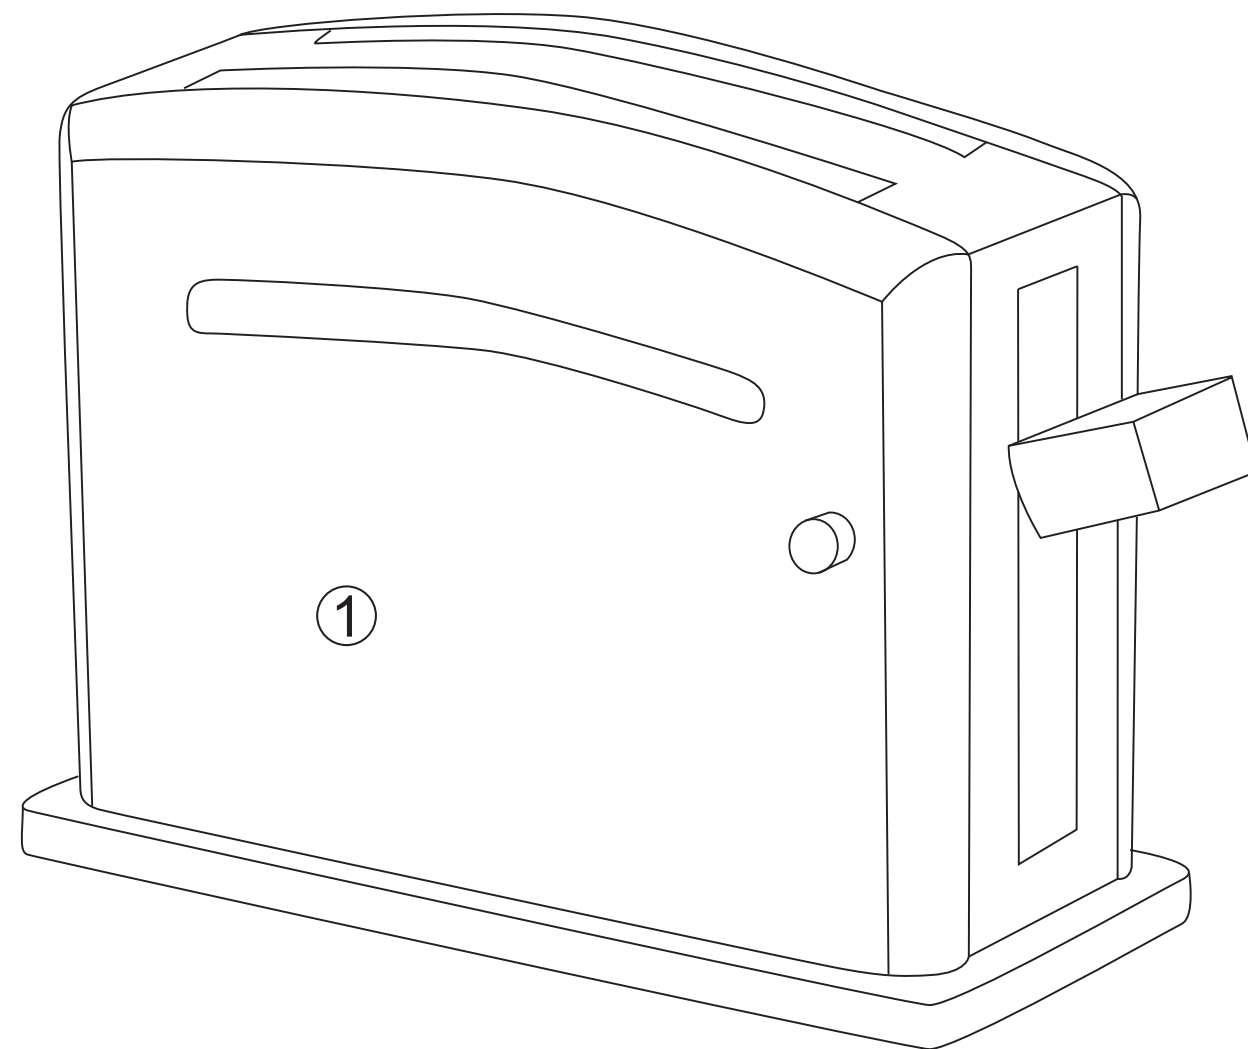

Before calling customer service, please locate the batch code number (example: 105906/65006/04) found on the bottom or back of your product.

Customer Service
1-800-933-0771
www.kidkraft.com