



Ultimate Chef's Kitchen Assembly Instructions


© 2012 KidKraft, LP

Item# 53284

Please retain this information for future reference

To order replacement parts, please visit www.kidkraft.com

PARTS LIST

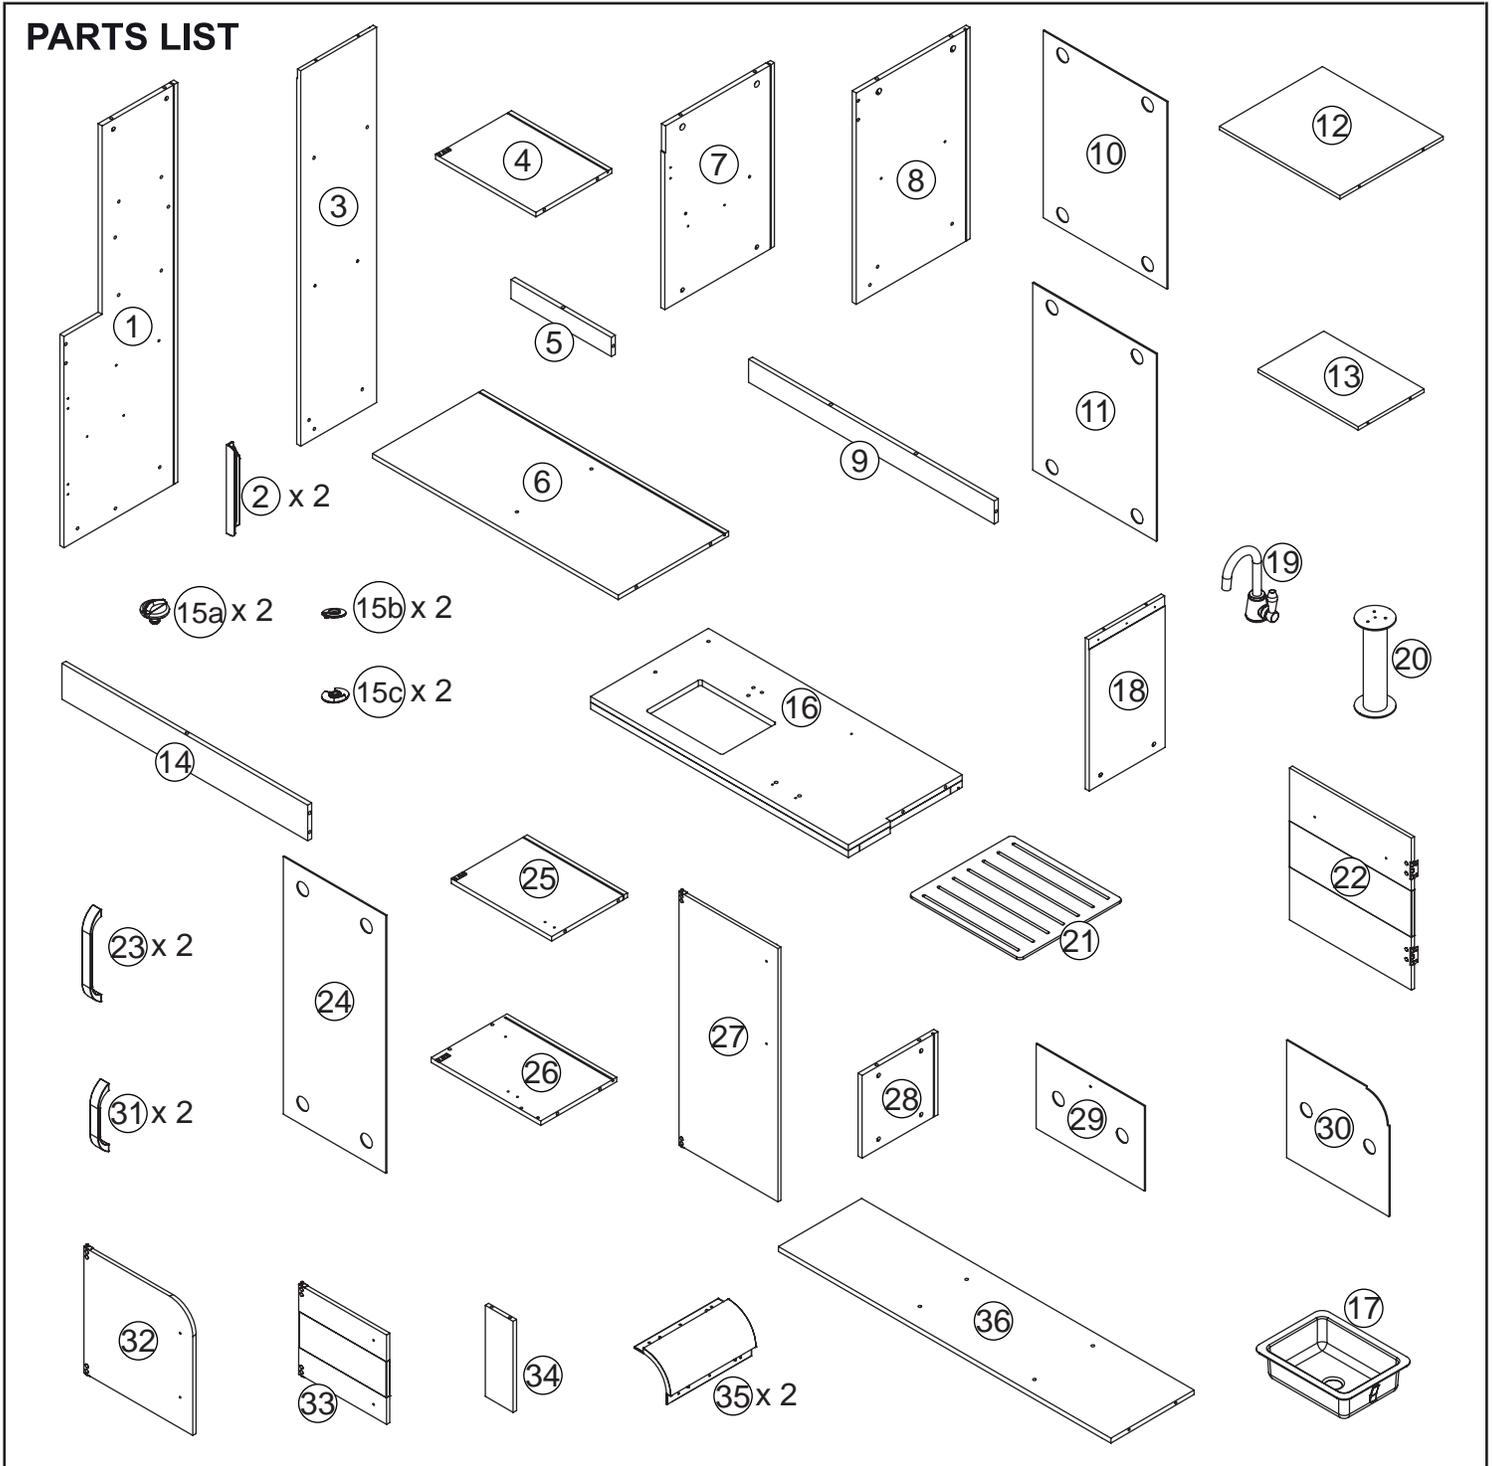

⚠ WARNING:
ADULT ASSEMBLY REQUIRED.
Product includes small parts with potentially hazardous sharp points and sharp edges in the unassembled state. Keep unassembled parts away from children.

⚠ WARNING:
CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.

⚠ WARNING:
If used improperly, your kitchen may be pulled over or fall, creating risk of injury or damage. To minimize this risk, we recommend that you use the enclosed wall anchor kit, which gives you the option of attaching the dollhouse to a wall. In addition, children should not be permitted to climb or pull on the dollhouse.

USE AND MAINTENANCE:
-Use on level surfaces only
-Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

Customer Service
1-800-933-0771
www.kidkraft.com





Ultimate Chef's Kitchen

Assembly Instructions

Item# 53284

| HARDWARE | | | |
|---|---|--|---|
| <p>A. Round Head Screw x 7 pcs  7/8 in, 22mm</p> <p>B. Cross Dowel Bolt x 24 pcs  2 1/4 in, 57mm</p> <p>C. Cross Dowel Nut x 24 pcs </p> <p>D. Cam Lock x 6 pcs </p> <p>E. Twist Nut x 6 pcs </p> <p>F. Round Head Bolt x 8 pcs  13/16 in, 20mm</p> | <p>G. Nylon Nut x 10 pcs </p> <p>H. Mother Latch x 4 pcs </p> <p>I. Son Latch x 4 pcs </p> <p>J. Round Head Bolt x 2 pcs  15/16 in, 24mm</p> <p>K. Round Head Screw x 16 pcs  1 3/8 in, 34mm</p> <p>L. Round Head Screw x 12 pcs  7/16 in, 11mm</p> | <p>M. Flat Washer x 3 pcs </p> <p>N. Wood Dowel x 8 pcs </p> <p>O. Cross Dowel Bolt x 2 pcs  1 1/16 in, 27mm</p> <p>P. Silver Round Head Screw x 8 pcs  13/16 in, 20mm</p> <p>Q. Round Head Screw x 8 pcs  5/16 in, 8mm</p> | <p>Allen Wrench x 1 pc </p> <p>Wrench x 1 pc </p> <p>The following tool (not included) is required for assembly: </p> <p>Phillips® screwdriver</p> |

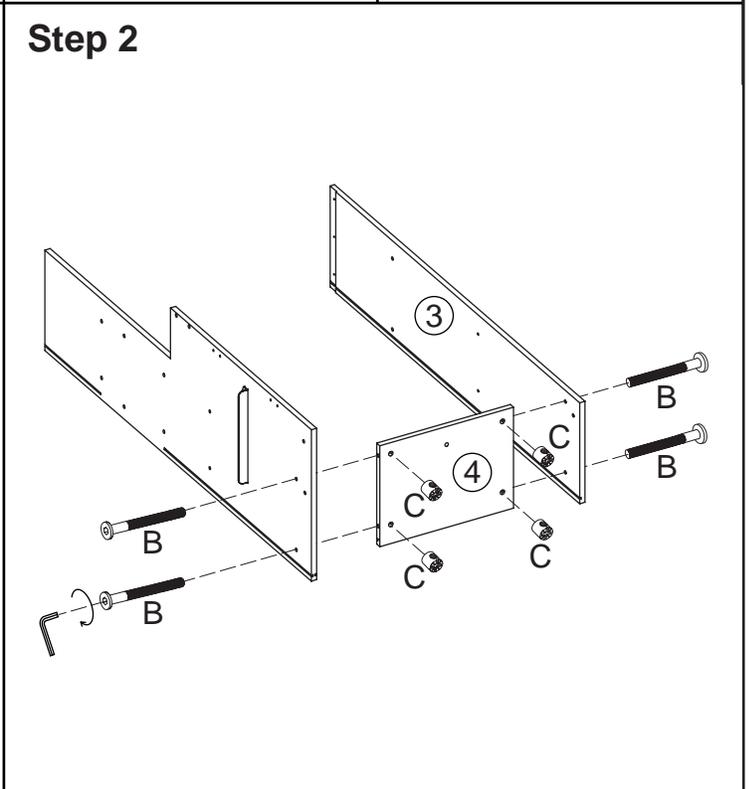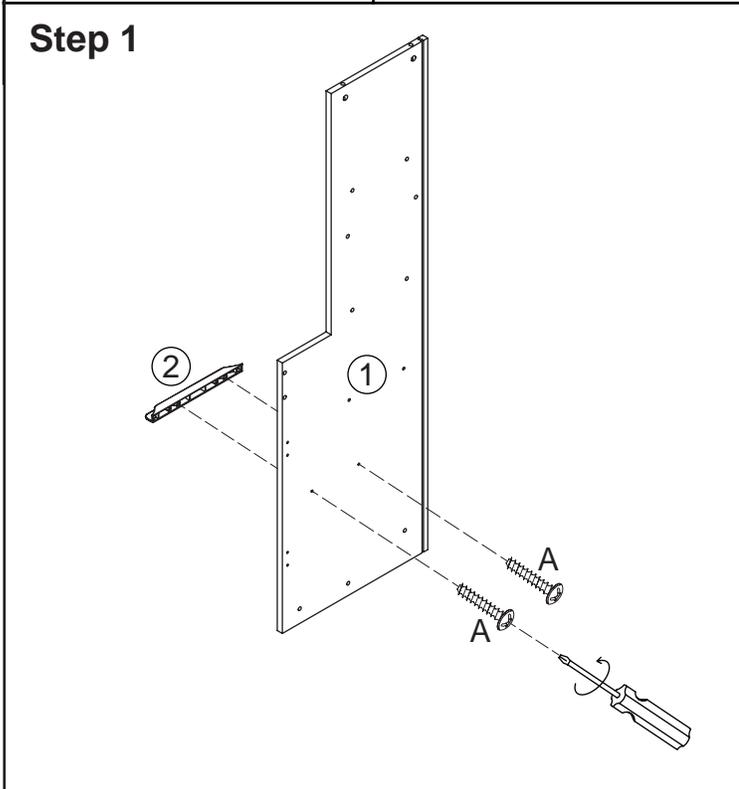

Before calling customer service, please locate the batch code number (example: 105906/65006/04) found on the bottom or back of your product.


Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen Assembly Instructions

Item# 53284


Step 3

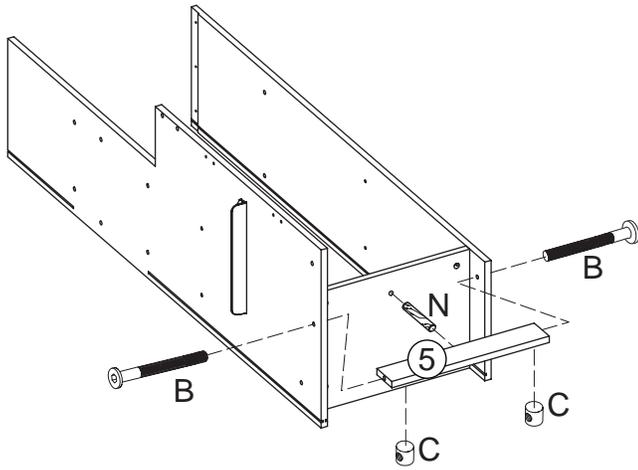


Step 4

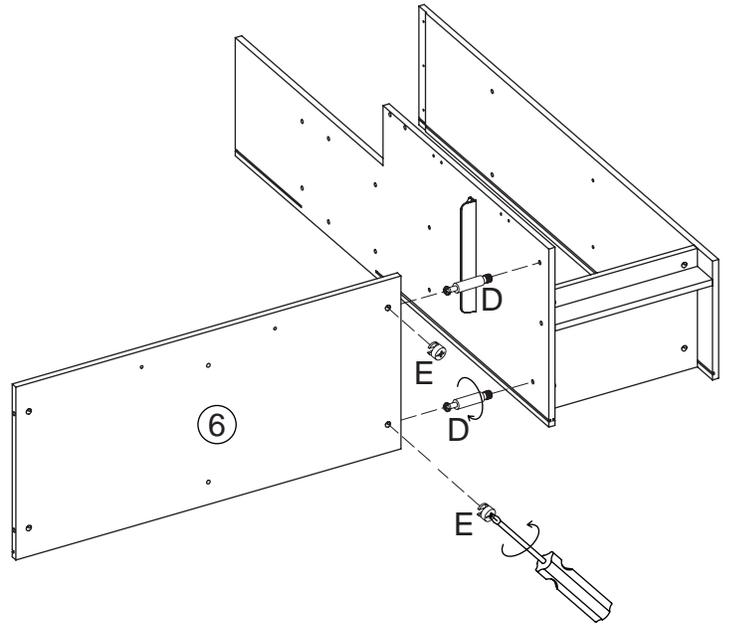

Step 5

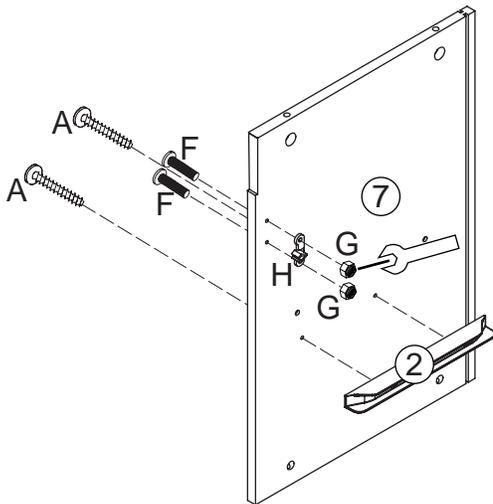

Step 6

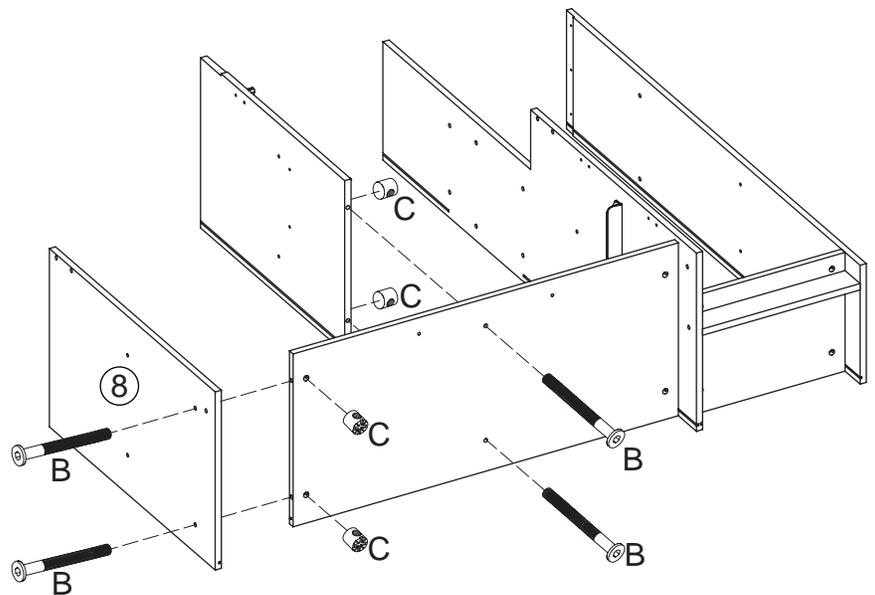

Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen


Assembly Instructions

Item# 53284


Step 7

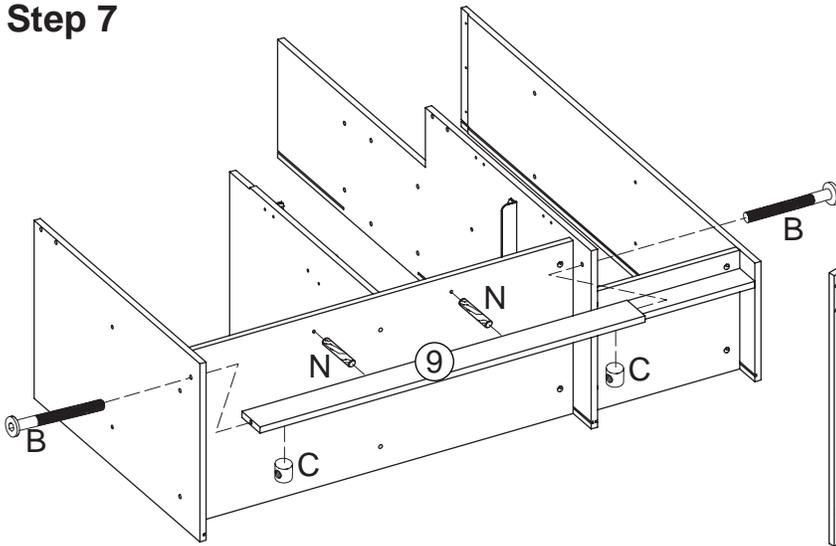


Step 8

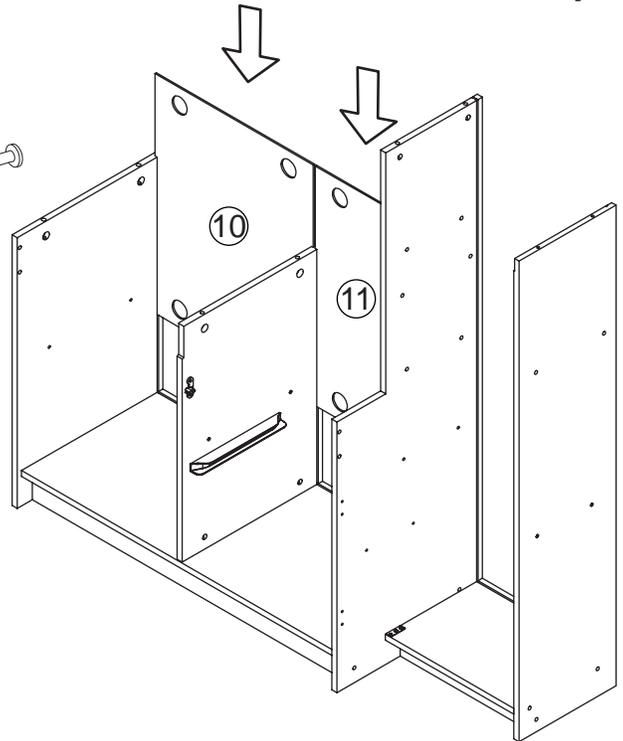

Step 9

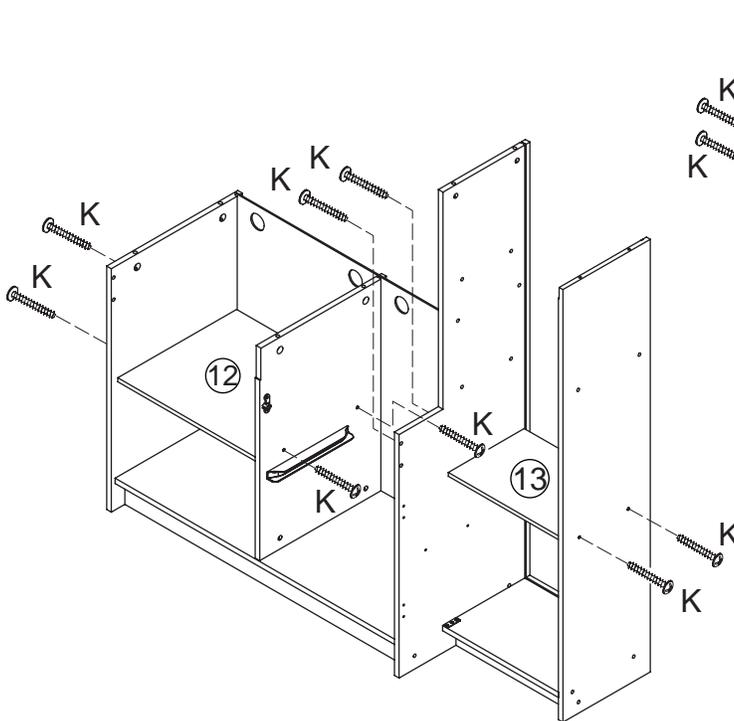

Step 10

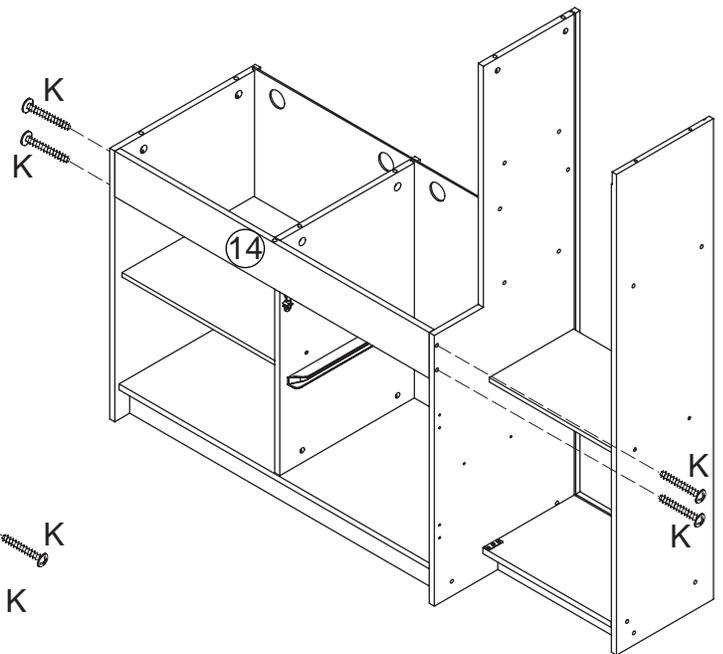


Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen Assembly Instructions

Item# 53284


Step 11

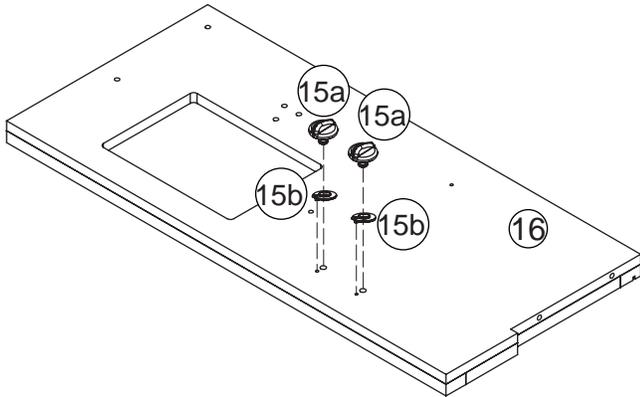


Step 12

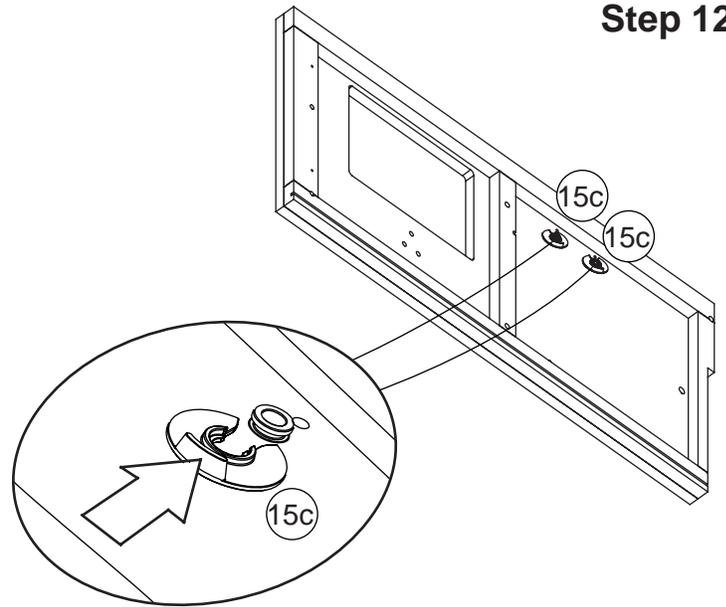

Step 13

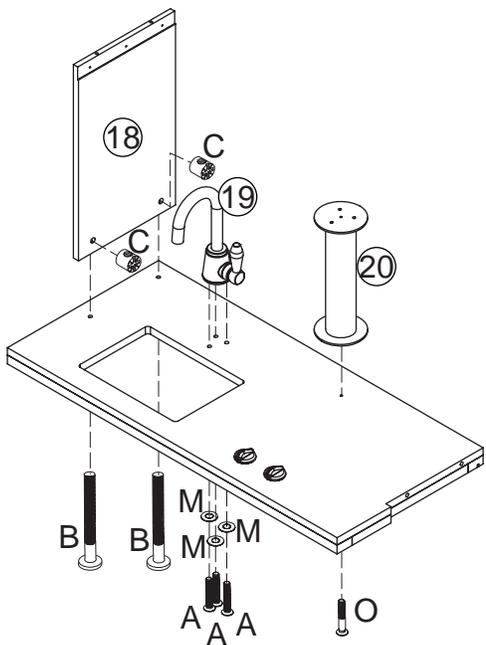

Step 14

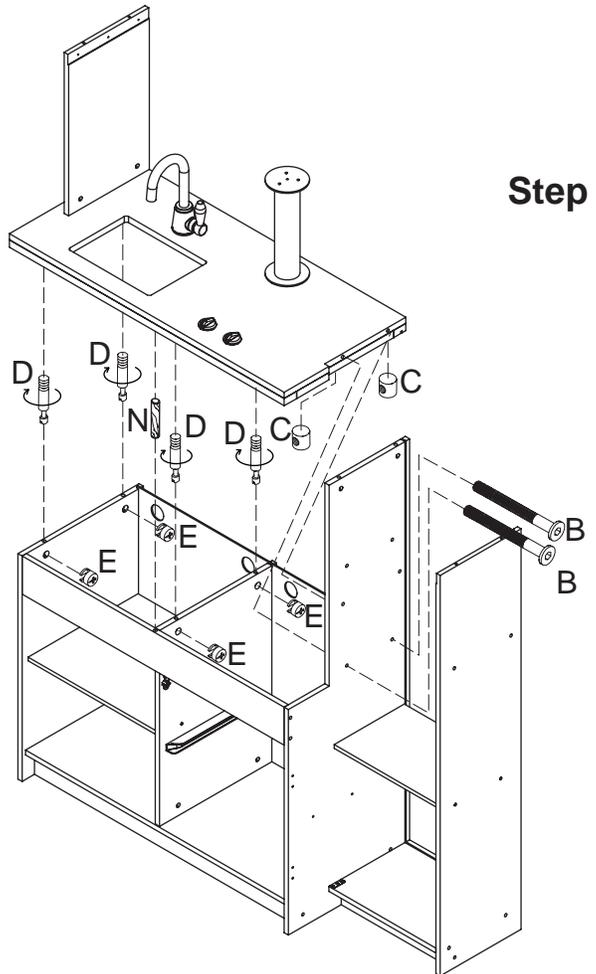


Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen Assembly Instructions

Item# 53284


Step 15

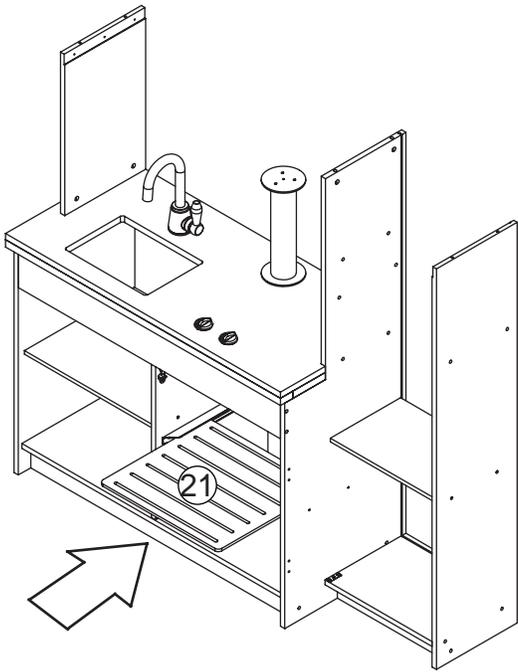


Step 16

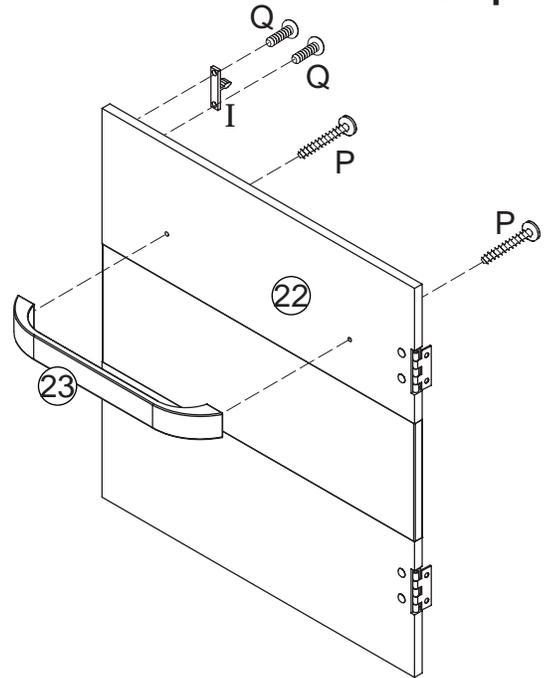

Step 17

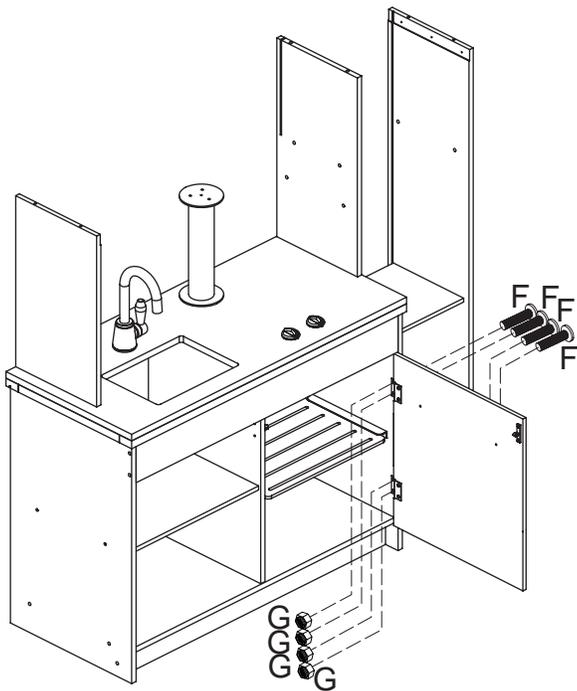

Step 18

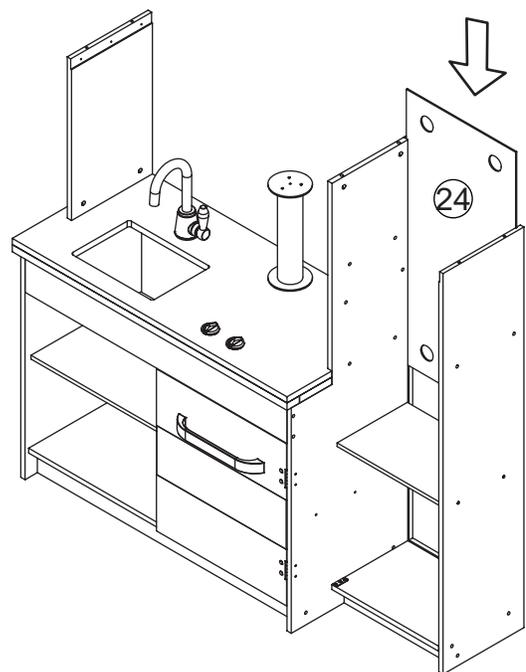


Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen Assembly Instructions

Item# 53284


Step 19

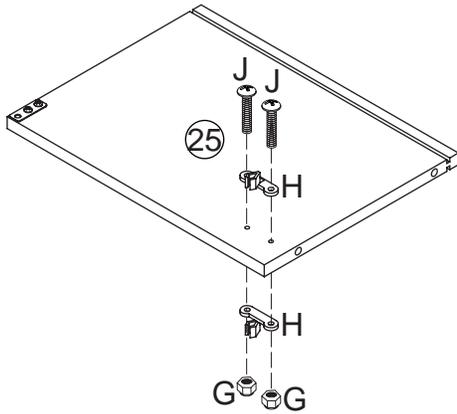


Step 20

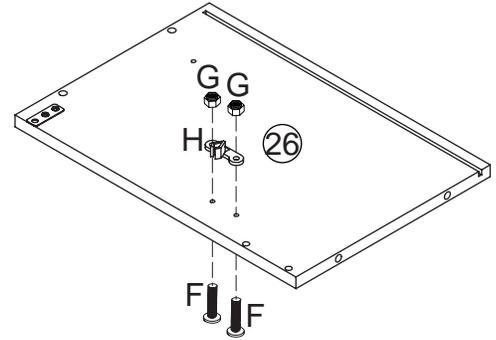

Step 21

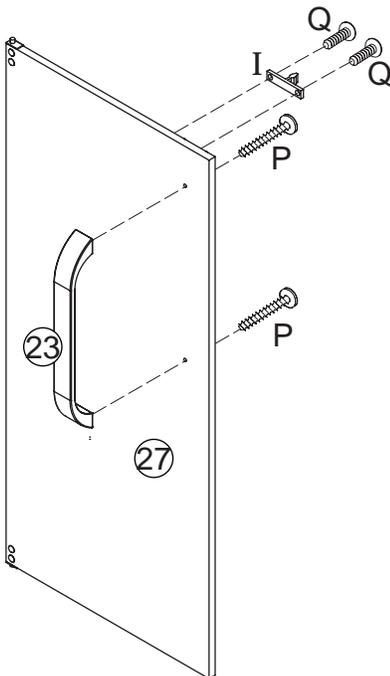

Step 22

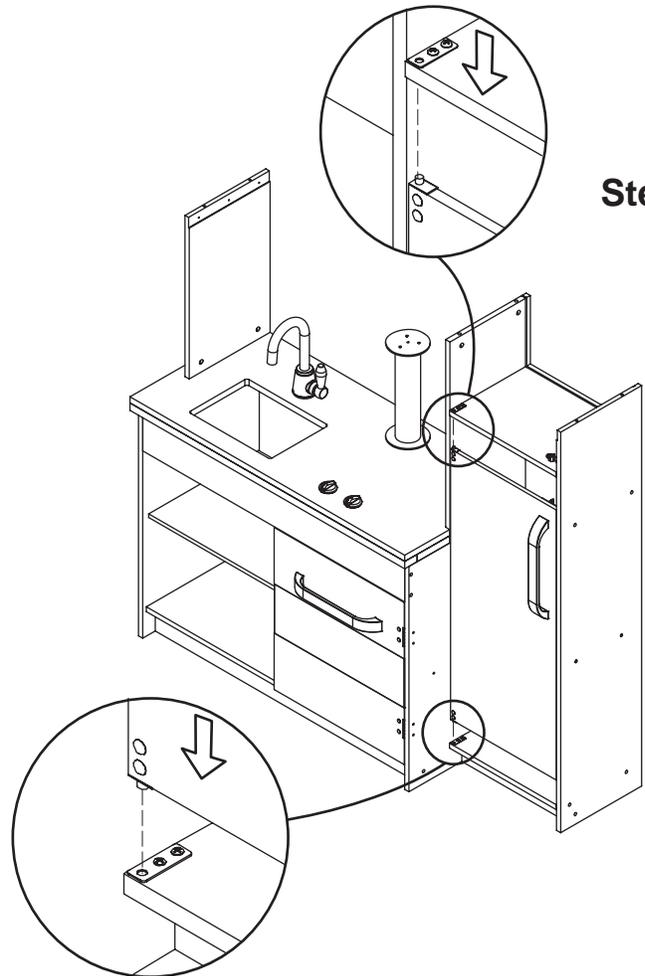

Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen


Assembly Instructions

Item# 53284


Step 23

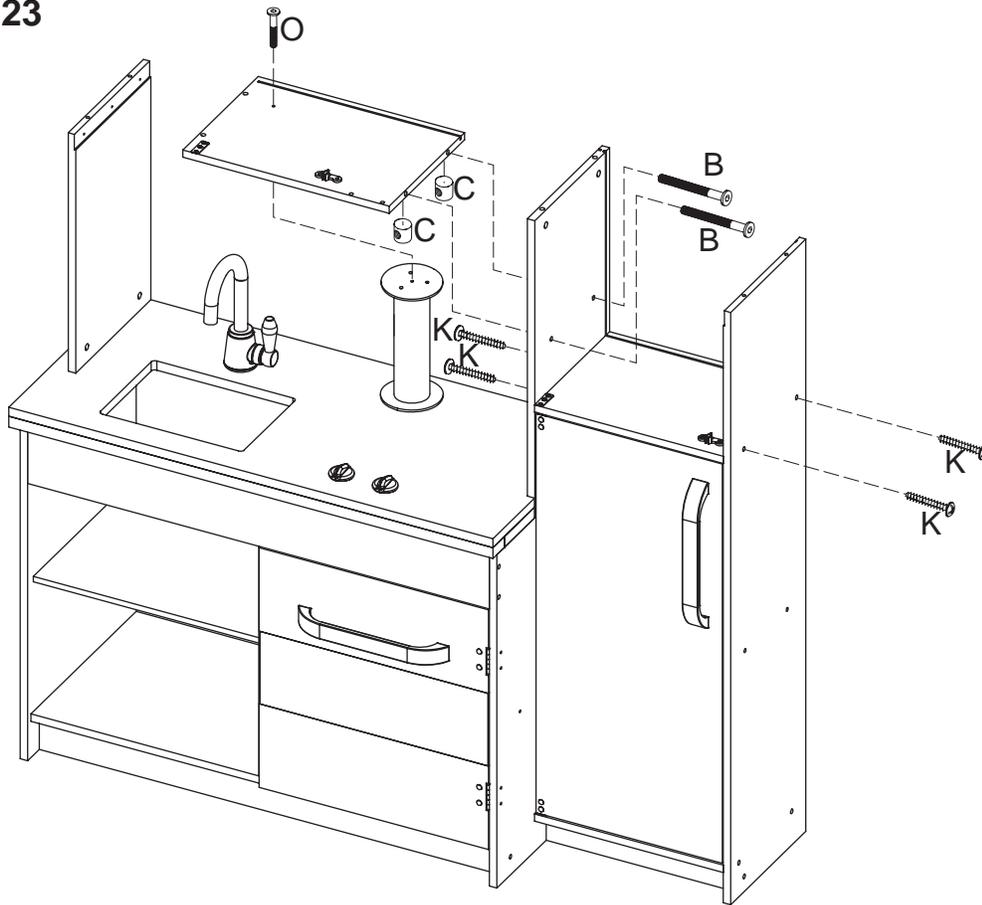

Step 24

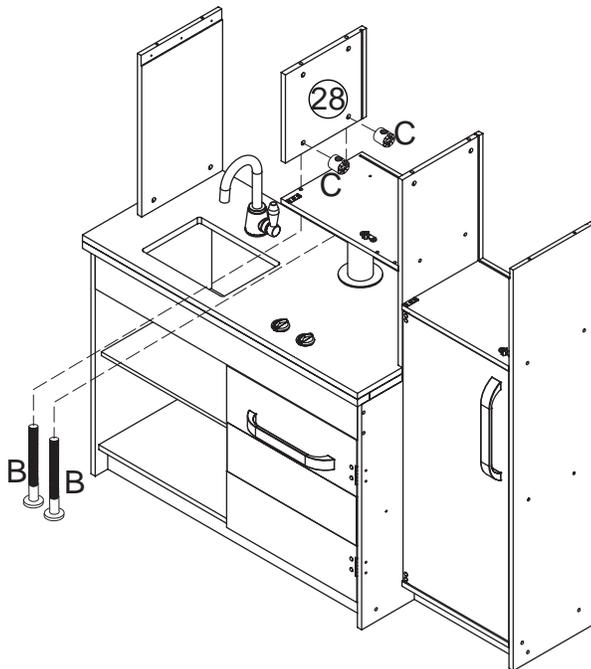

Step 25

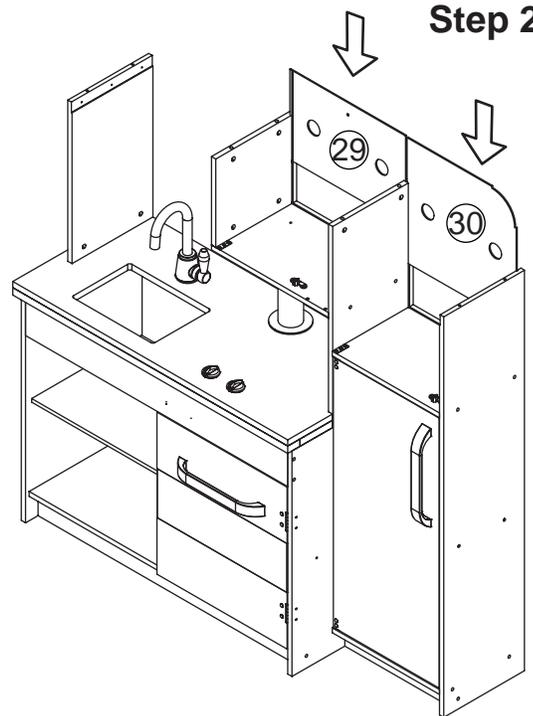


Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen Assembly Instructions

Item# 53284



Step 26

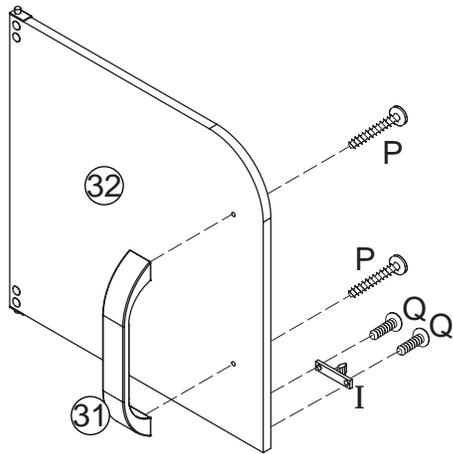

Step 27

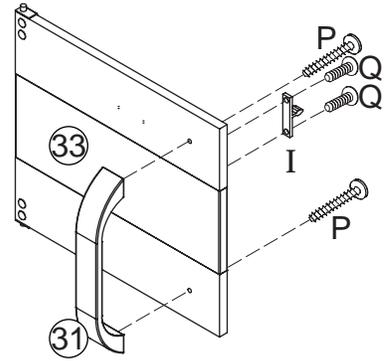

Step 28

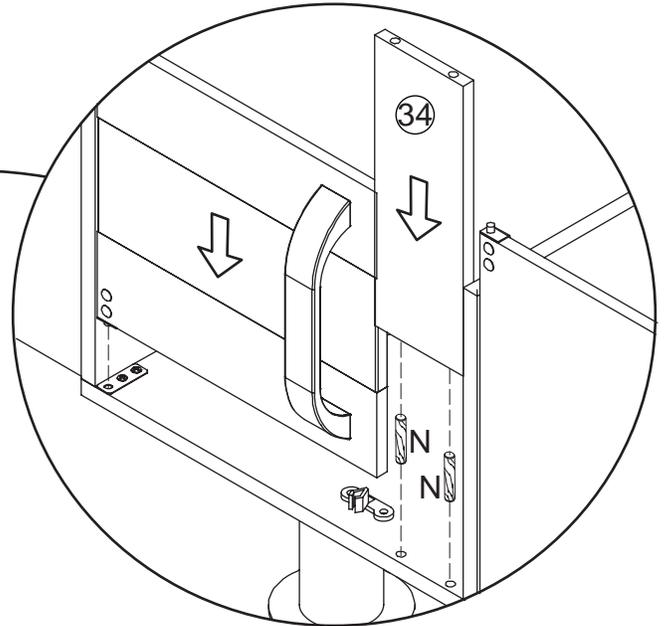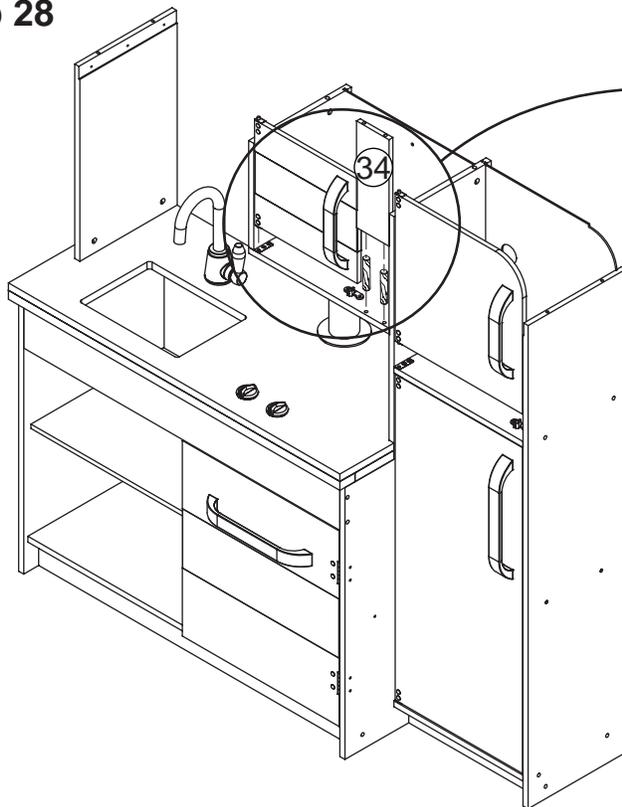

Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen


Assembly Instructions

Item# 53284


Step 29

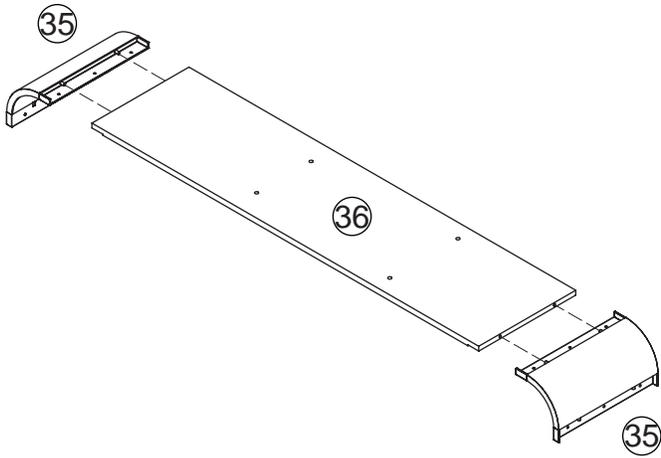


Step 30

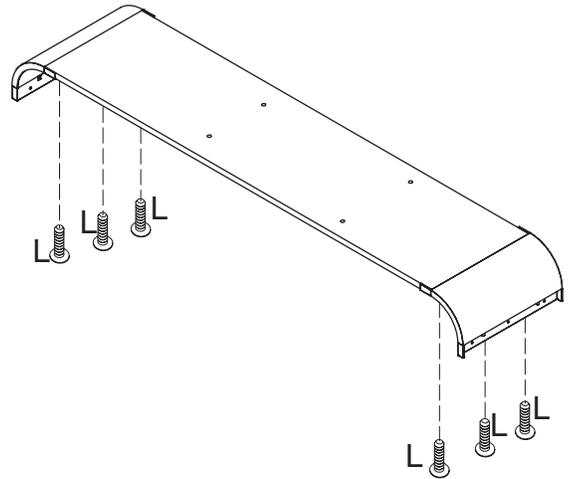

Step 31

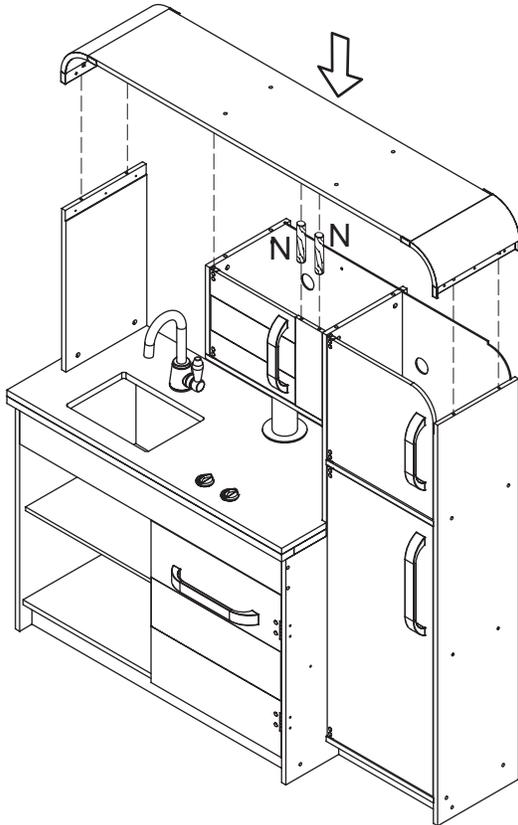

Step 32

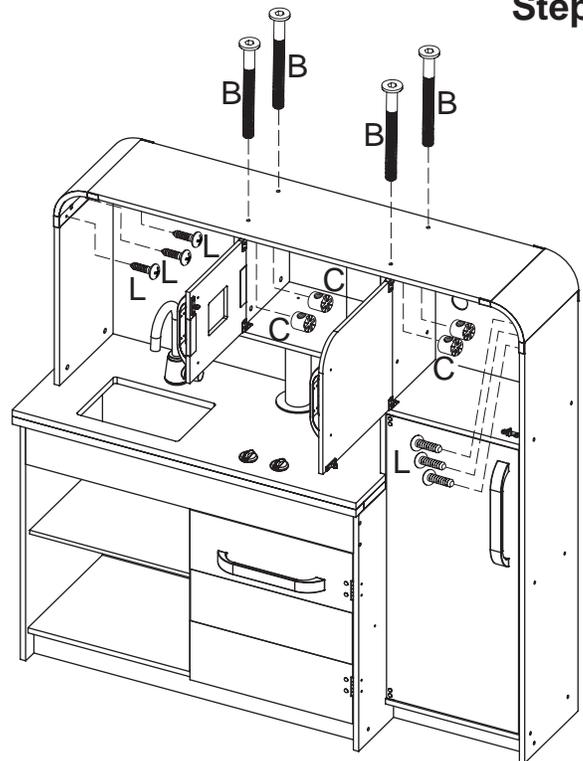

Customer Service
1-800-933-0771
www.kidkraft.com




Ultimate Chef's Kitchen


Assembly Instructions

Item# 53284

Step 33

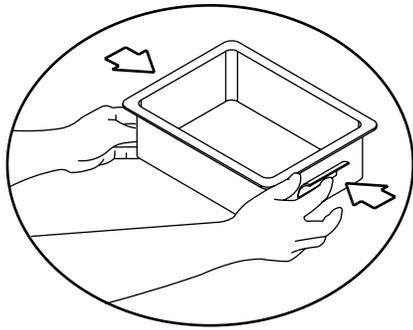


Push sink (part 17) down until it clicks into place.

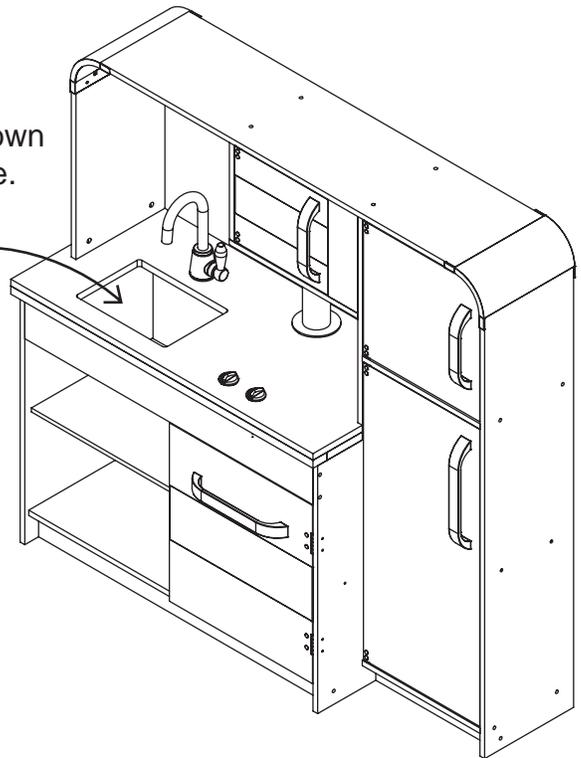

To Remove Sink: The sink may only be removed by an adult. Hold the tabs and lift through the hole to release.

Complete

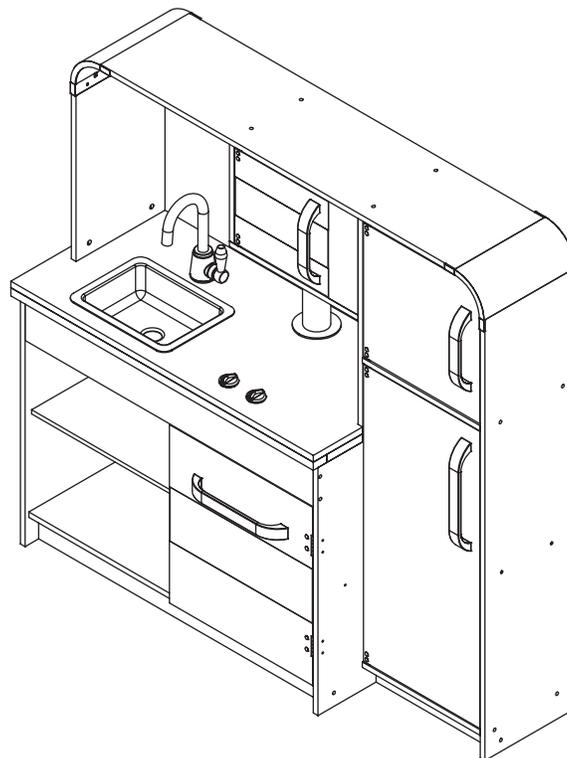

Customer Service
1-800-933-0771
www.kidkraft.com



Parental supervision required.

This toy is intended for children of a specific age or above. Parents should supervise the play area so that children younger than the intended age range do not interact with this toy. Use this toy on the floor. Do not allow children to climb on or around or in the toy.

IMPORTANT INFORMATION - PLEASE READ FIRST

ALL OF OUR WOODEN ITEMS ARE HANDCRAFTED, HAND ASSEMBLED, AND HAND PAINTED. EACH ONE IS UNIQUE. SLIGHT IMPERFECTIONS MAY OCCUR AND ARE NOT MANUFACTURING DEFECTS.

PLEASE NOTE THAT WE DO NOT WARRANTY AGAINST THE USE OF PERMANENT MARKERS, NON-WATER-BASED PAINTS, CRAYONS, OR WASHABLE MARKERS. SOME OF THESE ITEMS CONTAIN PERMANENT COLOR DYES THAT COULD DAMAGE THE SURFACE.

CLEANING INSTRUCTIONS

CLEAN THE SURFACE USING A SLIGHTLY DAMP CLOTH AND MILD DISH WASHING LIQUID IF NECESSARY. DO NOT USE ANY CLEANING PRODUCT CONTAINING ALCOHOL OR AMMONIA. THESE WILL DULL THE SHINY SURFACE OF THE PRODUCT. FURNITURE POLISH WILL ALSO WORK TO CLEAN AND DUST OFF THE SURFACE.

ADULTS: WASH ALL FOOD/DRINK PLAYTHINGS THOROUGHLY BEFORE USE. NOT DISHWASHER, OVEN OR MICROWAVE SAFE.

WE RECOMMEND THAT YOU TEST ALL CLEANING MATERIALS ON THE UNDERSIDE OF ANY SURFACE THAT WOULD NOT BE SEEN DURING NORMAL USE OF THE PRODUCT. IF YOU HAVE QUESTIONS REGARDING THE MAINTENANCE OF THIS PRODUCT PLEASE FEEL FREE TO CALL US.

SOLE AND LIMITED WARRANTY

THIS TOY IS WARRANTED SOLELY AGAINST MANUFACTURING DEFECTS FOR A PERIOD OF 90 DAYS FROM THE DATE OF PURCHASE, WHICH RUNS ONLY TO THE ORIGINAL USER OF THE TOY. IN THE EVENT OF A MANUFACTURING DEFECT, PARTS WILL BE REPLACED OR THE ENTIRE PRODUCT WILL BE REPLACED OR THE PURCHASE PRICE WILL BE REFUNDED, AT THE ELECTION OF THE MANUFACTURER. TO ACTIVATE AND PROTECT THIS WARRANTY, PRESERVE EVIDENCE OF ORIGINAL PURCHASE AND CAREFULLY INSPECT THE CONDITION OF THE TOY PRIOR TO AND AFTER ASSEMBLY, LOOKING FOR MISSING, DEGRADED, BROKEN OR HAZARDOUS PARTS, INCLUDING PARTS WHICH CAN BE SWALLOWED BY A CHILD, CAUSE A CHILD TO CHOKE, OR OTHERWISE CAUSE INJURY. SUCH PARTS MAY INCLUDE FASTENERS AND CONNECTORS. SHOULD YOU OBSERVE ANY DEFECTS, DO NOT USE THE TOY AND IMMEDIATELY NOTIFY THE MANUFACTURER. FAILURE TO DO SO SHALL CONSTITUTE MISUSE. MISUSE, IMPROPER ASSEMBLY, FAILURE TO HONOR A WARNING, FAILURE TO SUPERVISE, INSPECT OR MAINTAIN THE TOY, OR DAMAGE TO THE TOY, WHETHER INTENTIONAL OR INADVERTENT, SHALL INVALIDATE THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

TO SUBMIT A WARRANTY CLAIM PLEASE CONTACT KIDKRAFT CUSTOMER SERVICE AT 1-800-933-0771 FOR INSTRUCTIONS ON HOW TO PROVIDE PROOF OF PURCHASE AND HOW TO RETURN THE ITEM FREIGHT PRE-PAID.