


ASSEMBLY/INSTALLATION INSTRUCTIONS

FIGURE 1

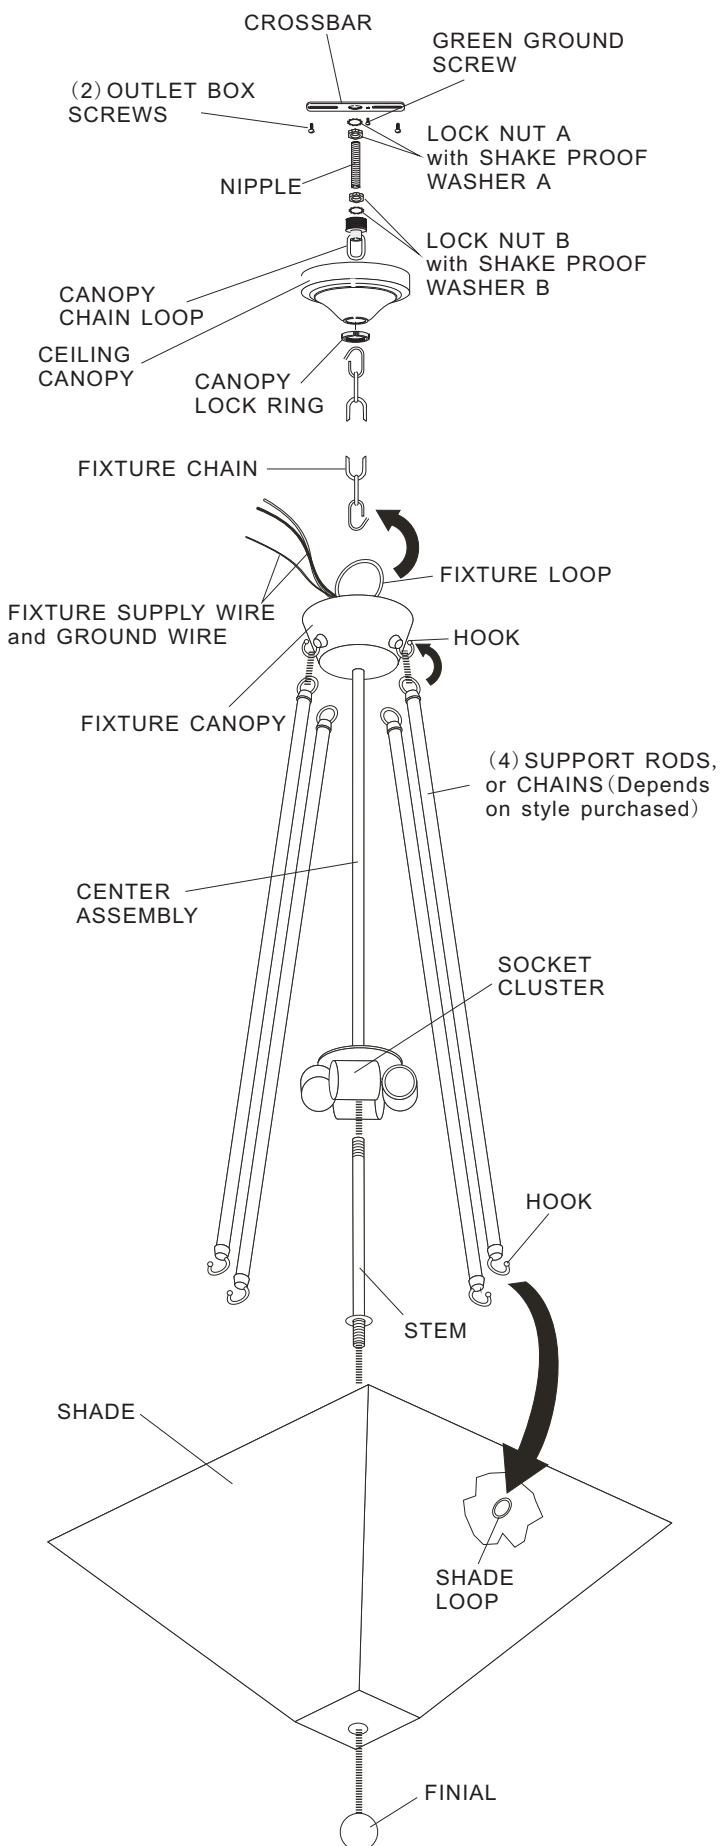

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration (FIGURE 1).
2. Locate the CENTER ASSEMBLY and unravel FIXTURE SUPPLY WIRE AND GROUND WIRE.
3. Locate the CROSSBAR and with power to installation point OFF, secure to OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Locate LOCK NUT A and SHAKE PROOF WASHER A. Thread LOCK NUT A and SHAKE PROOF WASHER A onto top end of NIPPLE. Thread the NIPPLE into the center of the CROSSBAR. Locate LOCK NUT B and thread bottom end of NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
4. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attach to the top of the fixture. Unravel FIXTURE SUPPLY and GROUND WIRE and pass through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order:
 - 1) CANOPY LOCK RING; 2) CEILING CANOPY;
 - 3) CANOPY CHAIN LOOP; 4) SHAKE PROOF WASHER B and LOCK NUT B; 5) NIPPLE; 6) LOCK NUT A and SHAKE PROOF WASHER A.
5. **Make the wire connections: (Quoizel recommends 2 people for next 3 steps)**
Position the fixture underneath the CEILING MOUNTED OUTLET BOX, and pass SUPPLY WIRE and GROUND WIRE through the center of NIPPLE. Use wire connectors (not supplied) Connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE (or RIBBED SIDE) WIRE to the FIXTURE WHITE (or RIBBED SIDE) WIER; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH SIDE) WIER. Make sure there are no exposed wires and wrap each connection with approved electrical tape.
6. Carefully tuck in all wiring into the OUTLET BOX and thread the CANOPY CHAIN LOOP onto the bottom of NIPPLE. Thread LOCK NUT B and SHADE PROOF WASHER B onto top of CANOPY CHAIN LOOP. Tighten with pliers. locate the CEILING CANOPY over the CEILING MOUNTED OUTLET BOX and secure against ceiling by threading the CANOPY LOCK RING onto the CANOPY CHAIN LOOP. Proceed to attach the top of FIXTURE CHAIN to the CANOPY CHAIN LOOP. Carefully compress end of FIXTURE CHAIN to secure.
7. Install bulbs referring to fixture markings and/or labels for maximum wattage.
8. Locate STEM and thread into the bottom center of SOCKET CLUSTER. Hand tighten until snug.
9. Locate the SHADE and position the MOUNTING HOLE at the bottom of the SHADE over the STEM. Pass STEM through MOUNTING HOLE. Proceed to attach (1) HOOK at end of SUPPORT ROD to (1) SHADE LOOP inside of SHADE. Repeat process for remaining arms. (Please note that depending on style purchased, there might be SUPPORT ROD or CHAINS). Locate FINIAL and attach to end of STEM protruding from SHADE. Tighten until snug.
10. Attach tops of (4) SUPPORT RODS (or CHAINS) to the (4) HOOKS on the side of FIXTURE CANOPY.
11. Restore the power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**