6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. auoizel. com UNIVERSAL CROSSBAR **OUTLET BOX SCREWS** (not supplied) LOCK WASHER A LOCK NUT A **NIPPLE** FIXTURE SUPPLY and LOCK NUT B GROUND WIRE LOCK WASHER B CEILING CANOPY **CEILING LOOP KNOB** FIXTURE SUPPLY and **FIXTURE CHAIN GROUND WIRE** PLATE with FIXTURE LOOPS FIXTURE CANOPY **HEX COUPLING** STEM LOCKBALL **CHECK RING** SIDEARM STUD SPACER TUBE SUPPORTARM LOCKBALL STUD \mathcal{H} COUPLING JUNCTION BOX SOCKET SHADE SOCKETCOLLAR

- ASSEMBLY/INSTALLATION INSTRUCTIONS
 - 1.Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
 - 2. Turn power to the installation point OFF at circuit breaker.
 - 3.Unfold the SUPPORTARMS until lined up. Loosen the KNOB on the top end of the FIXTURE CANOPY and remove the PLATE with the FIXTURE LOOPS. Locate the SPACER TUBE, CHECK RING and the FIXTURE CANOPY over the COUPLING on the top center of the JUNCTION BOX as shown. Secure them by threading the end of STEM onto the COUPLING and tighten the HEX COUPLING against the FIXTURE CANOPY with pliers. Please make sure the STUDS on the side of the SPACER TUBE line up with the STUDS on the SUPPORT ARMS.
 - 4. Position the PLATE with the FIXTURE LOOPS back onto the top end of the fixture and secure them with the KNOB. Hand tighten until snug.
 - 5. Locate the SIDEARMS. Match the holes on the SIDEARMS with the STUDS on the STEM and the SUPPORTARMS. Secure them together by threading the LOCK BALLS onto the STUDS. Hand tighten until snug.
 - 6.Locate the FIXTURE CHAINS and determine the hanging height of the fixture. Please note that depending on the chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach the FIXTURE CHAINS onto the FIXTURE LOOPS and the CEILING LOOPS.
 - 7. Fasten the UNIVERSAL CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Proceed to thread LOCK NUTA and LOCK WASHERA onto the top end of the NIPPLE. Thread the NIPPLE into the center of the CROSSBAR. Locate LOCK NUTB onto the bottom end of the NIPPLE. Tighten LOCK NUTA against the CROSSBAR with pliers until snug.
 - 8. MAKING THE WIRING CONNECTIONS:
 - (Quoizel recommends (2) people for the next 2 installations)
 Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
 - 9. With the proper connections made, proceed to thread LOCK NUT B and LOCK WASHER B onto the bottom of the NIPPLE. Lift the CEILING CANOPY upward and slip the center hole over the end of the NIPPLE. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure by threading the KNOB onto the end of the NIPPLE and hand tighten until snug.
 - 10. Position the SHADE over the SOCKET. Secure the SHADE by threading the SOCKET COLLAR onto the SOCKET. Hand tighten until snug.
 - 11. Install bulbs referring to fixture markings and/or labels for maximum wattage.
 - 12. Restore power to the installation point ON. Retain this sheet for future reference.