



IMPORTANT:
TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs are not included.

1. Sit center cage and then center glass shade gently onto center socket. Lock them together by fastening with ring and counter ring. Do not yet install cover.
2. Install arms:
 - A. Remove coupler located below lower center body. And then slide out lock washer and plate. Set them aside.
 - B. Spread open arms so they are evenly spaced out to each other. Fasten lower section of arms securely onto lower center body with machine screws from inside. Tighten them with enclosed hex key.
 - C. Install back the plate onto lower center body by fastening with lock washer and coupler.
 - D. Take fixture wires and ground wire, exiting above upper center body, and thread through short threaded pipe, notched cover, and fixture loop. Then screw short threaded pipe securely into coupler. Slide notched cover through short threaded pipe until its notches properly checks onto extension arms. Then lock all together by fastening fixture loop.
3. Follow enclosed "Over 50 lbs. Chain Suspended Fixture Installation Instructions" for electrical and fixture installation onto ceiling outlet box.
4. Install a standard A-19 medium base of 100 Watt maximum bulb (not included) into center socket.
5. Take the cover and gently glide through in between arms. Then install it on top of cage.
6. Install side glass shade by sitting onto fitter. Then install a G-16 1/2 candelabra base of 60 Watt maximum bulb (not included) into socket. Repeat others.
7. Install font by screwing into coupler located at lower center body.