


# Assembly Instructions For **F2726/6** (E) 12/11

EXTRA	x2	x2	x5	x1	x1	x1	x1	x1
	x2	x6	x4	x1				
	A	B	C	D				

EXTRA	x2	x2	x5	x1	x1	x1	x1	x1
	x2	x2	x5	x1	x1	x1	x1	x1
	A	B	C	D				

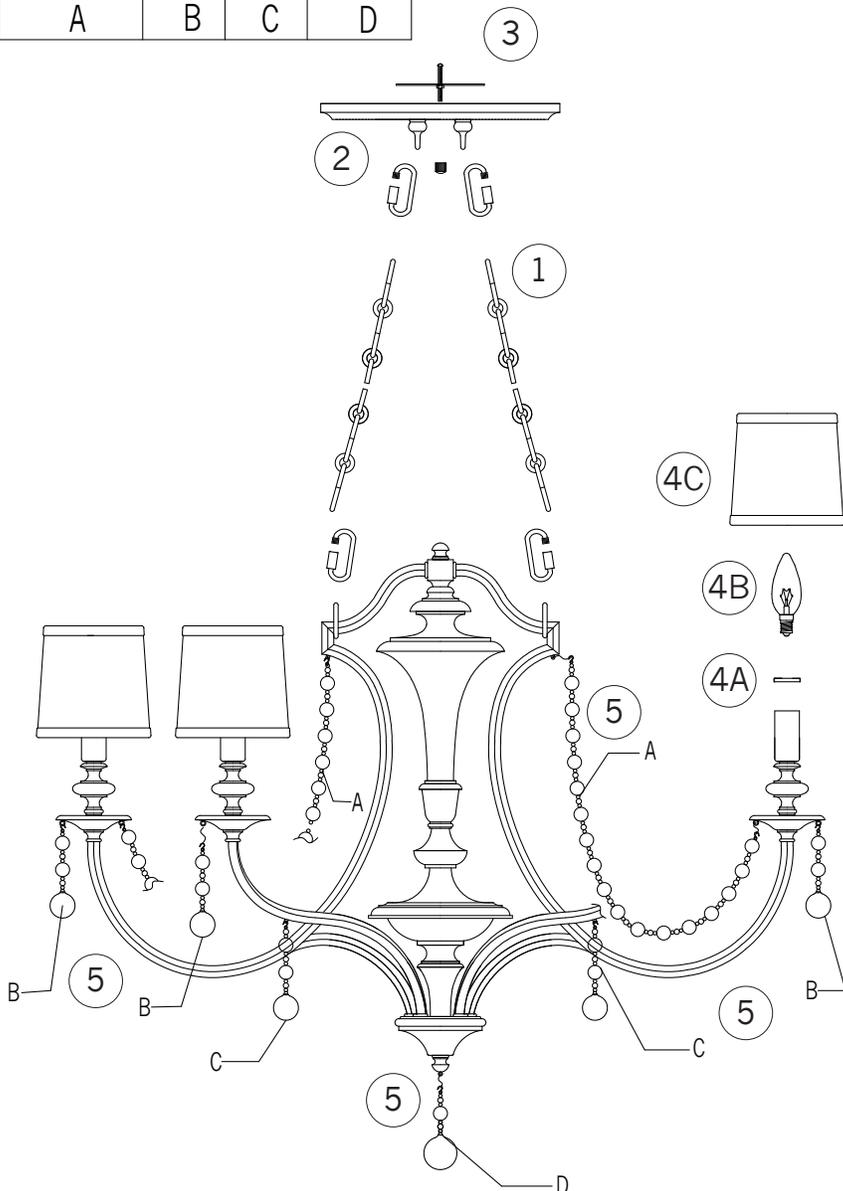

**IMPORTANT  
TURN OFF THE POWER AT THE MAIN FUSE OR  
CIRCUIT BREAKER BOX  
BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulbs not included.

- Attach Chains:
  - Open adjustable chain links by turning small round tube at one side.
  - Hook chain onto open adjustable chain link. Then attach adjustable chain link onto loop located at fixture plate. Close adjustable chain link by turning back small round tube.
  - Repeat other side.
  - At this point determine the desired length of chains to hang. Remove any unwanted chain links. Additional chains can be purchased through your local Murray Feiss retailer.
  - Hook another open adjustable chain link at bottom of each chain. Then attach adjustable chain links onto loop located at top of fixture arm curls. Close adjustable chain links by turning back small round tube.
- Take ground wire (without plastic insulation) and weave through above chain links. Then thread through hole in fixture plate loop. Repeat with fixture wires (with plastic insulation).
- Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture then hire a qualified electrician to create one.
- Slip candle follower on top of candle tubes.
  - Install light bulb (not included). See relamping label at socket area for type and maximum allowed wattage.
  - Install the shade onto the bulb.
- Hang all crystal glass parts as shown on drawing. NOTE: To replace broken crystal or pin, extras are included in hardware bag. Replace by gently bending open pin, remove broken crystal or pin, hook new one, then close back pin. Avoid bending pin into sharp angle.