Bookcase (5926) - Assembly and Operation Manual

Congratulations on purchasing an MDB Family product. This product will provide many years of service if you adhere to the following guidelines for assembly, maintenance and operation. This product is for residential use only. Any institutional use is strictly prohibited.


Please be sure to follow the instructions for proper assembly. Use a Phillips head screwdriver for assembling the product in addition to the Allen wrench included in the hardware box. Do not use power screwdrivers. All of our products are made from natural woods. Please understand that natural woods have color variations which are the result of nature and not defects in workmanship.


DO NOT SUBSTITUTE PARTS. ALL MODELS HAVE THE SAME QUANTITY OF PARTS AND HARD-WARE. YOUR MODEL MAY LOOK DIFFERENT FROM THE ONE ILLUSTRATED DUE TO STYLIS-TIC VARIATIONS.

Ο

IMPORTANT:

As with all infant and baby furniture, it is important to check fasteners, screws, and bolts periodically for tightness. Parents should ensure a safe environment for their children by checking the furniture regularly before placing a child in the product.

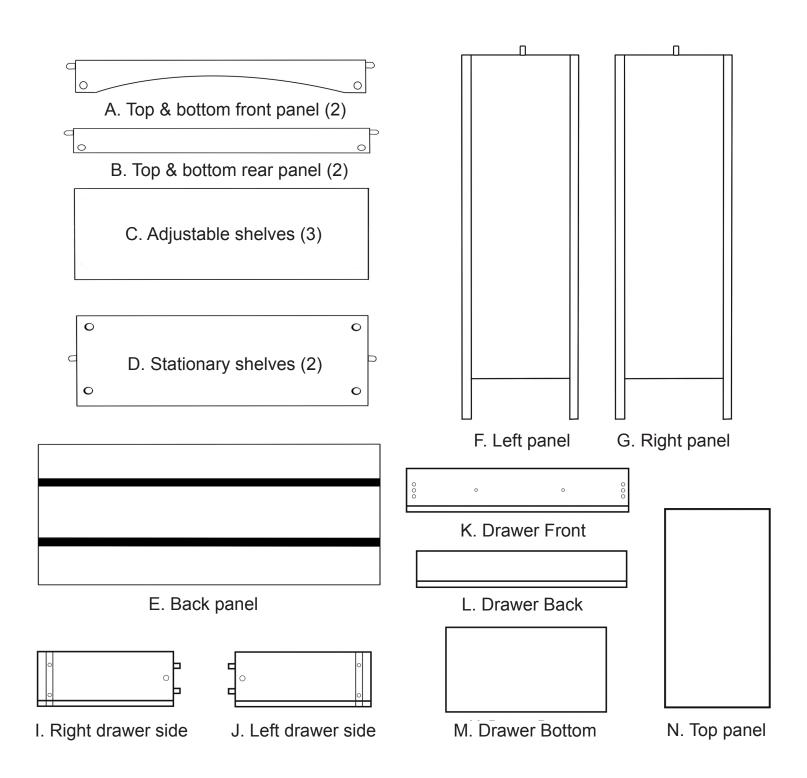


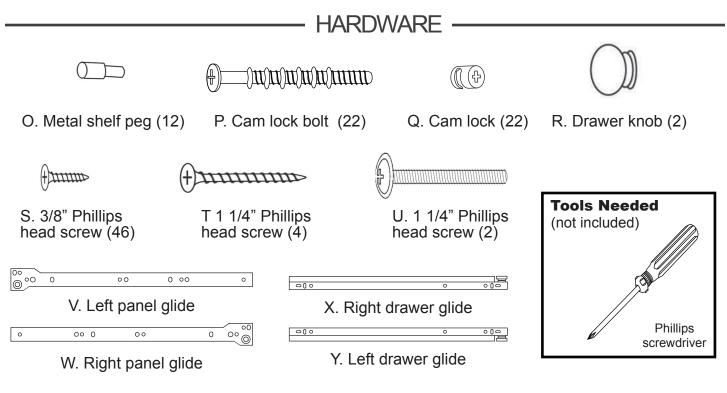


ASSEMBLY INSTRUCTIONS


Screw eight cam lock bolts (P) into the threaded inserts on each side panel (F) and (G). The side panels are labeled left and right for easy identification.


Use three Phillips head screws (S) to attach the left (V) and right (W) panel glide. The glide wheel should face the front of the bookcase with the angled part to the top.

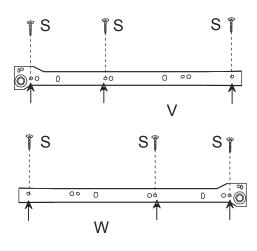

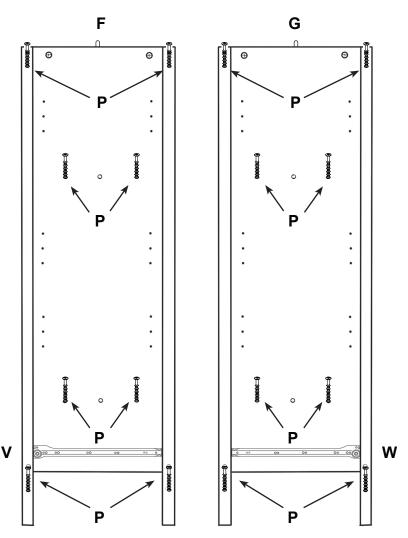



Insert cam locks (Q) and attach the top and bottom front panels (A), top and bottom rear panels (B) and the two stationary shelves (D) to the left side panel (F). Rotate the cam locks to secure the parts. Be sure that the cam locks on the front panels face to the inside of the bookcase.

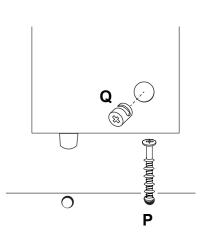


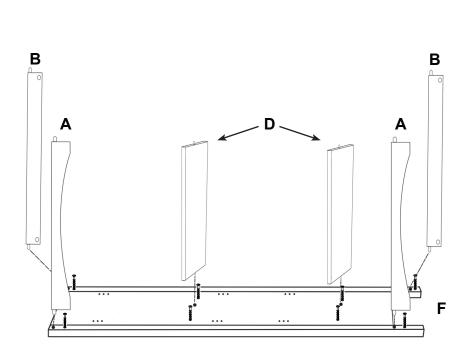



Insert cam locks (Q) in the top and bottom front panels (A), top and bottom rear panels (B) and the two stationary shelves (D). Align the right side panel QG) over the assembly so that all of the dowels and cam lock bolts fit into position. Push the panel firmly in place and rotate the cam locks to secure the panel.

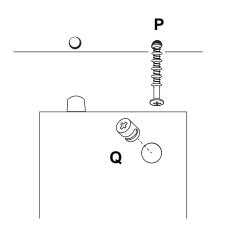

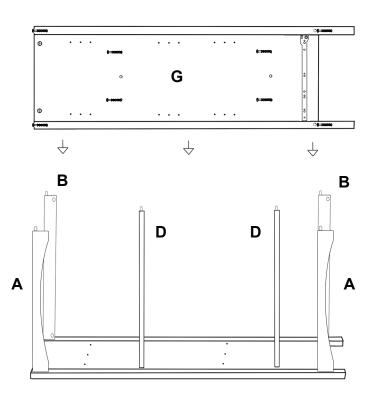

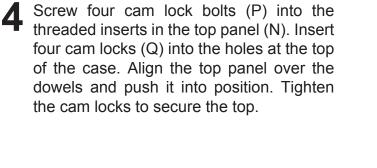

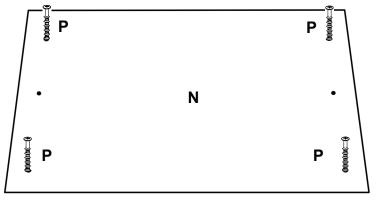

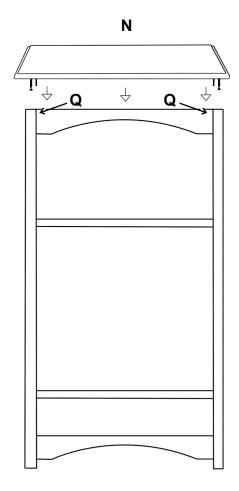



5

Attach the back panel (E) to the case with thirty four Phillips head screws (S).

S


6 Insert the metal shelf pins into the holes at the desired height in the side panels and place the adjustable shelves (C) on top of them.

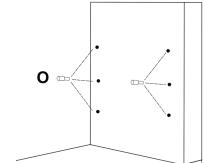

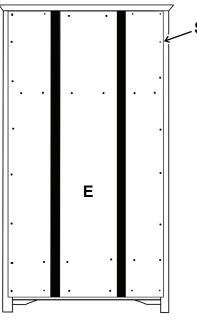


DRAWER ASSEMBLY INSTRUCTIONS


7a Screw two cam lock bolts (P) into the threaded inserts in the drawer front (K). Insert cam locks (Q) into the drawer sides (I) and (J) then rotate the locks to secure the sides.

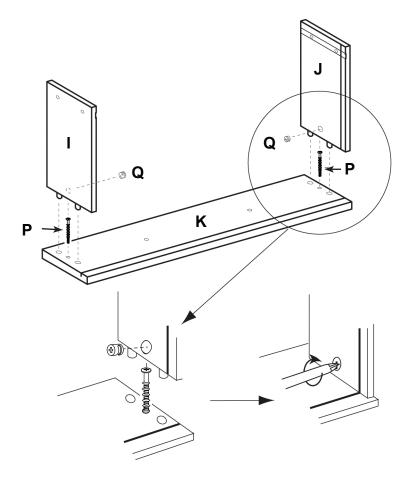


7b Slide the drawer bottom (M) into the grooves in the sides and front of the drawer.

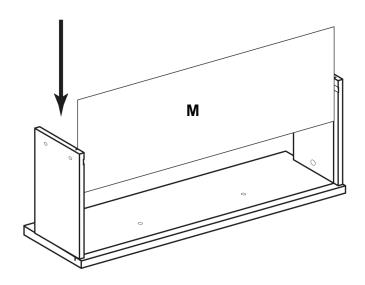


7c Position the back panel (L) on the drawer assembly and secure it with four Phillips head screws (T).

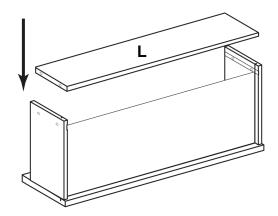


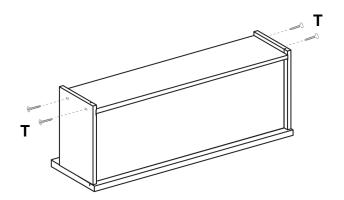

7d Attach the left (Y) and right (X) drawer glides with three Phillips head screws (S) each. Be sure the glide wheel is towards the back of the drawer.

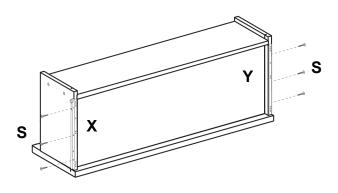

7e Use the two Phillips head screws (U) to attach the drawer knobs (R). Then slide the drawer into the case.

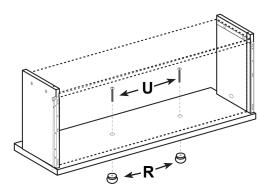




9

FURNITURE ANTI-TIPPING KIT INSTALLATION


Serious or fatal crushing can occur when furniture tips over on children. To help prevent tip-over, follow the steps below to install this anti-tipping strap.

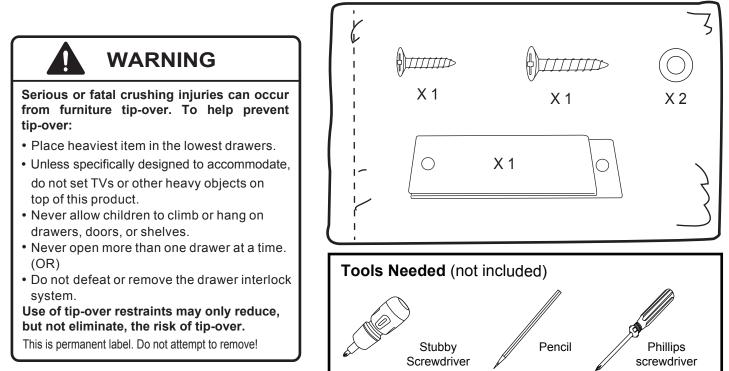

9a Locate a 2" x 4" stud behind the wall, and make a mark.



Install the strap on the wall with long screw and washer.

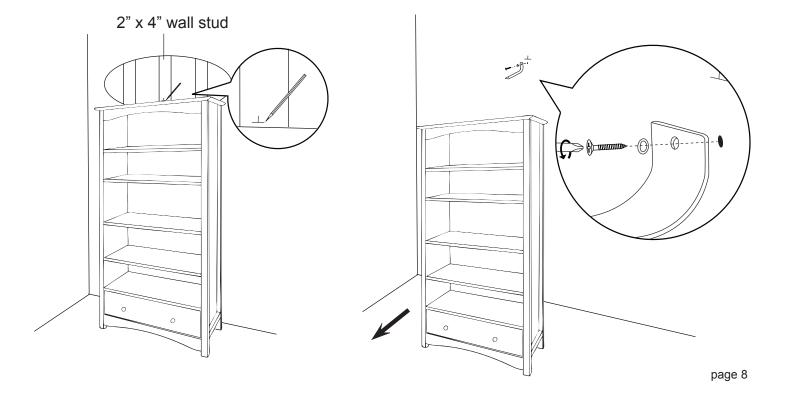

9c Install the other end of strap on the back of dresser with short screw and washer into the wood framing of the dresser.



Storage:

• Pine woods exchange moisture with the air adjusting to major changes in room temperature and humidity. Therefore, it is best to place your furniture away from heating or air-conditioning vents.

• Sunlight is not friendly to solid wood furniture and prolonged direct exposure to harsh sunlight can discolor the finish. Be careful not to place your furniture in direct sunlight for extended periods of time. As with all your fine furniture, blot up spills immediately.

Care and Cleaning:

• Do not scratch or chip the finish. Do not use abrasive chemicals for cleaning. Clean with mild soap on a damp, soft rag. Rinse and dry thoroughly. If you ever refinish this furniture, be sure to use only a non-toxic finish specified for children's products. If you choose to refinish this furniture, the warranty will be voided.

Registering your product is even easier than before. You can register your product on our website at : www.themdbfamily.com

IF YOU WOULD LIKE TO ORDER REPLACEMENT OR MISSING PLEASE VISIT US AT: WWW.THEMDBFAMILY.COM

OR YOU CAN CONTACT US BY MAIL: MDB FAMILY 855 WASHINGTON BLVD. MONTEBELLO, CA 90640

