 


Battery Powered Color Changing Wireless LED Wall Sconce

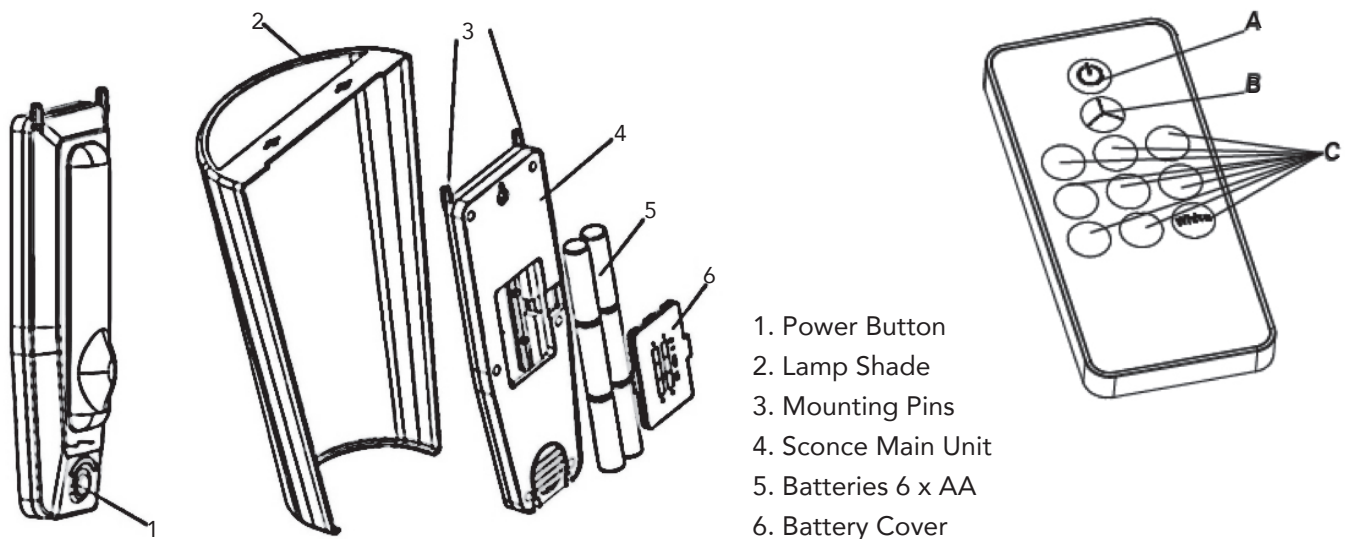

OPERATING INSTRUCTIONS

1. Remove rear battery cover (6) and place 6 AA alkaline batteries (not included) with the polarity as shown in the battery door. Replace battery cover.
2. Determine where the product is to be mounted and insert nail or screw (not included) in the wall. Mount main unit back plate (4) on wall by sliding hanging groove over inserted nail or screw.
3. Slide shade (2) onto main unit (4) and press fit the shade over the mounting pins (3) to secure into place.
4. Push power button (1) located on the bottom of unit to illuminate.
Note: There are 10 light modes: color changing, white, red, blue, green, yellow, light blue, light green, light purple, and purple for your selection. Simply push the power button to go to different modes. Push and hold down the power button to turn light OFF.
5. Remote control Instructions: Remove pull tab between the battery and the connector. To activate light, press Remote B (color changing button) or any button in Remote C. To change color, press desired color button in Remote C. To use the color changing mode, press Remote B. Press Remote A to turn light OFF at any time.



PLEASE NOTE

This unit contains a built in 4 hour timer which is activated immediately. The unit will power off after 4 hours of use. This helps maximize battery longevity. The unit can be turned back on manually or by using the remote control to commence a new 4 hour session. The unit can be turned off manually or by remote control at any time.

SAFETY

1. Do not disassemble the back plate.
2. To prevent equipment damage and possible injury, never mix batteries with different chemistries or voltages in the equipment at the same time.
3. Consumed batteries need to be disposed of properly. Follow the disposal instructions on the battery package. Battery selling retailers provide special containers for environmentally friendly disposal.
4. Remove batteries from unit for long term storage to prevent damage from battery leakage.

REPLACING BATTERIES

1. Remove rear battery cover remove old batteries and replace with new AA alkaline batteries (with the polarity as shown in the battery door). Remove rear battery cover. Dispose of used batteries as instructed.
2. Replace back plate on wall and slide shade onto bracket over mounting pins to hold into place.
3. For remote control: Replace old remote battery with a new CR-2025 button cell battery.