



FOR THE SUBMERSIBLE PUMP

INTRODUCTION

Fountain pumps are carefully inspected and tested to ensure both safety and operating performance. However, failure to follow the instructions and warnings in this manual may result in pump's damage and/or serious injury. Be sure to read and save this manual for future reference.

LIMITED WARRANTY

This product is guaranteed for a period of 12 months from date of purchase for material or manufacturing defects. Certificate of guarantee must be filled out completely by resale dealer and must accompany equipment along with the receipt in case it is submitted for repair. Guarantee consists in guaranteed substitution of defective parts. Guarantee is neither considered to void improper use, nor damages caused by improper handling or negligence on the part of the buyer. All equipment must be sent postage paid.



YOSEMITE HOME DECOR
4250 WEST SHAW AVE
FRESNO, CA 93722

WARNING

- Do not connect to any voltage other than that shown on the rating label of the pump.
- Do not pump flammable liquids. The appliance is only intended to be used in fountains.
- The maximum operation depth is 1.0m.
- Do not use with water above 95° F.
- The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- The pump is not intended for use by young children or infirm persons without supervision.
- To reduce the risk of electrical shock, use only the pump in portable self-contained fountains no larger than 5 feet in any dimension.
- The connection cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

CAUTION

Always disconnect from electrical outlet before cleaning, maintenance and handling the pump.

Don't operate without water.

Do not lift the pump by holding the power cord.

Do not use the pump in liquids having a temperature exceeding 95°F. Use the pump only in freshwater.

Please use the pump only when it is completely submerged in water.

Do not use the pump in swimming pool or marine areas.

PERFORMANCE

A clogged or dirty intake screen will greatly reduce performance.

If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting the intake. If less flow is desired, adjust the regulator on the sealing cover to restrict the flow.

Do not let the pump run when not submerged in water. That may damage the pump. Always submerge the pump first, and then plug in the electrical outlet. At the beginning, it probably can't pump water, because there is air in the pump and the tube. Don't worry about it. Please pull out and insert electrical outlet several times, it will work normally.

MAINTENANCE

Unplug before cleaning.

To clean the pump, remove the back cover, sealing cover and the impeller.

Use a small brush or stream of water to remove any debris

CAUTION: The pump shaft can not be removed.

If the pump fails to operate, check the following:

- Check the outlet and try another outlet to ensure the pump is getting electrical power.
NOTE: Always disconnect from electrical outlet before handling the pump.
- Check the pump outlet and tubing for kinks and obstructions. Algae may block them, please flush out the algae with a garden hose.
- Check the inlet to ensure it is not clogged with debris.
- Remove the pump inlet to access the impeller area. Turn the rotor to ensure it is not broken or jammed.
- Monthly maintenance will prolong your pump's life.
NOTE: Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop". This will prevent water from running down the cord into the electrical outlet.

OWNER'S MANUAL

FOR THE FOUNTAIN

The fountain is in-door decoration.

When you open the package, please check all the parts below and make sure no missing any part:

1. Fountain body
2. Water pump & Transformer
3. LED light

ASSEMBLY:

1. Place the fountain on a level.
2. Connect the water pump to the tube, make sure they are tight.
3. Add enough water in to the fountain, make the water will just cover the pump.
4. Switch the plug on an electrical socket, turn it on. Make sure the fountain will be running well.


REMARK:

1. Use a proper power source as indicated on the pump label. Keep the cord away from high temperatures and/or heat sources.
2. Operate with freshwater only. Avoid heavily chlorinated water and water with high PH liquids. Distilled water is advisable.
3. If the water pump does not work, please check your power, turn it on again.
4. If the top glass ball does not run well, please turn off the power, make sure the fountain is on a level surface, and the ball is clean. Then replace it turn on the power.
5. Before using the fountain, please read manual for the submersible pump.

RATINGS

1. adaptor
 - model: JBA35V-12-250
 - Input for adapter: 230-240 V 50 Hz
 - Output for adapter: 12 V 50 Hz, 250 mA
2. pump:
 - model: AP-333LV
 - input: 12 V 50 Hz 2.5 W

Correct Disposal of this product

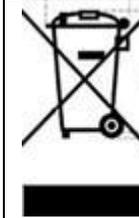

-This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.