



YOSEMITE  
HOME DÉCOR

# Electric Fireplace CARE & USE GUIDE

Yosemite Home Décor

1-800-305-9872

 
[www.YosemiteHomeDecor.com](http://www.YosemiteHomeDecor.com)



## IMPORTANT INSTRUCTION

Read all instructions and warnings carefully before starting installation to reduce the risk of fire, electric shock and injury to persons.

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces, such as surfaces near the heater outlet or light bulbs. The grill directly in front of the heater outlet becomes hot during heater operation. If provided, use handles when moving this heater. Keep combustible materials, such as clothes, pillows, furniture, bedding, papers and curtains at least 3 feet from the front of this appliance.
3. **CAUTION:** Whenever the heater is left operating and unattended, extreme caution is necessary if children or invalids are nearby.
4. Do not install the heater directly on carpet or a similar surface, which may restrict air circulation beneath the unit.
5. Always unplug heater when not in use.
6. To disconnect heater, turn controls to off then remove plug from outlet.
7. Do not use outdoors.
8. This heater is not intended for use in wet locations, such as bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
9. Do not operate any heater with a damaged cord or plug, or if the heater has malfunctioned, or if the heater has been dropped or damaged in any manner. Discard heater, or Return heater to authorized service for examination, adjustment or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs and runners. Arrange cord away from traffic areas and where it will not be tripped over. Do not route cord under furniture or appliances
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or may damage the heater.
12. To prevent a possible fire, do not block heater outlet or any ventilation or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.

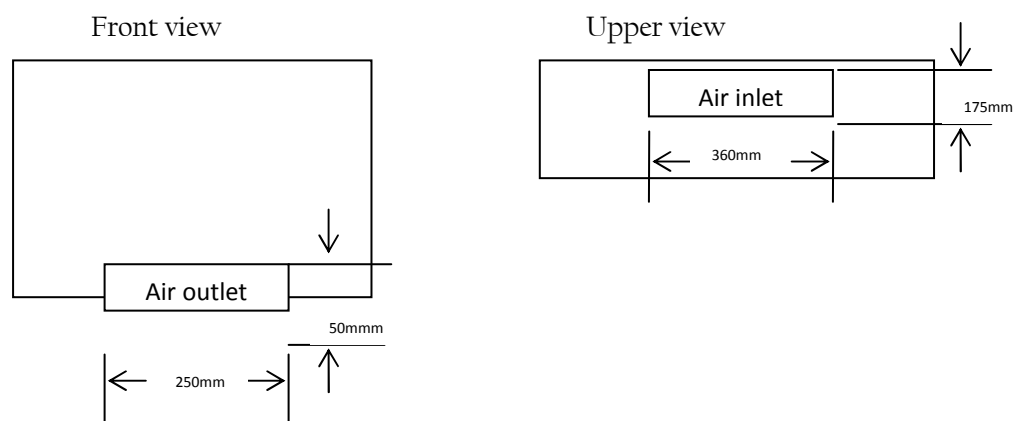

13. All electrical heaters have hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored or where the unit will be exposed to flammable vapours.
14. Do not modify this heater. Use it only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
16. Do not burn wood or other materials in this heater.
17. Do not strike heater glass.
18. Always use a certified electrician should new circuits or outlets be required.
19. Always use properly grounded, fused and polarized outlets.
20. Always use ground fault protection where required by electrical code.
21. Always disconnect power before performing any cleaning, maintenance or relocation of the heater.
22. When transporting or storing the heater and cord, keep in a dry place and free from excessive vibration.
23. The heater must not be located immediately below a socket-outlet.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. Heater is for household use only.

## MAINTENANCE INSTRUCTIONS

Yosemite Home Décor's Electric fireplaces use Incandescent candelabra bulbs, rating voltage 120 volts, 40 Watt, E-12 small socket base light bulbs.

### Changing Light Bulbs

Disconnect power supply before beginning any maintenance.

1. Light bulbs need to be replaced when you notice a dark section of the flame or when clarity and detail of the coal effect disappears.
2. Unscrew the locking nut on the side of the brackets and then remove the face. This is done by lifting the face up and swinging the face clear of the fire. Care should be taken not to damage the face. Removal of the face may require two people.
3. On the base of the fire there are screws on both sides. These need to be removed to allow the cover to slide down. (Figure 10).

### WARNING

- Allow at least five minutes for the light bulbs to cool before touching the bulbs to avoid burning. Make sure power supply is disconnected.
- Examine the bulbs to determine which one needs replacing. Remove the non working bulb and replace with a new long life bulb. Hold the socket while unscrewing the old bulb and while screwing in the replacement bulb. (Figure 11)
- The bulbs are 40 watt candelabra bulbs available at most hardware or Do it Your Self or Lighting stores.
- Once the bulb has been replaced, replace the cover, screws and face.

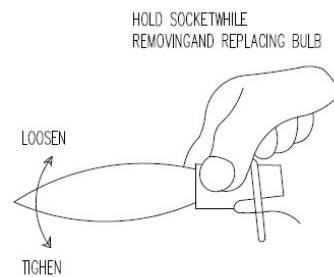 
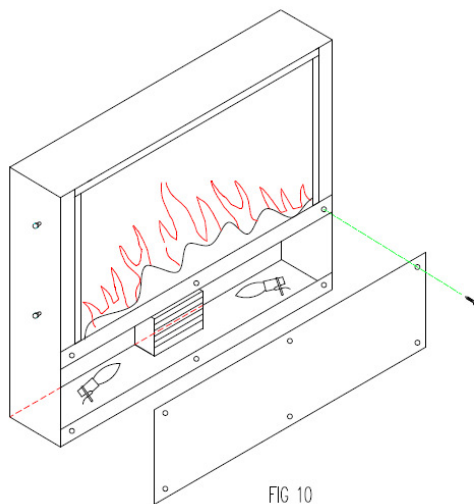 


FIG 11