

CONTACT YOUR DISTRIBUTOR FOR ANY PRODUCT CONCERNS THAT ARE NOT ADDRESSED BELOW.

Thank you for your Brand New World's early childhood furniture order. We manufacture our furniture with quality components and dedicated craftsmanship. All furniture units are assembled in the United States.

ASSEMBLY INSTRUCTIONS

Attaching Legs

Legs must be attached on all Preschool & School Age furniture units. Legs on Toddler furniture units are attached at the factory.

- Lay the furniture on its back. Locate the 4 holes (one near each corner) on the bottom of the unit.
- Insert a leg into a hole and turn the leg to screw it into the base of the unit. Continue until all 4 legs are securely attached. Do not over tighten as damage may occur. Carefully, set the furniture unit upright.

CLEANING INSTRUCTIONS

Enviro-Child® and Vinyl Upholstery

- Wipe upholstery with one of the following solutions and then dry thoroughly.
 - Solution of mild detergent and water
 - Alcohol base solutions
 - Disinfects with a bleach and water solution of no more than 1 part bleach to 5 parts water.
- Stain Removal
 - Blot fresh spills immediately. Clean stains immediately with a clean cloth dampened with one of the above cleaning solutions.
 - Most stains and spills wipe clean immediately.
 - Enviro-Child Upholstery: Stains caused by ballpoint pens, markers and pencils can leave a mark which may diminish in appearance with future cleaning.
 - Vinyl Upholstery: Stains caused by ballpoint pens, markers, pencils, mustard, grape juice, etc. will cause a permanent stain unless cleaned within an hour.
- Professional hot water extraction or steam cleaning is **NOT** recommended.

Winslow Upholstery

The Winslow GreenShield™ enhanced upholstery resists spills and stains and cleans easily with the following proper cleaning procedures. Remove stains promptly for best results.

- Use only water-based cleaners. Most stains can be cleaned with an absorbent cloth while the spill is still fresh. Wipe off with water-moisten cloth. Air dry.
- For stubborn spills, use a mixture of liquid detergent and water. Wipe lightly in a circular motion. Remove all soap residues from the surface with water-moisten cloth. Air dry. **Use only water-based cleaners.**
- **DO NOT** use bleach, disinfectant or any cleaning product with a bleaching agent.
- Professional hot water extraction or steam cleaning is **NOT** recommended.
- For best results, wipe your upholstery units periodically with clean, water-moisten cloth.

SAFETY COMMITMENT

Brand New World products are certified through testing at independent laboratories to meet and, in many cases, exceed safety guidelines set by the CPSIA, CCPSA and CA117-2013.

WARRANTY

All Brand New World furniture units are warranted to be free from defects in material and workmanship for a period of 1 year. Brand New World will replace or repair, at our option, the item free of charge. This warranty does not cover damage from abuse, misuse, vandalism, normal wear and tear and cosmetic fading. Alterations of Brand New World products will void warranty. The foregoing warranty is in lieu of and excludes all other warranties, whether expressed or implied by operation of law or otherwise, including, but not limited to, any implied warranties of merchantability or fitness for a particular purpose.

