## ASSEMBLY INSTRUCTIONS

### SATELLITE SPEAKER WALL MOUNT PAIR SATELLITE SPEAKER WALL MOUNT 5-PACK

### PAIR PARTS LIST

## 5-PACK PARTS LIST

A) Wall Mount Assembly (5pcs.)

D) Wall Anchor Screw (20pcs.)

E1) 6/32" short speaker screws (10pcs.)

B) Speaker Mount (5pcs.)

C) Wall Anchor (20pcs.)

F) Hex Nut (10pcs.)

A) Wall Mount Assembly (2pcs.) B) Speaker Mount (2pcs.) C) Wall Anchor (8pcs.) D) Wall Anchor Screw (8pcs.) E1) 6/32" short speaker screws (4pcs.) E2) 6/32" long speaker screws (4pcs.) E3) 1/4" short speaker screws (4pcs.) E4) 1/4" long speaker screws (4pcs.) F) Hex Nut (4pcs.)

### **REQUIRED TOOLS** (NOT INCLUDED)

-Phillips Tip Screwdriver -Drill

 
- -Pencil
  - 1. Unscrew Wall Mount Assembly (A) from Speaker Mount (B).
  - 2. Place Wall Mount Assembly (A) on desired location on wall and mark with the four holes with a pencil.
  - 3. Drill holes into marks.
  - 4. Insert Wall Anchors (C) into holes. Wall Anchors (C) should fit tightly into predrilled holes.
  - 5. Align Wall Mount Assembly (A) to holes and secure with the Wall Anchor Screws (D) into plastic Wall Anchors (C). (screw driver not included)
  - 6. Attach the back of speaker to Speaker Mount (B) with appropriate speaker screw (E1-E4) (Fig.1). See below for instruction for keyhole speakers.
  - 7. Screw speaker with Speaker Mount (B) to Wall Mount Assembly (A). Position at desired angle as speaker tightens to Wall Mount Assembly (A). Fig.3

## Keyhole Speaker Instructions:

Unscrew the Speaker Mount (B) from the Wall Mount Assembly (A). Place a Hex Nut (F) inside the Speaker Mount (B) Fig.2 Screw appropriate speaker screw (E1 or E2) with additional Hex Nut (F). Leave at least 0.25" thread unscrewed. Screw Speaker Mount (B) to Wall Mount Assembly (A). Position at desired angle. Fig.3. Hang Speaker into 0.25" of speaker screw.





Santa Fe Springs, CA USA U.S. AND OTHER FOREIGN PATENTS PENDING ALL RIGHTS RESERVED web site: http://www.atlantic-inc.com




MADE IN CHINA


Mar 2004

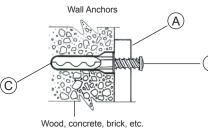

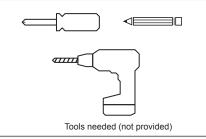


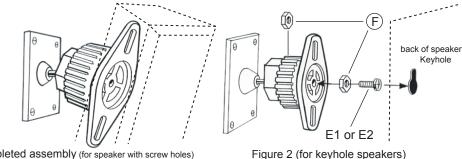

  Completed assembly (for speaker with screw holes)







Adjustable position Figure 3

English R 1.0 041011

\* Phillips screwdriver and pencil needed. (not provided)

# ASSEMBLY DIAGRAMS

