

Jetrunner Ride On Toys Troubleshooting Guide

Date: 5/14/2012

Q: No Hi Speed

A: 1. Check battery fuses if burnt. – Yes – Replace with enclosed spare fuse and recharge batteries overnight. See remarks below.

2. Evaluate both battery wires if disconnected. – Yes - reconnect battery wire harness if not torn.

3. Check for dead battery. Connect battery directly to motor. – Yes - Please contact CTM for battery replacement.

Note: A good battery makes a motor turn when attached to battery terminals.

Remark:

1. Location of Batteries:

a. Underneath the Hood (CT-885/558)

b. Underneath the Seat (CT-658/558) .

2. Locate red cable coming from inside battery.

3. Open fuse box, replace burnt fuse with spare if needed.


4. Evaluate second battery fuse.

5. Test unit in HI speed only.

a. If problem fixed, re-charge batteries for four hours before use.

Note: Each battery comes with two 30amp fuses; One fuse is “in line” with the red wires. Second fuse located outside fuse box.

***** UNIT REQUIRES BOTH BATTERIES OPERATIONAL FOR HI SPEED OPTION*****

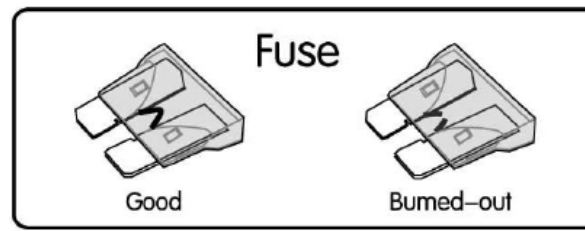

Q: Unit continuously burning fuses and shutting off.

A: 1. Rider using toy on grass, sand, slopes or loose gravel areas?

Remark:

- Toy is designed to ride on smooth level concrete surface areas.
- An 18amp Circuit Protector shuts down unit for 5seconds
- Replace any blown fuses and recharge batteries for 24hrs.

3. Rider over the weight capacity? Toy weight capacity:

- **110 lbs** for CT-658, 558, 885, 855.
- **55 lbs** for CT-568.

4. Check if motors are defective by connecting one battery directly to motor –if not running - Contact CTM for motor replacement.

Note: A good motor automatically turns when connected directly to battery terminals.

Q: The Vehicle does not move.

- A:
1. Check for defective batteries –Yes – Replace blown fuses or loose connections.
 2. Check pedal switch for loose wires. – if loose– Re-connect cables to their proper color order ensuring a tight connection:
 - CT-658, 558 rear to front: red, brown, black.
 - CT-885, 855 white, grey, black.
 3. Check HI/LOW, FWD/REV switch for loose connection – if loose– Reconnect loose connections from underneath body frame



4. Check if the pedal switch is defective – Disconnect and tap red and brown wires together – if defective– Please contact CTM for Pedal Switch replacement.

Note: By tapping red and brown wires, both motor will spin.

- *Right side motor has a red terminal, plug connector to red rear cable.*
- *Left side motor has a black terminal, plug connector to black rear cable.*
- *HI speed is only operational in fwd speed. NOT operational in reverse.*