 
 

 
10×30 d-12-11








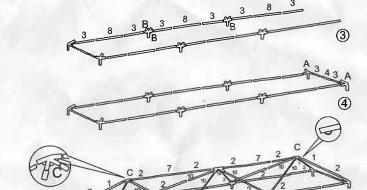



5	
15	5 5
M ⁵ 5 5	7

	- 127		
1		3	4PCS
2	-C	<u> </u>	16PCS
3	4	_	16PCS
4		_	2PCS
⑤			8PCS
6	- 000		8PCS
7			2PCS
8]	6PCS
100]	8PCS
Α	F	4PCS	
В	£ * 3	4PCS	
С	₩	2PCS	
D	M	1PCS	
Е	4	8PCS	
C	8		8PCS
0		1	16PCS
A	alalar		1PCS
			6PCS
			2PCS

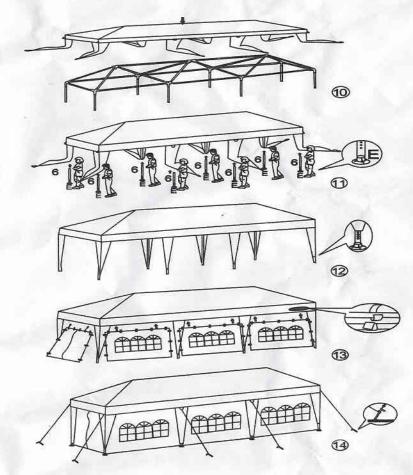

Instruction

- 1) Take the canopy out of the box carefully and place on dry surface (sand, grass, or hard surface).
- 2) please have at least 4 people helping with the assembly, in order to avoid the damage of steel pole.
- 3) Secure tent in windy conditions by using the rope that is located on each side of the canopy and hammering stakes into the ground at a 30 degree angle to balance the sides of tent. If the canopy is placed on a hard surface, secure the 4 sides with bricks or sand bags to weigh the canopy down.
- 4) DO NOT ASSEMBLE TENTS IN RAIN, SEVERE WIND OR SNOWY WEATHER CONDITIONS, BECAUSE THIS WILL DAMAGE YOUR TENT. It is the owner's responsibility if the tents are set-up and damaged during these conditions.
- 5) Store your canopy/tent in a cool dry place when not in use.