

CICGRIND

Corn & Grain Grinder

Assembly & Operating Instructions



READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS PRODUCT.

This manual provides important information on proper operation & maintenance. Every effort has been made to ensure the accuracy of this manual. These instructions are not meant to cover every possible condition and situation that may occur. We reserve the right to change this product at any time without prior notice.

IF THERE IS ANY QUESTION ABOUT A CONDITION BEING SAFE OR UNSAFE,
DO NOT OPERATE THIS PRODUCT!

DO NOT RETURN THIS PRODUCT TO THE RETAILER - CONTACT CUSTOMER SERVICE.

If you experience a problem, have questions or need parts for this product, call Customer Service at **1-888-287-6981, Monday-Friday, 8 AM - 4 PM Central Time**. A copy of the sales receipt is required.

FOR CONSUMER USE ONLY – NOT FOR PROFESSIONAL USE.

KEEP THIS MANUAL, SALES RECEIPT & APPLICABLE WARRANTY FOR FUTURE REFERENCE.

ASSEMBLY

⚠ WARNING

Before and after use, wash all parts with warm soapy water. Cutting knives are sharp! Use care when handling the product and when cleaning the product to prevent injury.

Before use, clean with warm soapy water. After use, disassemble and clean with warm soapy water and apply vegetable oil to the grinder to resist rusting.

Be certain the clamp is attached securely to the tabletop before using.

OPERATION

ATTENTION: GRINDER PARTS ARE NOT DISHWASHER SAFE. HANDWASH ONLY!

This grinder has two grinder plates (A): one is fixed and one is adjustable. The fixed plate is closest to the hopper (B). When the space between the two plates is close together, a finer grind is created. Adding more space between the two plates will create course grind.

Fill the hopper (B) with the whole grains or corn. Tighten or loosen the adjustable grinding plate (A) by adjusting the carriage bolts (C) while turning the handle (D) to find the position that creates the desired texture of the finished ground material. Some trial and error will be required to find the appropriate grind for your needs. Tighten the wing nut (E) to lock the grinding plate into place after the desired setting is found.

