

Deluxe Massage Chair

High Power Air & Mechanical Massage Combination

R700

OPERATING INSTRUCTIONS

Thank you for purchasing an R700 Massage Lounger. Before using, please read this OPERATING INSTRUCTIONS carefully and pay special attention to all precautions to avoid any improper or unsafe use.

Please keep the operating instructions for future reference.

INDEX

SAFETY PRECAUTIONS	1
Environment	1
Unsuitable users	1
Remote Control	1
Terms of use	1
Terminating use	2
Assembly and maintenance	2
Power cord	2
Chair Components and Functions	3
Exterior components	3
Power Terminal	4
Internal components	4
Main functions of Remote Control	5
Remote Control features	5-8
VFD Remote Control screen.....	9-10
Operating the Audio Remote Control	11
FEATURES	12
PREPARING THE CHAIR FOR USE.....	13
Select a suitable location.....	13
Assembly	14-17
Moving assembled chair	18
Powering on the power	18
Positioning the chair	19
Before using	19
User options	19
OPERATING THE CHAIR	20
Reclining and inclining	20
MP3 music player	21
DVD/MPEG/TV player(optional)	21
After use	21
CARE AND MAINTENANCE	22
TROUBLESHOOTING	23
SPECIFICATIONS	24

SAFETY PRECAUTIONS

Environment

- ▶ Do not use the machine in damp and dirty places to avoid electric shock or product damage
- ▶ Do not use it in temperatures under 40° F or over 100° F
- ▶ Do not store the machine outdoors
- ▶ Always make sure to use it on a level surface

! CAUTIONS

- ▶ If entered in extremely cold or hot environments, wait for one hour before use in a proper environment, or the machine could be damaged.

Unsuitable users

People with the following conditions should consult with their doctor before using

- ▶ Currently receiving treatment for injuries or abnormalities
- ▶ Serious tumor patients
- ▶ Pregnant or menstruating women
- ▶ Acute diseases
- ▶ Cardiac problems
- ▶ Osteoporosis patients
- ▶ Use of heart pacemakers or any other internal medical electrical apparatus

Instructions on using remote control

- ▶ Do not operate the remote control with wet hands
- ▶ Do not drop it onto the ground or under water
- ▶ Do not pull connecting cord
- ▶ Do not place anything heavy on the remote control
- ▶ It is strongly advisable to keep it on its original stand after use

Terms of use

- ▶ To avoid possible injuries or damage to the product, do not use the chair if it has been damaged in any way
- ▶ It can not be used as medical treatment
- ▶ Do not use the machine with other medical apparatus or electrical carpet to avoid possible injury
- ▶ Do not use it within half an hour after meals
- ▶ To avoid any injury, do not allow children or pets to get close to the back of chair, seat or underneath the legrest
- ▶ Do not place anything heavy on the machine to avoid any damage to the machine or injury to someone using the chair
- ▶ Over 5 minutes of massage to a fixed position on human body could cause over stimulate the area and have negative health effects

SAFETY PRECAUTIONS

- ▶ The massage chair is only for use by one person at a time
- ▶ Users must not exceed 265 lbs

! CAUTIONS

- ▶ Make sure the rollers are moving along with the spine, otherwise pain or discomfort may occur
- ▶ Do not sleep on the chair when in use
- ▶ Do not use it after consuming alcohol or drugs
- ▶ Do not directly touch the massage rollers with any part of your body other than your back
- ▶ Each massage session should last a maximum of 20 minutes and the massage should not focus on specific area for more than 5 minutes
- ▶ Before using, remove keys, phones, watches rings and other items that might be loosely stored on your body or clothing

Terminating use

Shut off power and detach plug from power socket if one of the following occurs

- Contact manufacturer for repairs
- ▶ Water has been spilled onto the machine accidentally, main remote controller or auxiliary remote controller.
- ▶ Any accessories or cushions split and interior components exposed.
- ▶ Any abnormalities from users occur during use
- ▶ Any abnormalities on functions occur during use
- ▶ Sudden power loss
- ▶ Thunderstorms

Assembly and maintenance



- ▶ Do not use if the leather cover is torn as there is a risk of electrical shock and injury
- ▶ Only trained personnel should work on the chair

Instructions on plug and power cord

- ▶ Check the rated working voltage
- ▶ Do not attach or detach power plug with wet hands to avoid electrical shock or product damage
- ▶ When detaching plug, please hold the insulated plug instead of power cord
- ▶ Make sure to shut off power after use
- ▶ Do not place anything heavy onto the power cord
- ▶ If any damage occurs to the power cord, do not use the product any longer, please turn off the power and detach the power plug and contact service center for replacement


NAME AND FUNCTION OF EACH PART

Exterior structure

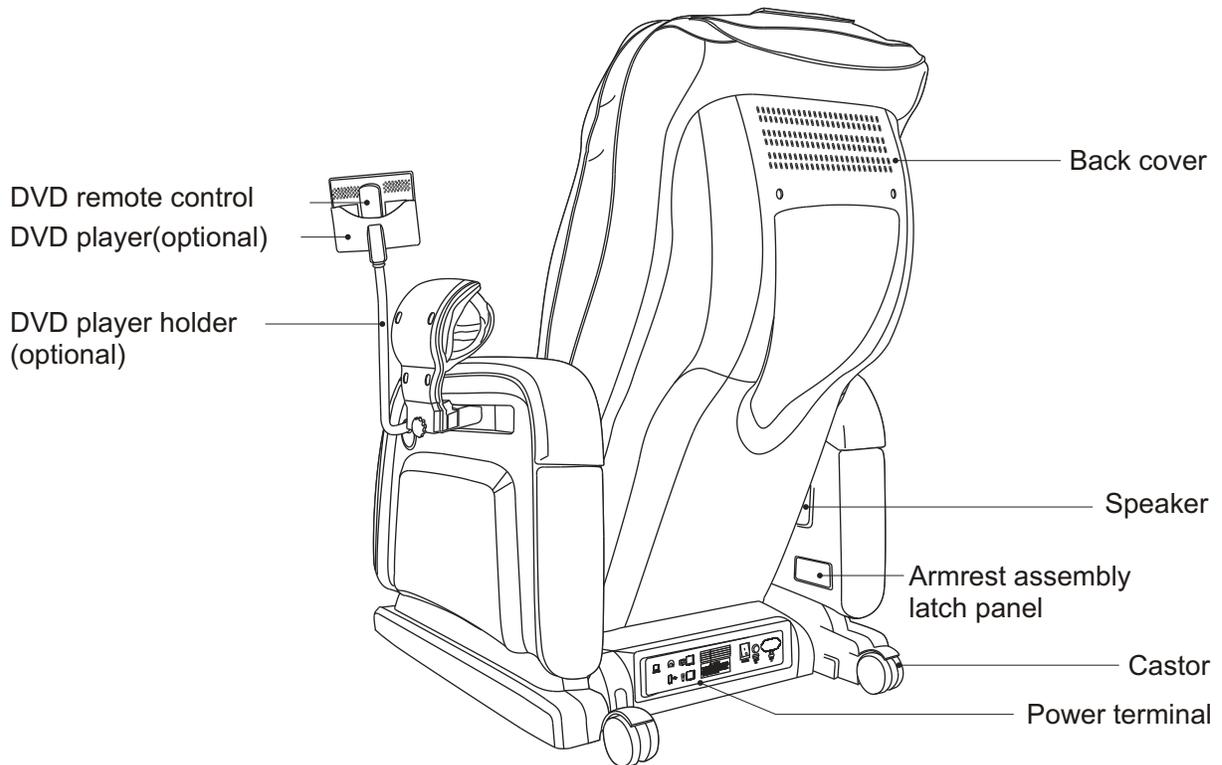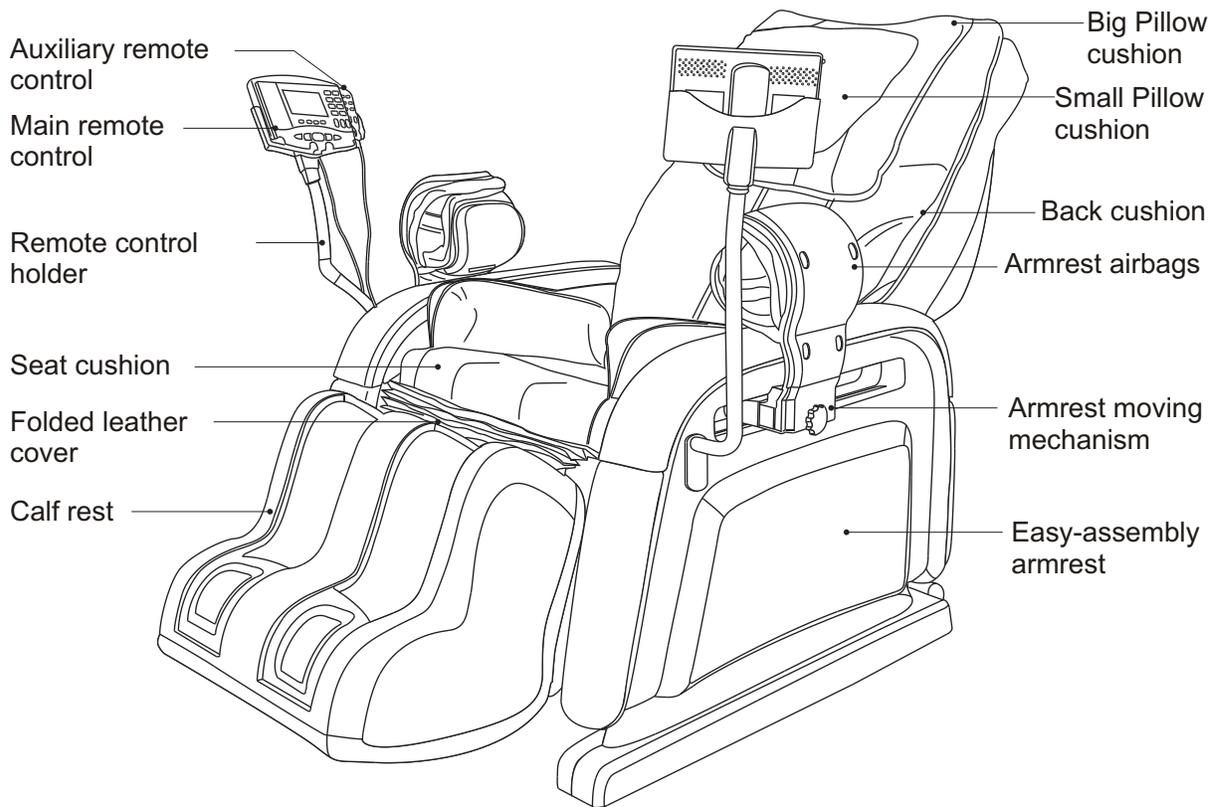


NAME AND FUNCTION OF EACH PART

Power cabinet

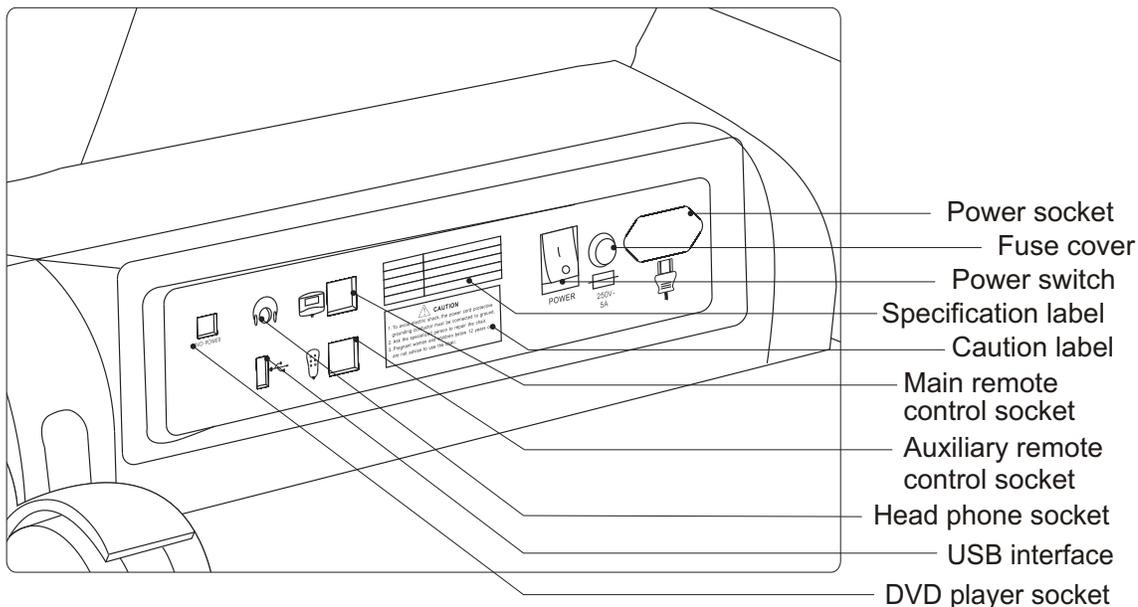


Interior structure

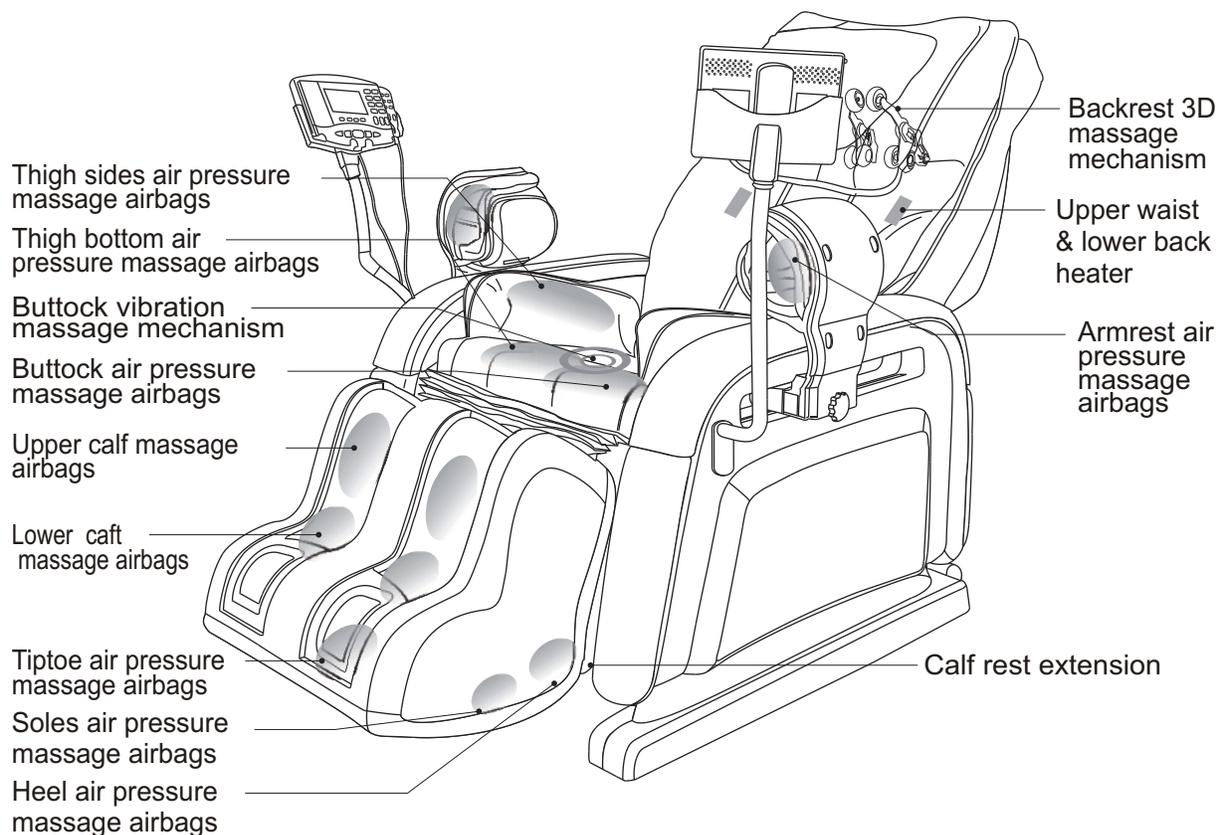

NAME AND FUNCTION OF EACH PART

Function areas on main remote controller

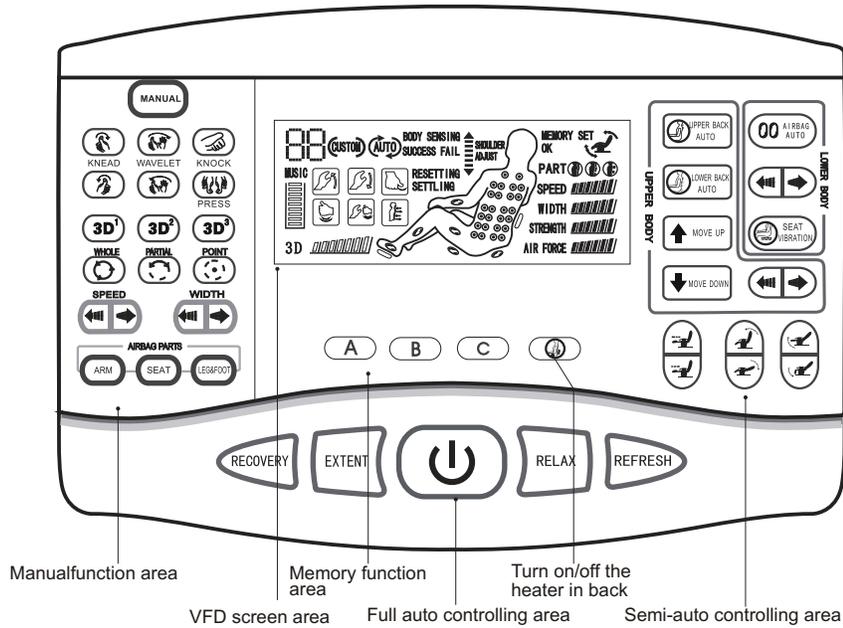

Instructions on buttons

► Power and the full auto controlling area



 **Power :** Turn on/off massage functions .
 When power on, VFD is lightened on, function buttons and memory buttons are flashing for users' selection.
 When power off, massage chair resets, at this moment, all buttons are invalid,  button keeps flashing to start standby mode. After reset, VFD will be shut off.

 **RECOVERY** Start the "RECOVERY" auto massage program.

 **EXTENT** Start the "EXTENT" auto massage program.

NAME AND FUNCTION OF EACH PART




Start the "RELAX" auto massage program.



Start the "REFRESH" auto massage program.

► Semi-auto controlling area

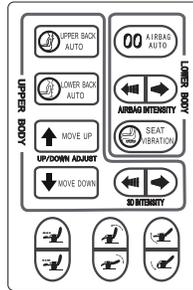

Neck & shoulder AUTO: select neck and shoulder automatic programs.



Back & waist AUTO: select back and waist automatic programs



Air bags AUTO: Turn on/off air bags automatic programs.



Air bags strength: six air strengths for selection. when it reaches minimum/maximum point, a double sound alarm will be heard.



Put the button for low middle high speed and close seat vibration function. Shine in turn the light is for short time long time constant shine and be off.



3D massage intensity adjustment: six massage intensities for selection, when it reaches minimum/maximum point, a double sound alarm will be heard.



Button for backrest massage mechanism up and down:



it is for manual mode and of body checking. When this function is available, the LED indication light will be lighted, or a sound will be heard.



Calf rest extend out: Manually controls calfrest extending out

Calf rest retracts : Manually controls calfrest retracting

Calf rest automatic extend adjustment function: It will always keep the proper position by stretch adjustment when the calf rest is ascending or descending.



Backrest ascending button.



Backrest descending button.



 
Footrest ascending button.



Footrest descending button.

NAME AND FUNCTION OF EACH PART

► Memory function area



A B C three memory function buttons can be selected repeatedly.


Memory function setting: Under normal working status, keep pressing any button of A/B/C for more than 1.5second, the current functions combination and the position of backrest and calf rest will be stored to the point position. In the mean time, LED keeps flashing while VFD shows “memory complete” with “DI”sound.

Memory function starts: After press the power button, three memory buttons A/B/C will be flashing, select any one of them more than 1.5 seconds , mean while the button will flash constantly in VFD screen it will start the stored functions.

! Caution

- Body figure and shoulder position inspection data can not be stored.
- There will be a little difference from the real position of backrest and calfrst during the memory function starts, which is just because of the impact of power voltage and load of the body.

► Manual function area

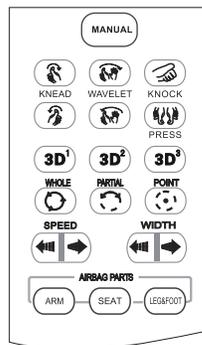

MANUAL After selecting the manual button, the button is lighted and the other buttons inside manual function area are activated at the meantime.

Backrest massage modes selection

- Turn on/off clockwise kneading mode.
- Turn on/off anti-clockwise kneading mode.

NAME AND FUNCTION OF EACH PART

-  Turn on/off clockwise kneading and tapping mode.
-  Turn on/off anti-clockwise kneading and tapping mode.
-  Turn on/off pummel.
-  Turn on/off shiatsu mode.
-  Turn on/off 3D kneading mode.
-  Turn on/off 3D pummel mode.
-  Turn on/off 3D kneading and tapping mode.

Back massage locate

-  Select overall massage position
-  Select partial massage position
-  Select point massage position under the manual function; to change the current massage position though pressing the button for back under the automatic mode, to press the button means repeat the current massage mode or "repeat the current combination mode".

Back massage speed adjustment

-  There are six speeds for selection, invalid for "shiatsu" massage mode. When it reaches minimum/maximum point, "DI DI" sound will be heard.

Back massage width adjustment


-  There are three sections for selection. Invalid for "shiatsu" and "synchronization" massage modes. When it reaches minimum/maximum point of width adjustment, "DI DI" sound will be heard.

Air bags positions selection

-  Turn on/off arms airbags massage.
-  Turn on/off seat airbags massage.
-  Turn on/off leg and foot airbags massage.

NAME AND FUNCTION OF EACH PART

VFD area description

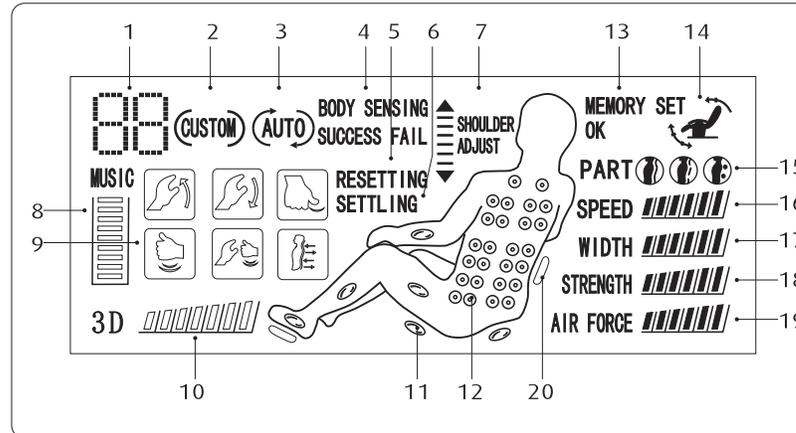

1. Time display: during working, it shows surplus time, the default working time is 20 minutes.
2. Backrest manual function indications.
3. Backrest auto function indications: it will be lightened under six backrest auto modes of "RECOVERY", "EXTENT", "RELAX", "REFRESH", "UPPER BACK AUTO", "LOWER BACK AUTO", while they are invalid under any other modes.
4. Body detection. Area is lighted when body being detected, after finished, the body detection & success are lighted, otherwise the body detection & fail are lighted.
5. Back massage mechanism resetting indications.
6. Back massage mechanism collection indications.
7. Shoulder position adjustment and back massage mechanism resets.
8. Status indications of volume of Mp3.
9. Massage mode: current massage mode indications.
10. Forward extending distance indications of the massage rollers
It will indicate the forward extending distance of the massage rollers synchronous.
11. Location of air pressure massage indications.
12. Indications of the points on back and the status of the massage mechanism.
13. Memory functions indication.

When memory functions on, the " **MEMORY** " is lighted.

When memory setting complete, the indication " **MEMORY SET OK** " will be lighted.

NAME AND FUNCTION OF EACH PART

14. Ascending and descending adjustment indications



15. Back massage location mode

-  Overall mode: for the whole backrest.
-  Partial mode: on the basis of current position, massage area extends one third of overall.
-  Point mode: under manual function to select the point mode to repeat the current action or a union actions.

16. Back mechanism massage speed indication: six speeds in total for selection



17. Back mechanism massage width indication: three widths for selection.



18. 3D massage strength indication: six strengths for selection.




19. Air strength indication: six strengths for selection.



20. Back heating indication.

NAME AND FUNCTION OF EACH PART

Instructions on auxiliary remote controller

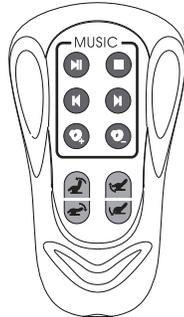

► MP3 music player instructions



Play/pause current music.



Stop playing music and back to the first song when replaying.



Previous song.



Next song.



Turn up volume.



Turn down volume.

Note : Should any abnormality occurs on MP3 system or facilities have not been installed, the "DIDI" sound will be heard when pressing the buttons.

► Ascending and descending down Instructions



Backrest and footrest ascend and descend buttons on auxiliary remote control fulfill the same functions as on the main remote controller.

INSTRUCTIONS ON FUNCTIONS

1.3D massage mechanism

New design of 3D massage mechanism accords with ergonomics.

2.Body detection

The former body detection can only detect the position of shoulder, then calculate the approximate value of every point according to a proper scale.

This model makes it more reliable and accurate on the collection of data on the back because it adopted the technology of function 3D electric current sensor.

3.Six massage strengths

Six massage strengths for selection under the automatic function and the manual function, you can choose the proper strength according to your body status.

4.Automatic/manual extension of the calf frame

The calf frame can be extended automatically or manually, and it can meet with the need of the different of users because of its long extending distance up to 26cm.

5.Sensor organ at the sole

The sensor organ at the footrest can detect the position of your feet, and adjust the extending distance automatically according to your height.

6.Touchdown sensor

The sensor organ at the bottom of the footrest can detect the floor or any other fraise on the floor automatically. Two functions as follows:1.The footrest can only extend and can not retract once it touches the floor;2.When the footrest is descending down to the floor without enough retraction, it will stop descending and retract automatically completely, then the footrest will go on descending until get the proper position.

7.Air pressure massage on the foot and calf

Design of many of air bags brings you a comfortable and prompt massage on your foot and calf.

8.Air pressure massage on the arm

Design of many of air bags brings you a perfect and wavyly massage on your arms.

9.Air pressure massage and vibration on the seat

Lots of air bags are placed on the thigh and the sides of thigh , and there still a vibration equipment on the buttock.

10.Fast-assembly armrest

Easy for assembly, disassembly and maintain, and you can finish the assembly and disassembly fast even without any tool.

11.MP3 and DVD player

The function of MP3 is included in this model, and the DVD player is optional.

12.Others

The machine becomes much more reliable because of the adoption of non-touch switch in detecting and controlling sensor instead of the traditional mechanical switch.


PREPARING THE CHAIR FOR USE

Select a suitable location

Safe Requirements:


Make sure there is at least 20" of space behind the chair.

Make sure there is at least 18" of space in front of the legrest.

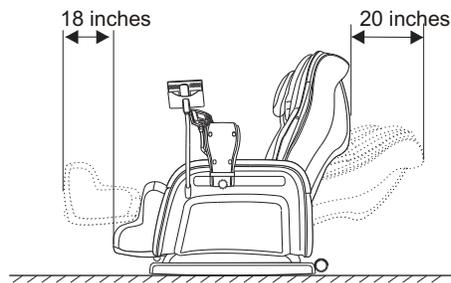

Floor protection

The massage chair could potentially damage your floor so we recommend placing a rug under the chair.

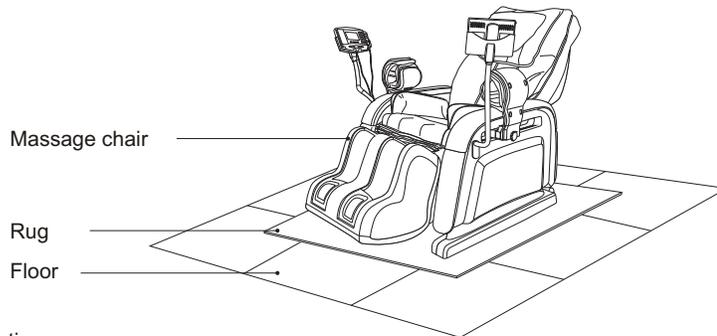

Location

In order to reduce the risk of electrical shock, do not use the chair in damp or wet locations such as a bathroom please do not use or store the chair with high temperatures as the fabric can be damaged,



Ground connection

This chair is equipped with a 3 prong grounded plug for your protection. Do not alter the plug for any reason. Be sure to plug massage chair into a properly grounded outlet.

PEWPARING THE CHAIR FOR USE


Assembly

Step 1: Prepare the components

- ▶ Unpack the main box with the chair frame, cushions and pillows.
- ▶ Unpack the carron containing the footrests.
- ▶ Unpack the carton countaing the armrests.
- ▶ Check all parts for damage and contact your dealer if and components are damaged.


Step 2: Attach chair arms to main frome

Connection speakes wire connections and air hoses from the main chair to the armrests: 1. Connect speaker wires from main chair to armrests. 2. Connect air hoses from main to arm rest . Hoses are numbered as are armrests.

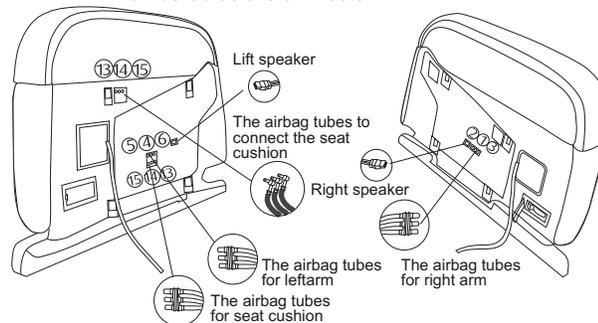

Speaker wire connection and tube diagram

Install armrest: Lift armrest so that the armrest couplers are lineup sligtly above the couplers on the main frame. Ligtully push the LOWER section of the armrest into the chair frame followed by the top of the armrest and press down on the armrest. The armrest should now be locked into place. Repeat process on other side.

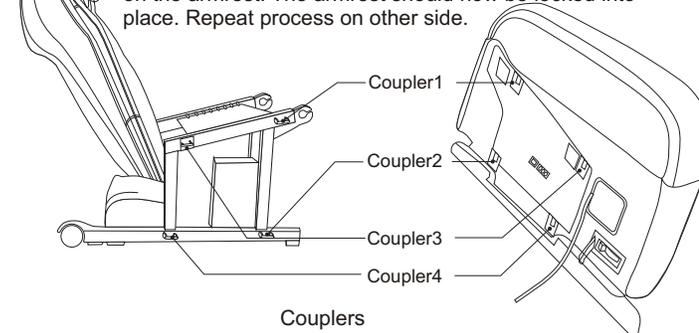


Couplers


PREPARING THE CHAIR FOR USE

Disassembly of the armrest: open up the cover in the inner of the armrest, pull the handle inside back and the armrest will break away automatically, Lift the armrest up and away from the main frame.


Note: You may need to have someone jiggle the release handle while you lift the armrest up and away.

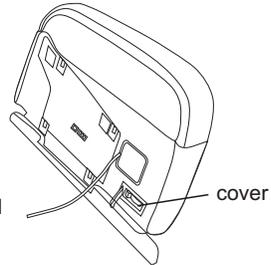


Step 3: Connect the footrest to the chair.

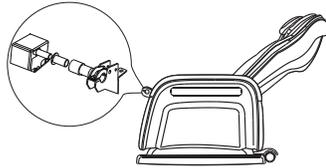

Remove the phillips head screws from the circular clamps on the chair. Open the clamps.

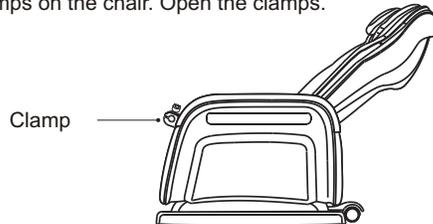


Lift footrest outes bass into circular clamp .
Close clamps, put screws back in and tighten

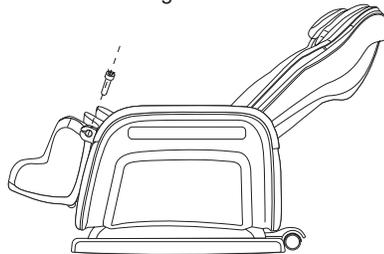


Velcro flap onto seat frame.

Operating The Chair


Step 4: Remove the two small screws from the terminal on the front of chair.
Plug legrest cables into the connection terminal. Put screws back in and tighten

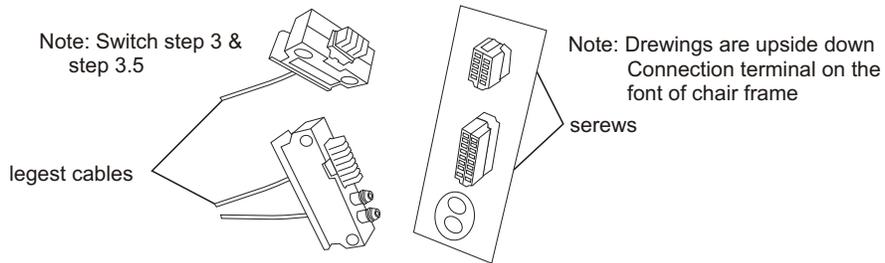

Step 4: Install Armrest massage
Line up the armrest massage with terminal on the chair and gently push connectors together complete connection by firmly tightening the armrest retaining bolt by hand..

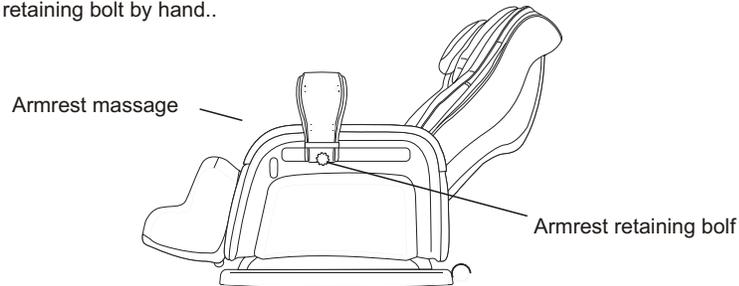


Step 5: Install the remote control stand
Remove plastic cover from the armrest. Carefully remove the two screws inside the panel. Be careful not to drop these in the chair. Holding the armrest in place screw the screws back into the chair one at a time, when finished, put the plastic cover back into place.

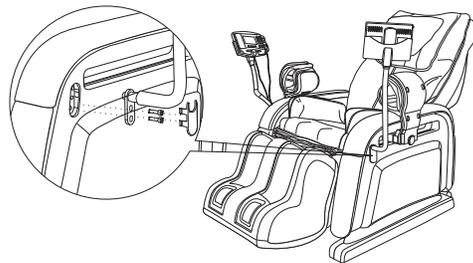

PREPARING THE CHAIR FOR USE


Step 6: Install the back cushion and pillow cushion

Attach the back cushion bay fastening the zipperS on, the chair and back cushion together, velcro the bottom of the cushion to the chair after plugging. in the heqtes connection. Install pillow to backrest cushion with vekro

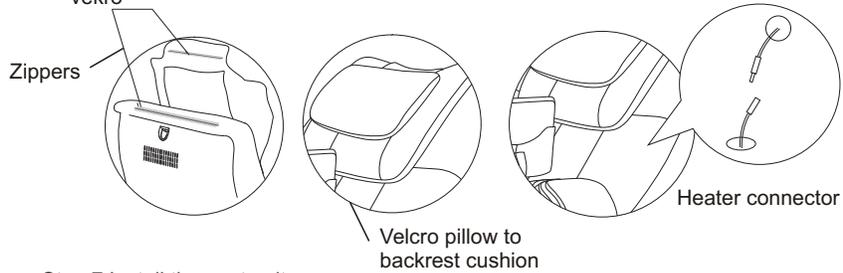


Step 7: Install the seat unit

Put seat cushion on chair. Plug air tubes from seat cushion into the armrest. Connect the electrical connector from seat to plug from chair frame. Position seat cushion into place and push down to force the velcro to hold the cushion in place.

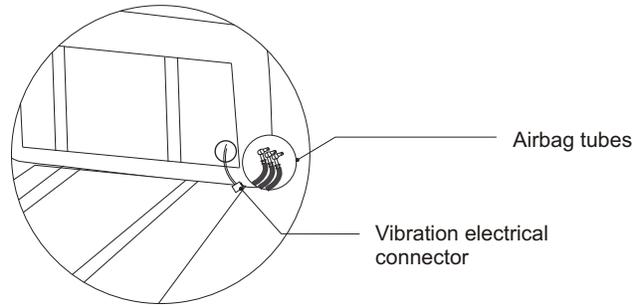

Step 8: Install the rest parts


Connect main and auxiliary remote controller, DVD player (optional), usb stick and power in for the matching sockets on the terminal. When ready to use push the power switch to the "on" position.

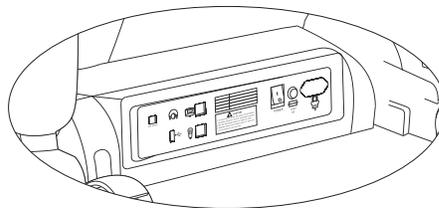

PREPARING THE CHAIR FOR USE

Moving assembled chair

- ▶ Installed casters are used for moving the chair.
- ▶ Lower the backrest to the lowest position.
- ▶ Turn off the power and detach the power plug.
- ▶ Tilt the chair back onto the casters and roll the chair to the desired location .

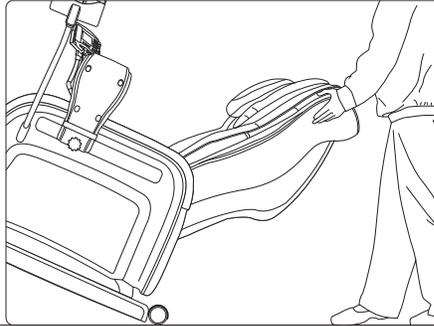


! CAUTION

- ▶ Do not move the product with people on it.
- ▶ Do not hold the armrests to move the chair, instead of holding chair base and backrest (4 people are advisable).
At least two people recommended for moving the chair.

Powering On the chair

- ▶ Connect the power plug into a properly grounded wall outlet.
- ▶ Turn on the power switch on the back of the chair.

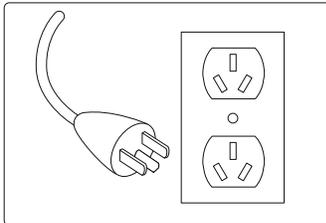


! CAUTION

- ▶ Make sure there is no damage to the power cord.
- ▶ Make sure all switches are turned off before connecting power plug into the wall outlet.

PREPARING THE CHAIR FOR USE

Positioning the chair

- ▶ Recline backrest to lowest position and lift legrest to fully extended position to ensure there is suitable space around the chair.
- ▶ Test various massage functions using the remote control to see if any error codes triggered appeared, and turn off the power at last. If there are no error codes power off the chair and prepare for use.

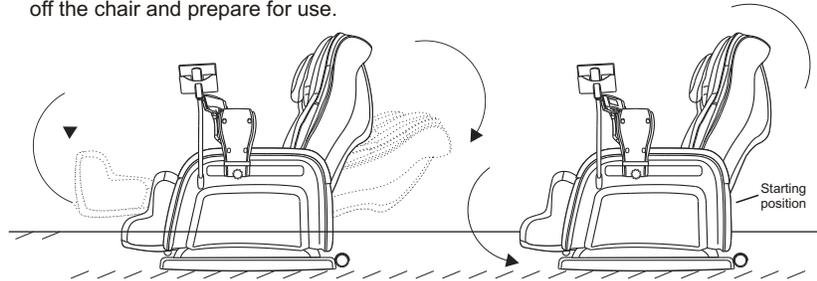

Before using

- ▶ Make sure the footrest is securely connected to the chair frame.
- ▶ Always be sure the chair is in the upright starting position before getting on or off the chair .

! CAUTION

- ▶ Do not sit on the chair when the footrest is not fully lowered
- ▶ To avoid any damage to the footrest, do not place sudden or excessive weight on the footrest

User Options

There are four automatic programs to choose from RECOVERY, EXTENT, RELAX or REFRESH Choose the best program for your individual needs.

- ▶ RECOVERY: great after along day of work, this mode will work out the tension leaving you invigorated.
- ▶ EXTENT: after a long day at the office or an extended period of driving this mode will help to stretch your muscles out and get the blood flowing again.
- ▶ RELAX: this massage mode will gently massage your muscles helping you to relax after work or on your day off.
- ▶ REFRESH: this mode is great for loosening up tight muscles or pressure points leaving you refreshed and ready to tackle your next task.

Operating The Chair

 
 

Reclining and extending system

Backward reclining

- ▶ Keep pressing  button, backrest gradually goes down while footrest comes up with "DIDI" sound reminding. At this moment, if heels touch the sensors, the footrest will stretch forward to fit user's body length. When it reaches desired angle, release  button, the backrest and footrest stop moving, the footrest will retract until touching heels, then stretch a little bit to fit the body length. Meanwhile the footrest can be adjusted according to the buttons of  and  separately.

Forward reclining


- ▶ Keep pressing the backrest up button , the backrest will go up gradually, and at the same time, the footrest goes down with "DIDI" sound reminding. When it reaches desired angle, release the button, the footrest will retract to source user's heels automatically, and then extend forward a little bit, during descending, when the footrest touches ground, footrest will retract automatically and then reset.

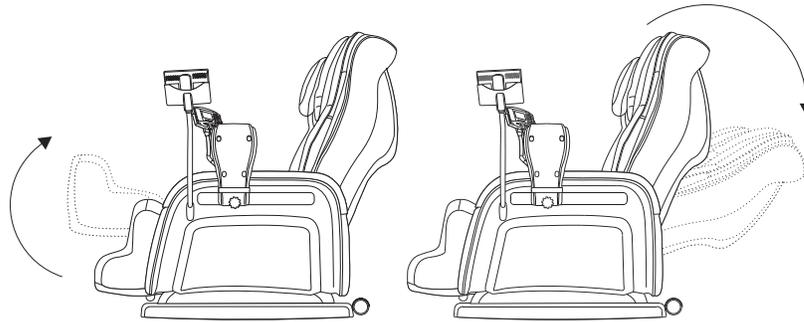

OPERATING THE CHAIR

Manual Legrest Extension

Press and hold   manually
adjust footrest position for best massage.

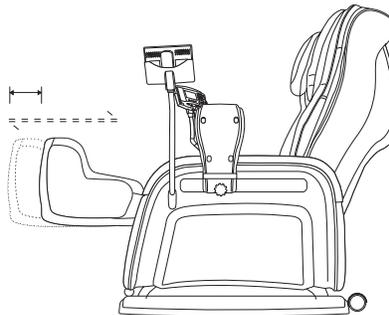

! CAUTION

- ▶ During the footrest angle adjustment, do not place fingers or other objects into the gap between the seat frame and the footrest.
- ▶ Make sure no any foreign objects are present when adjusting bac rest or footrest.

MP3 music player

- ▶ The chair has an internal MP3 music player, either speakers or headphone can be used to enjoy music.
- ▶ Plug the USB stick with music into USB jack .
- ▶ Operate auxiliary remote controller to play music after 5 to 10 seconds.

DVD/MPEG/TV player (optional)

- ▶ Can play DVD/MPEG/TV .
- ▶ Pick up cable TV.
- ▶ Please refer to "DVD/MPEG player with manual tuner"for detailed operating instructions.

After use

- ▶ After using, turn off the power and remove the plug from the power socket.
- ▶ Keep the remote control in the provided stand.
- ▶ To avoid any accidents or damage, make sure to turn off the power and remove the plug from the power socket.
- ▶ Store the product if it will not be used on a regular basis.

CARE AND MAINTENANCE

Cleaning

- ▶ Make sure to clean the back cover, armrest and the footrest with the dry cloth as needed.
- ▶ Use a dry cloth to clean remote control .
- ▶ Use a cloth to clean the back cushion and the pillow cushion, then clean it with a wet cloth, and let it dry naturally.
- ▶ Clean the footrest with a damp cloth.

! CAUTION

- ▶ Make sure to switch off the power and the detach power plug from power outlet before performing maintenance. To avoid the risk of shock or injury do not remove power cord with wet hands.
- ▶ Do not use alcohol, caustic agents or detergents etc in order to avoid, discolouring, splitting or other damage.
- ▶ Do not iron the machine.

Storage

Please cover the chair with dustproof cover to get rid of the dust after cleaning if you do not use the chair on a regular basis.

! CAUTION

- ▶ Do not put the machine in direct sunshine or in nigu temperature locations to avoid any deviation or color fading.

Warning

Discontinne use if any of the following occur:

- ▶ Unusual odor or burning smell.
- ▶ After touching of the wires the power turns on or off.
- ▶ The power cord becomes hot when the chair is in use.
- ▶ Chair make unusual sounds.

! CAUTION

- ▶ If any of the above symptwns ocur, please do stop using the chair to avoid the possible injury.
- ▶ Turn off the power and remove the plug from the socket, then contact your deakr or Repose with all the details.
- ▶ Maintenance and/or repairs should only be performed by qualified technicians.

TROUBLE SHOOTING

	Symptoms	Please check below	Solutions
1	Rubbing or squeaking sound	It is attributed to the construction of the chair or from friction between the massage rollers and the leather cover	Normal
2	Not operating	Check to see if the power cord has come loose	Connect plug
		Check to see if power switch has been turned off	Switch on
		Check fuse	Replace with same type of fuse
3	Trouble with MP3 playes	Does music format match Mp3 format ?	Modify music format
4	Odd beep heard when pressing buttons for music	Is USB stick fully plugged in?	Reconnect USB stick
		USB disc has been initializing ?	Select buttons after 5-10 seconds
		Is there any MP3 format music on the USB stick?	Check it USB data on a computer
5	No Sound heard from speakers	Has the chair been on for more than 2 hours?	Turn off power and turn back on
		Are the head phones plugged in?	Disconnect the headphones
		Is the volume setting on low?	Turn up volume
6	backrest or footrest will not come up	Is there excessive weight on the component?	Remove excessive weight
7	Footrest can not be extended	Is there an object in its path?	Remove object or move chair
8	Air bag on seat or calf do not work	Are any of the air hoses disconnected or pinched?	Reconnect hoses or relieve the pinch
9	The main remote control alarm indicates an error code such as "F1" ... "F9" , "FA" ... "FE" .	There chair has detected a malfunction	Turn off the power and allow chair to reset. This may need to be repeated multiple times

If above solutions have not solved the problems, turn off the power, remove the plug from the power socket and contact the local distributor for repair.

Note: Do not attempt to service or repair. Doing so could result in personal injury or property damage.

SPECIFICATIONS

Description: Deluxe Multi-functional Massage Chair

Model: R700

Up and down massage distance: Approximate 28.3"

Distance of extension for footrest: Approximate 0"-10.2"

Loading capacity: 264 lbs

Storage dimensions: 55.1"(L) X 39.3"(W) X 35.4"(H)

Expanded dimensions: 85.8"(L) X 39.3"(W) X 50.4"(H)

Package dimensions:

Main part: 59.0"(L) X 28.7"(W) X 27.2"(H)

Calf rest: 19.2"(L) X 19.2"(W) X 22.6"(H)

Armrest: 37.4"(L) X 13.0"(W) X 26.8"(H)

Gross weight: 332 lbs

Net weight: 284 lbs

Rated voltage: 110-120V~

Rated frequency: 50/60Hz

Power: 260W

Safety design: class I