
Scandi - 2 Door 2 Drawer Tallboy

Assembly Instructions - Please keep for future reference

1022101

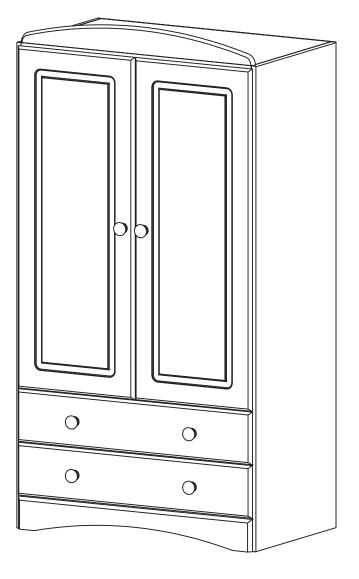

Dimensions

Width : 81.1 cm Depth : 49.0 cm Height: 152.9 cm

Assembly Instructions - Please keep for future reference

▲ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

<i>Note:</i> if required the next
page can be cut out and used
as reference throughout the
assembly. Keep this page
with these instructions for
future reference.


Components - Panels

Please check you have all the panels listed below

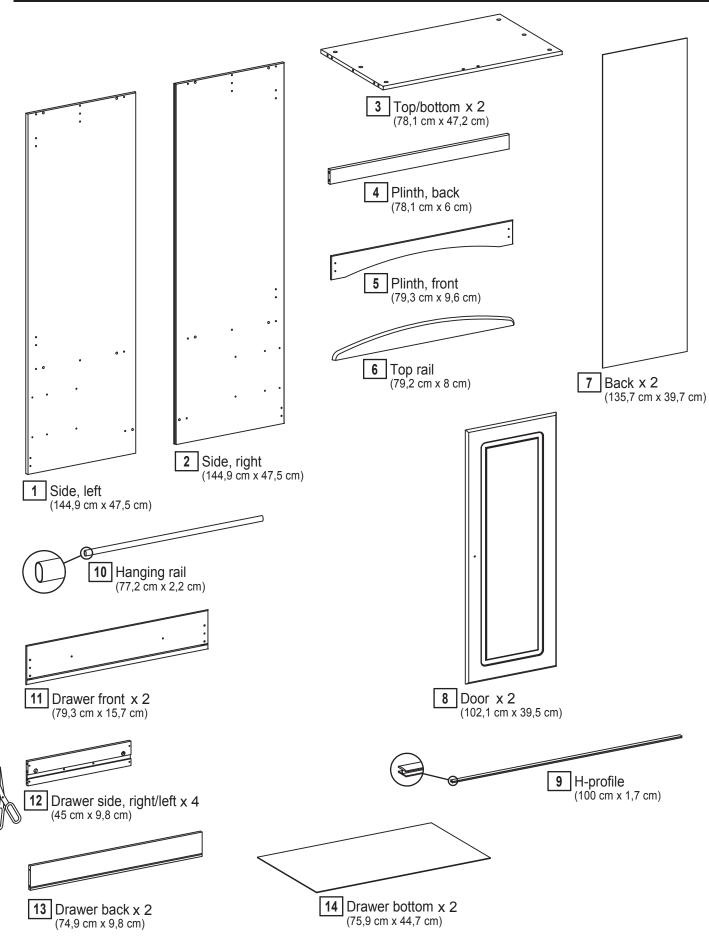

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

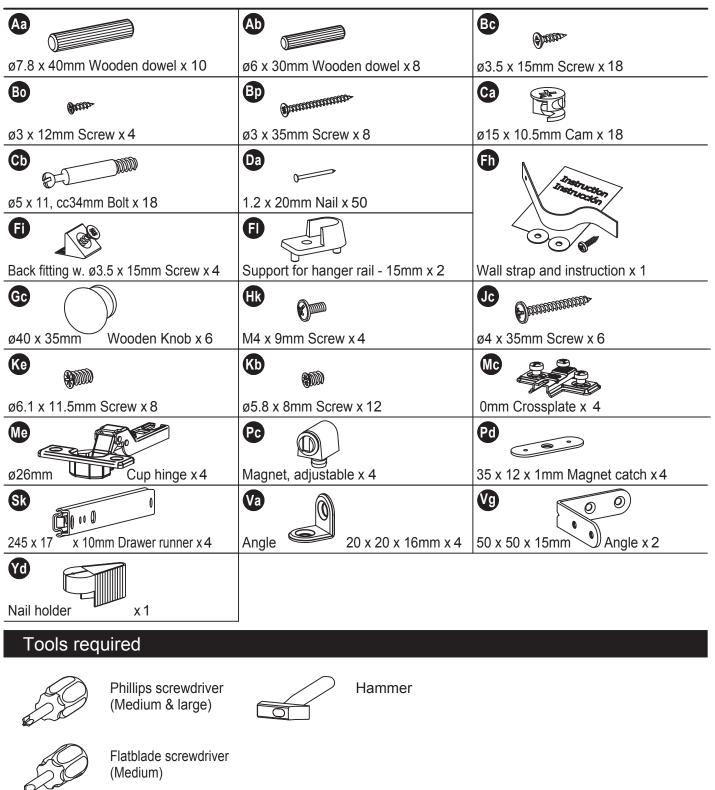

Ruler - Use this ruler to help correctly identify the screws

Step 1 Вр Fix the drawer sides **12** 13 to the drawer back 13 as shown, using screws Bp. 12 x 2 Step 2 12 Knock the dowels Ab into the holes indicated on the drawer sides 12 using a smal hammer. x 2 Step 3 Slide the drawer bottom **14** into the drawer sides 12. 14 x 2 Step 4 R Screw the bolts (b) into the holes indicated on the drawer front 11. x 2 Step 5 Push the drawer front 11 onto the drawer sides 12 as shown. 11 0 Push cams **G** into the holes indicated. Arrow (*) pointing towards the front.

Turn the came **G** to the right to fix the front **11**.

x 2

Step 6



Important! Make sure the angle between

the drawer front 11 and the drawer sides 12 is 90° before the drawer bottom 14 is fixed.

Fix the drawer bottom 14 to the drawer back 13 and the drawer front 11 using 1.

To adjust the angle between the drawer sides and the drawer fronts push the fitting disidewards. See details.

Step 7

Fix the wooden knobs to the drawer front 11 using screws .

Step 8


Fix the support for hanger rail 1 to the sides 1 and 2 using screws 8.

Fix the Crossplates to the sides 1 and 2 using the pre-mounted screws. Note the details.

Position the Crossplates **(**) exactly as shown.

Screw the bolts (1) into the holes indicated on the sides (1) and (2).

Fix the angles (a) to the sides (1) and (2) using screws (6). Place the angles as shown. See details.

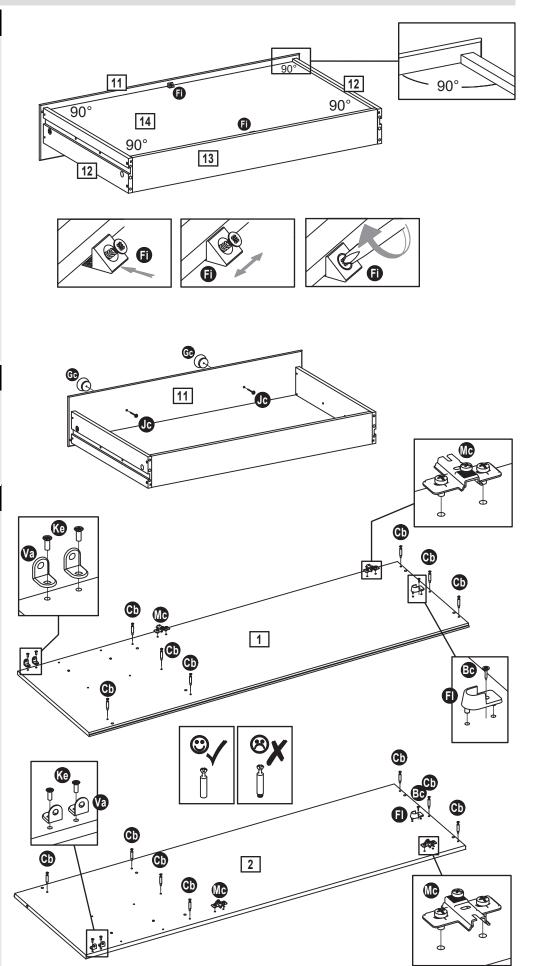


Step 9

Slide the top of the drawer runners Sb backwards.

Fix the front end of the drawer runners (1) to the sides 1 and 2 using screws (1) through the holes indicated.

See details.

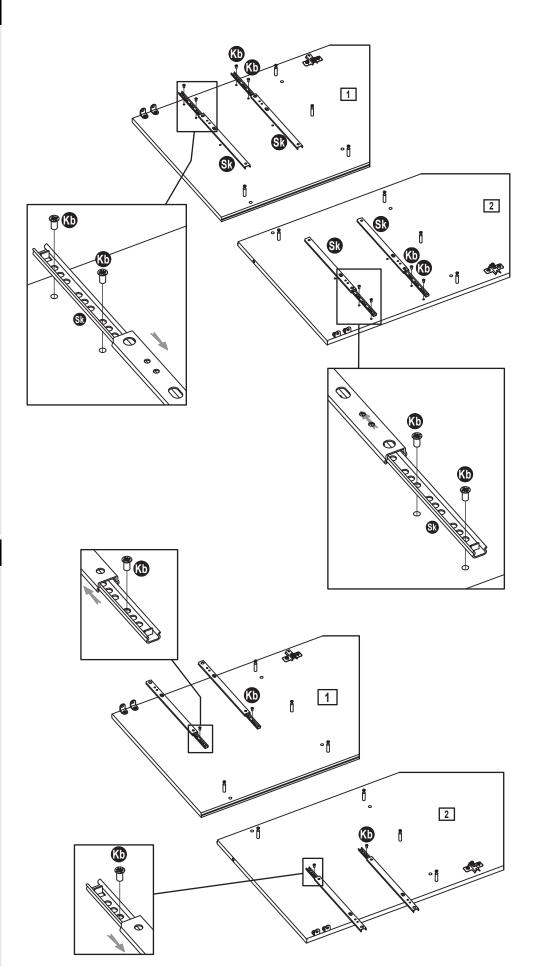

Step 10

Slide the top of the drawer runners 🚱 forwards.

Fix the back end of the drawer runners Stothe sides 1 and 2 using screws b through the holes indicated.

See details.

Step 11

Knock the dowels (4) into the holes indicated on the top/bottom (3) and the back plinth (4) using a small hammer.

Press the magnets to into the holes indicated on the top/bottom 3.

Step 12


Place the sides 1 and 2 onto the top 3, the bottom 3 and the back plinth 4.


Push cams (3) into the holes indicated on the top (3), the bottom (3) and the back plinth (4). Arrows pointing towards the sides (1) and (2).


Turn the cams (3) to the right to fix the sides 1 and 2.

Step 13

Fix the front plinth **5** onto the angles **1** using screw **1**.

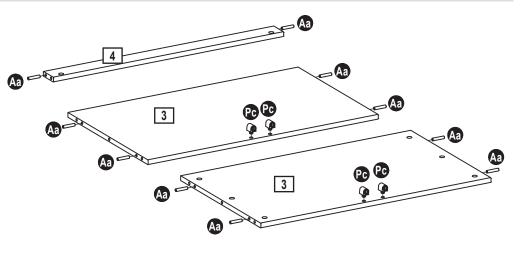

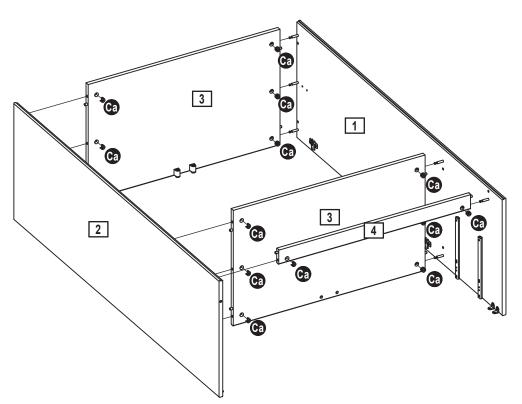

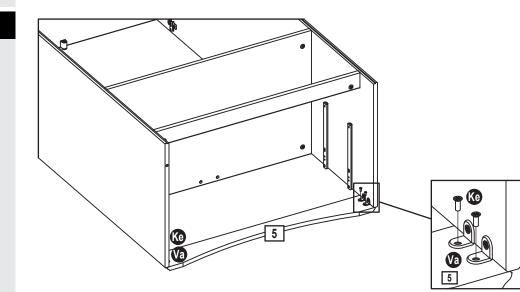


Step 14

Place the backs 7 into the rabbets in the sides 1 and 2 and the H-profile 9.

Important! Make sure the angle between the top 3 and the sides 1 and 2 is 90° when the backs 7 is attached.

Fix the backs 7 to the sides 1 and 2, the top 3 and the back plinth 4 using nails 1.


Use the nail holder 🔞 and a small hammer.

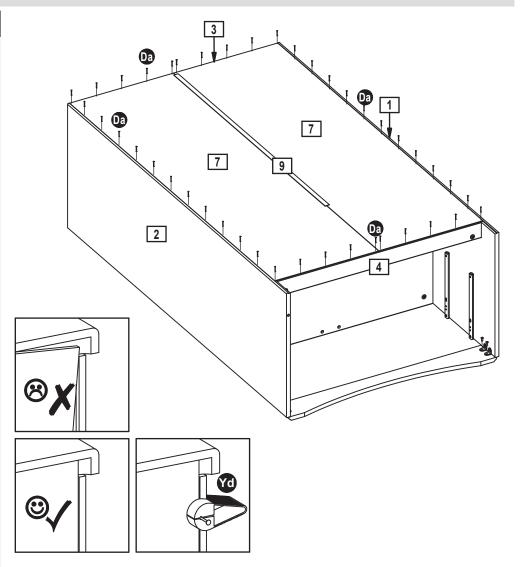


Step 15


Place the top rail 6 onto the top 3.

Fix the top rail 6 to the top 3 using angles 3 and screws 6.

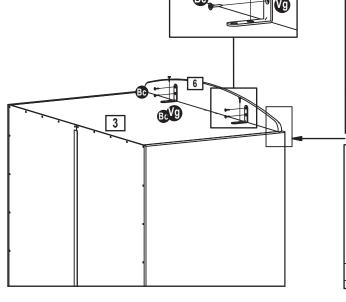

6

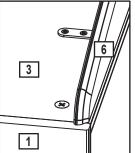

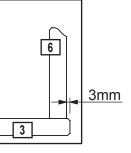


Step 16

Pull out the drawer runners. Slide the drawers onto the runners.

Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws **(B)**.

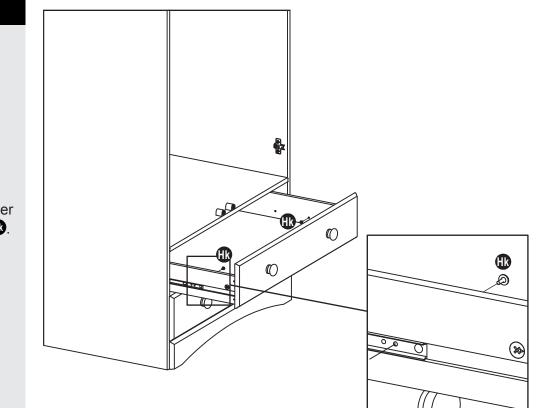


Step 17

Place the cup hinges (1) into the holes indicated on the doors (8).

Fix the hinges using screws **B**.

Fix the magnet catches using screws b into the holes indicated.

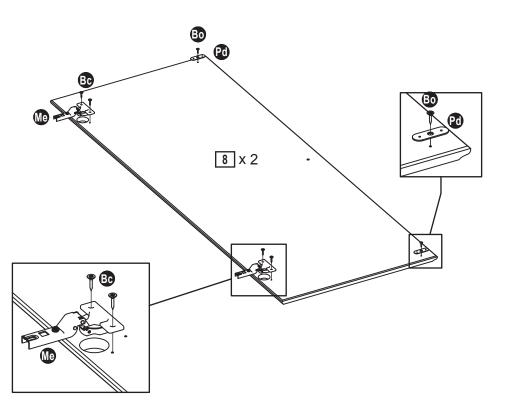


Step 18



Warning! The wardrobe is heavy. Lift with care.

Its recommended that the wardrobe is fixed to the wall.

Use the fittings **(b)**. Follow the instructions included with the fittings.

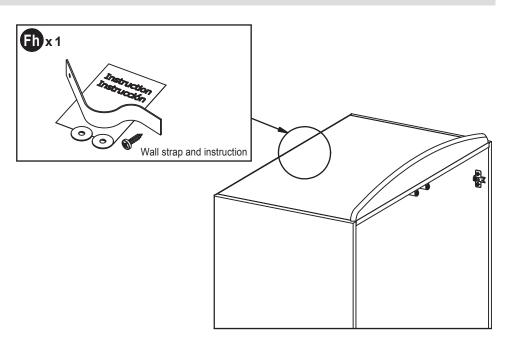


Step 19

Place the hanger rail 10 into the supports **①**.


Slide the cup hinges onto the crossplates We Fix the hinges using the premounted screw in the crossplates.


See details above on how to fit the cup hinge onto the cross plate .

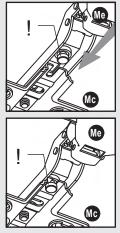

Fix the wooden knobs Ge to the doors 8 using screws Jc.

Adjust the magnets Pc.

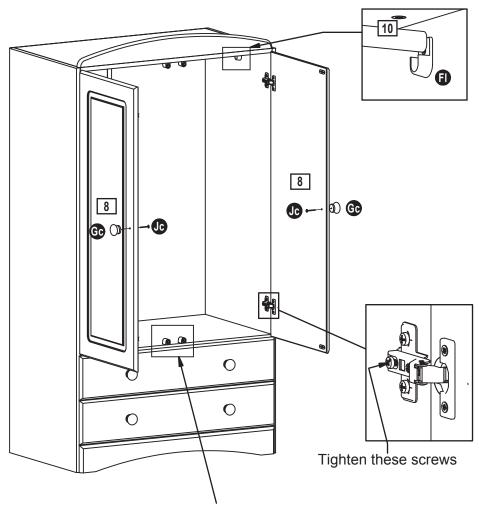

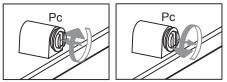



350210-11 MDF

Step 20


Adjusting the doors left/right.

a:

To adjust the door towards the left hand side - turn the adjusting screw to the right.

b:

To adjust the door towards the right hand side - turn the adjusting screw to the left.

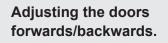

a:

Loosen the fixing screw.

b:

Push the cup hinges / the door forwards OR backwards to adjust.

c:

Tighten the fixing screws of ALL the crossplates.

Adjusting the doors up/down.

a:

Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:

Push the the door up OR down to adjust.

C:

Tighten the pre-mounted screws of ALL the crossplates.

