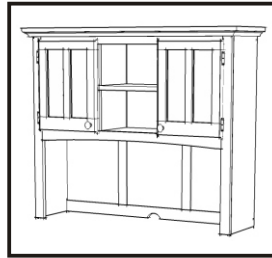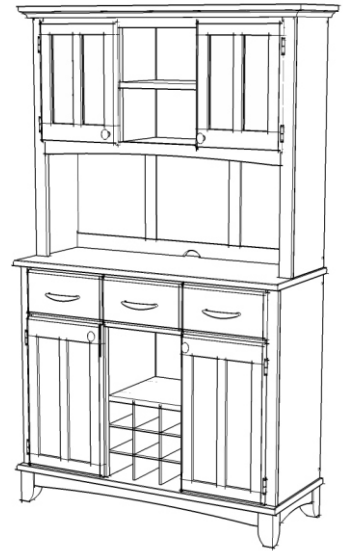# 88 5100 301
Buffet and Hutch (Natural Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.
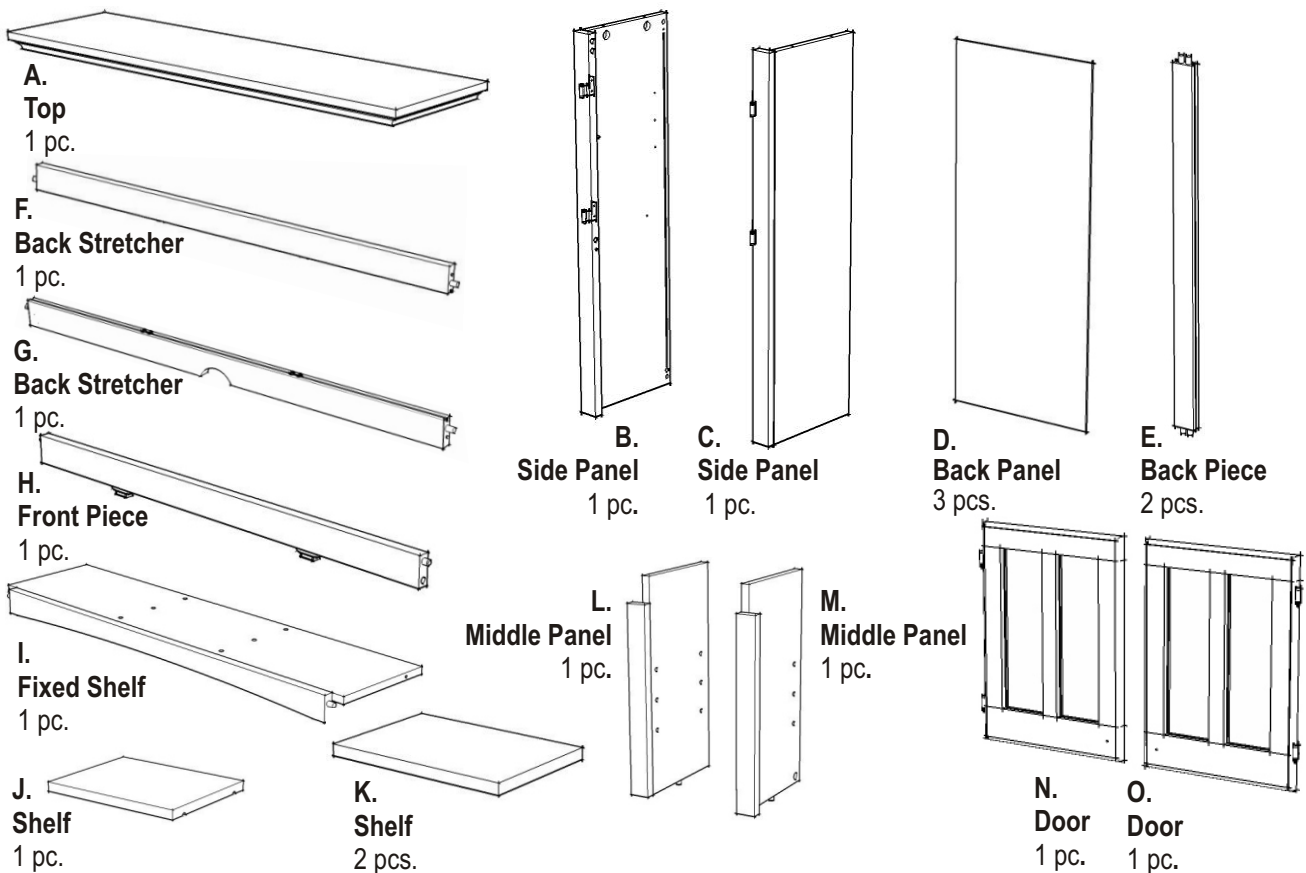
Hutch Unit

Home Styles™

Casual Attire For Today's Home

Hutch Unit Part List

A.
Top
1 pc.

F.
Back Stretcher
1 pc.

G.
Back Stretcher
1 pc.

H.
Front Piece
1 pc.

I.
Fixed Shelf
1 pc.

J.
Shelf
1 pc.

K.
Shelf
2 pcs.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

D.
Back Panel
3 pcs.

E.
Back Piece
2 pcs.

L.
Middle Panel
1 pc.

M.
Middle Panel
1 pc.

N.
Door
1 pc.

O.
Door
1 pc.

Hardware List

Cam Lock Screw
18 pcs.(+1 extra)

Machine Screw
2 pcs.

Wood Screw for Back Panel
12 pcs. (1 extra)

Cam Lock
18 pcs.(+1 extra)

Adjustable Pin
12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector
8 pcs. (1 extra)

Door Pull Handle
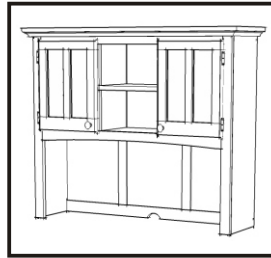2 pcs.

Steel Plate Connector
2 pcs.

Tools required for assembly : <u>Philips</u> screwdriver

88 5100 302
Buffet and Hutch
(White Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.
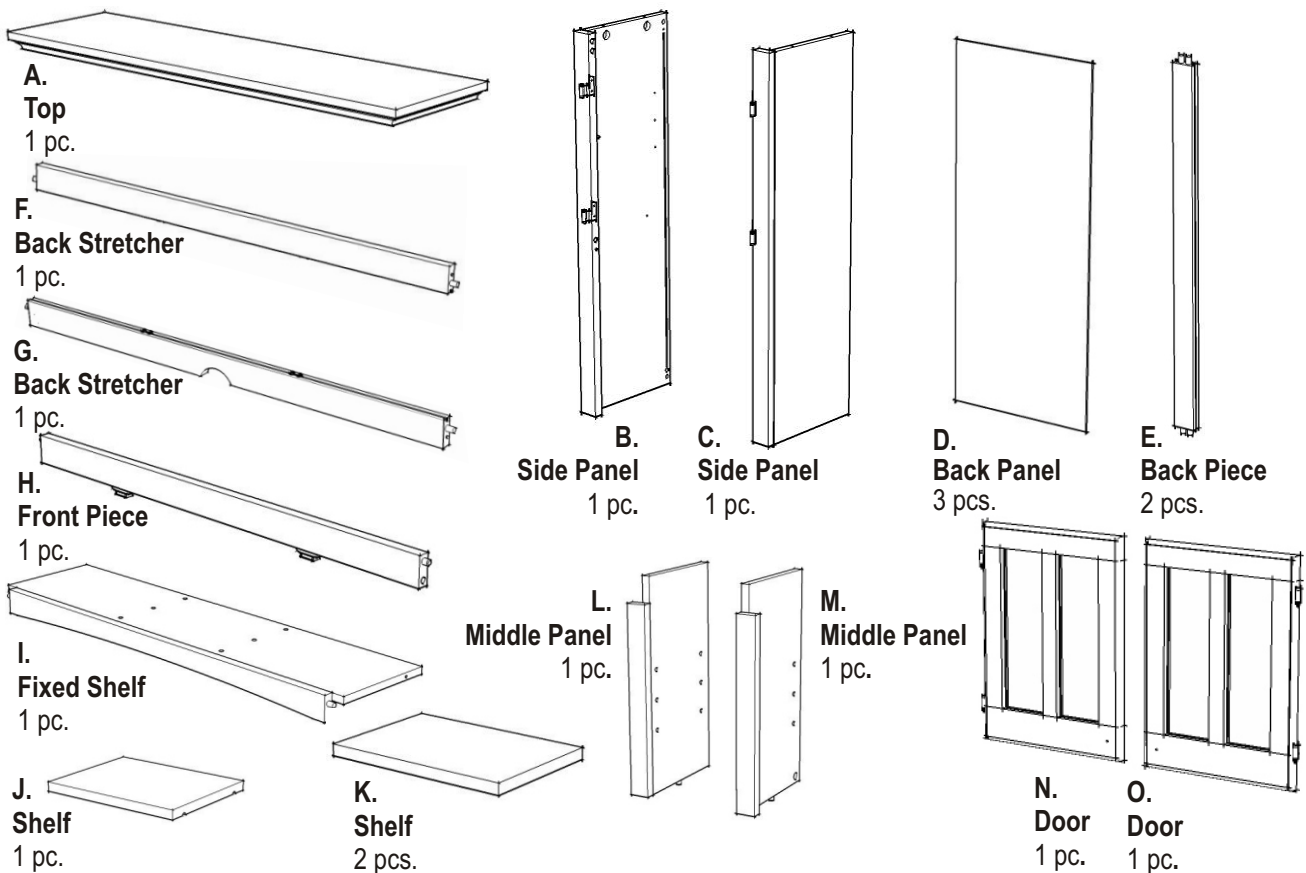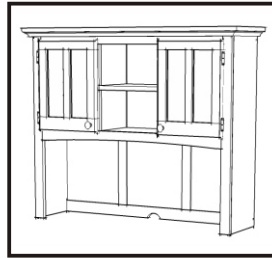
Home Styles™
Casual Attire For Today's Home

Hutch Unit

Hutch Unit Part List

A.
Top
1 pc.

F.
Back Stretcher
1 pc.

G.
Back Stretcher
1 pc.

H.
Front Piece
1 pc.

I.
Fixed Shelf
1 pc.

J.
Shelf
1 pc.

K.
Shelf
2 pcs.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

D.
Back Panel
3 pcs.

E.
Back Piece
2 pcs.

L.
Middle Panel
1 pc.

M.
Middle Panel
1 pc.

N.
Door
1 pc.

O.
Door
1 pc.

Hardware List

Cam Lock Screw
18 pcs.(+1 extra)

Machine Screw
2 pcs.

Wood Screw for Back Panel
12 pcs. (1 extra)

Cam Lock
18 pcs.(+1 extra)

Adjustable Pin
12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector
8 pcs. (1 extra)

Door Pull Handle
2 pcs.

Steel Plate Connector
2 pcs.

Tools required for assembly : <u>Philips</u> screwdriver
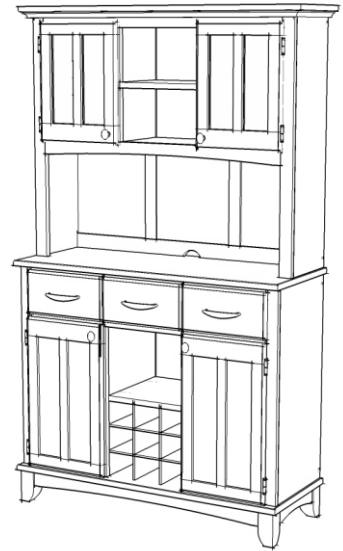
88 5100 303
Buffet and Hutch
(Red Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.
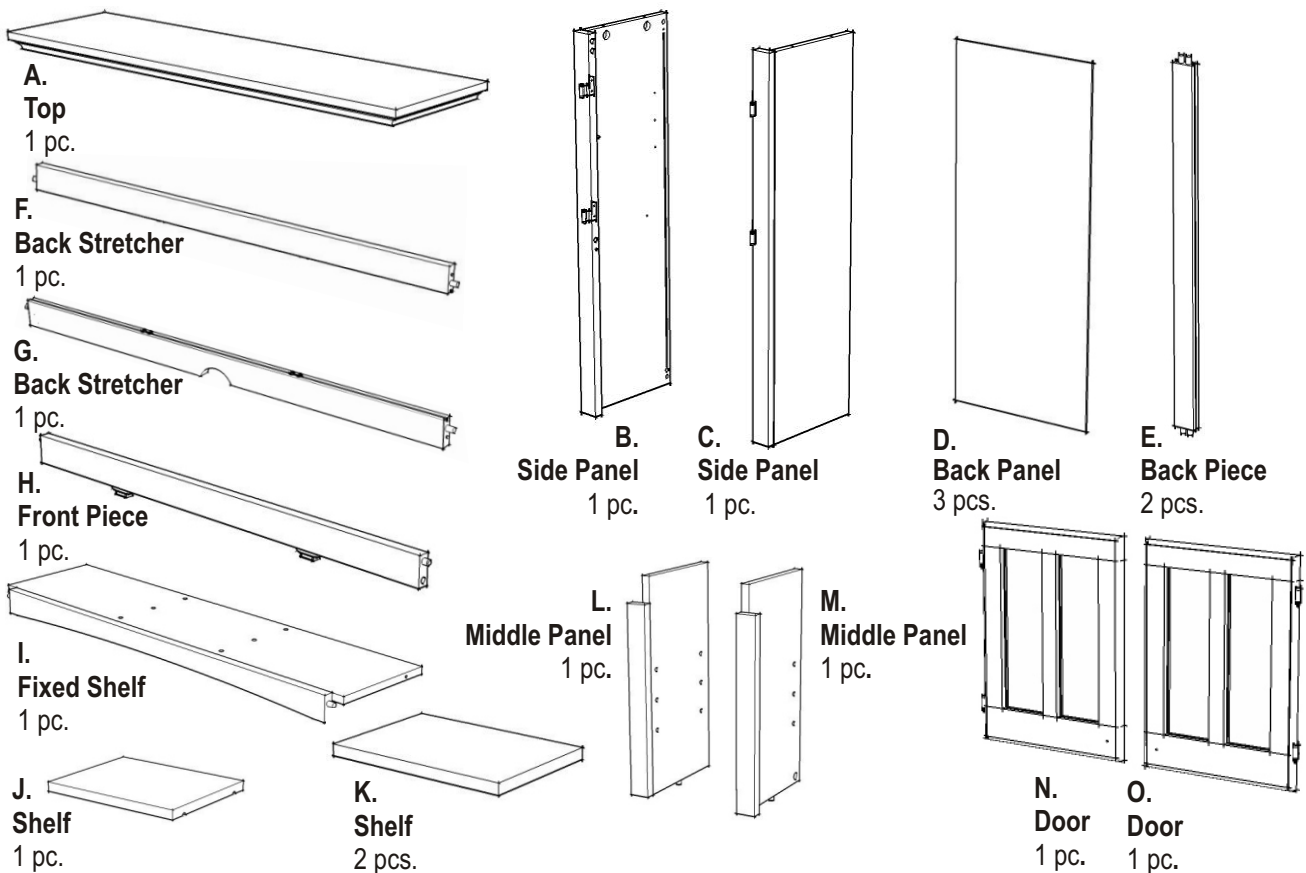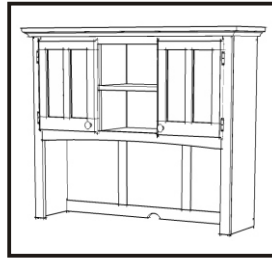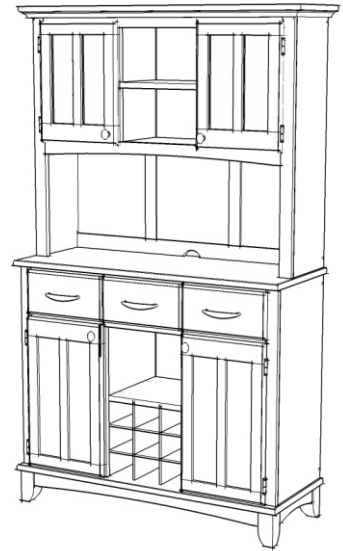
Home Styles™
Casual Attire For Today's Home

Hutch Unit

Thai Patent Pending Numbers 0602000975

Hutch Unit Part List

A. Top 1 pc.

F. Back Stretcher 1 pc.

G. Back Stretcher 1 pc.

H. Front Piece 1 pc.

I. Fixed Shelf 1 pc.

J. Shelf 1 pc.

K. Shelf 2 pcs.

B. Side Panel 1 pc.

C. Side Panel 1 pc.

D. Back Panel 3 pcs.

E. Back Piece 2 pcs.

L. Middle Panel 1 pc.

M. Middle Panel 1 pc.

N. Door 1 pc.

O. Door 1 pc.

Hardware List

Cam Lock Screw 18 pcs.(+1 extra)

Machine Screw 2 pcs.

Wood Screw for Back Panel 12 pcs. (1 extra)

Cam Lock 18 pcs.(+1 extra)

Adjustable Pin 12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector 8 pcs. (1 extra)

Door Pull Handle 2 pcs.

Steel Plate Connector 2 pcs.

Tools required for assembly : <u>Philips</u> screwdriver

88 5100 304
Buffet and Hutch
(Black Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.
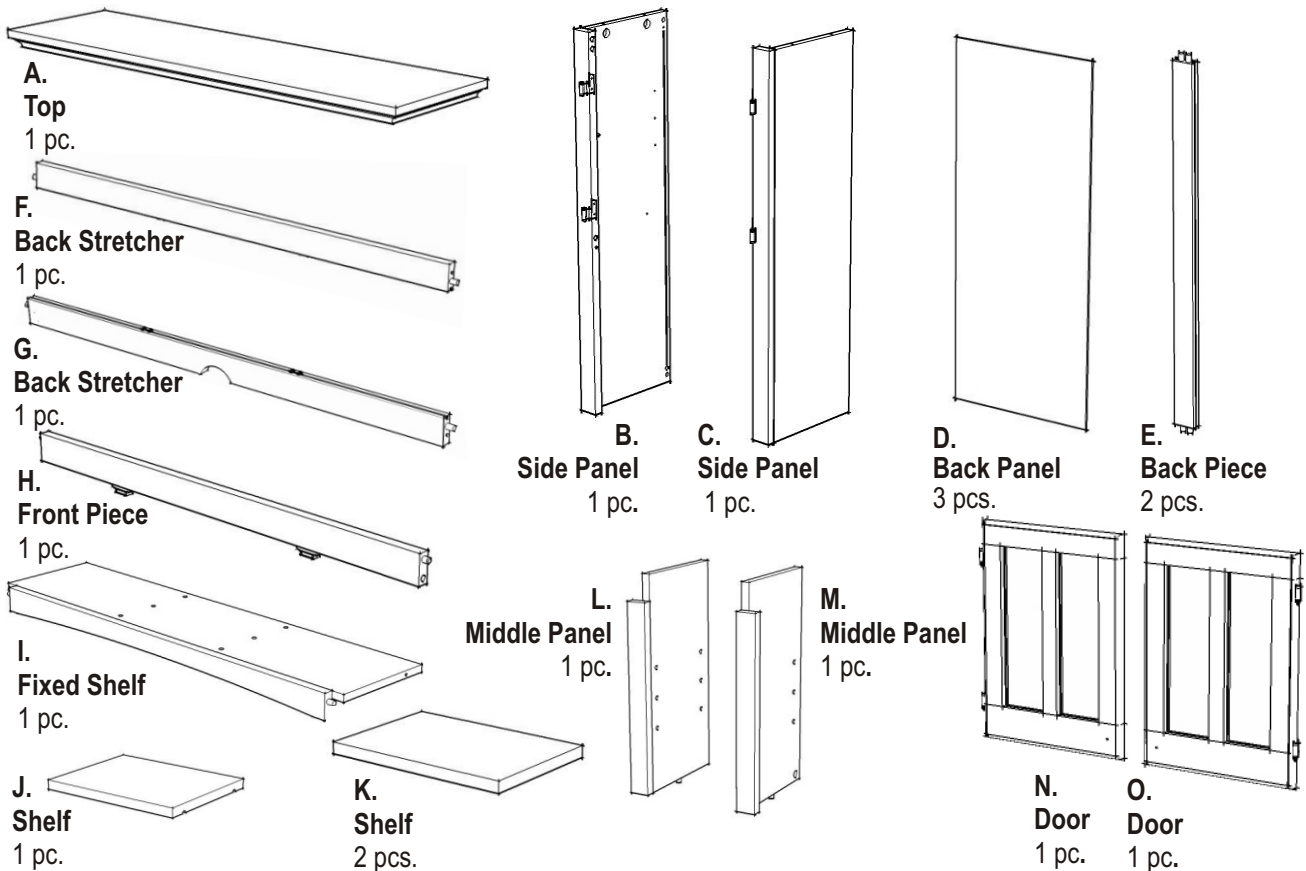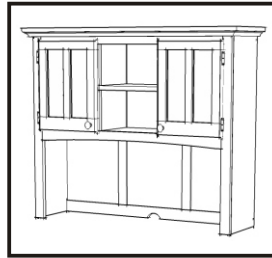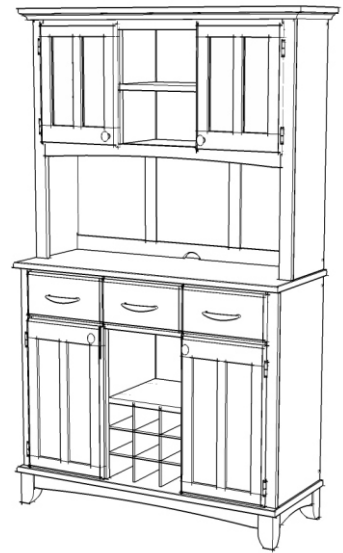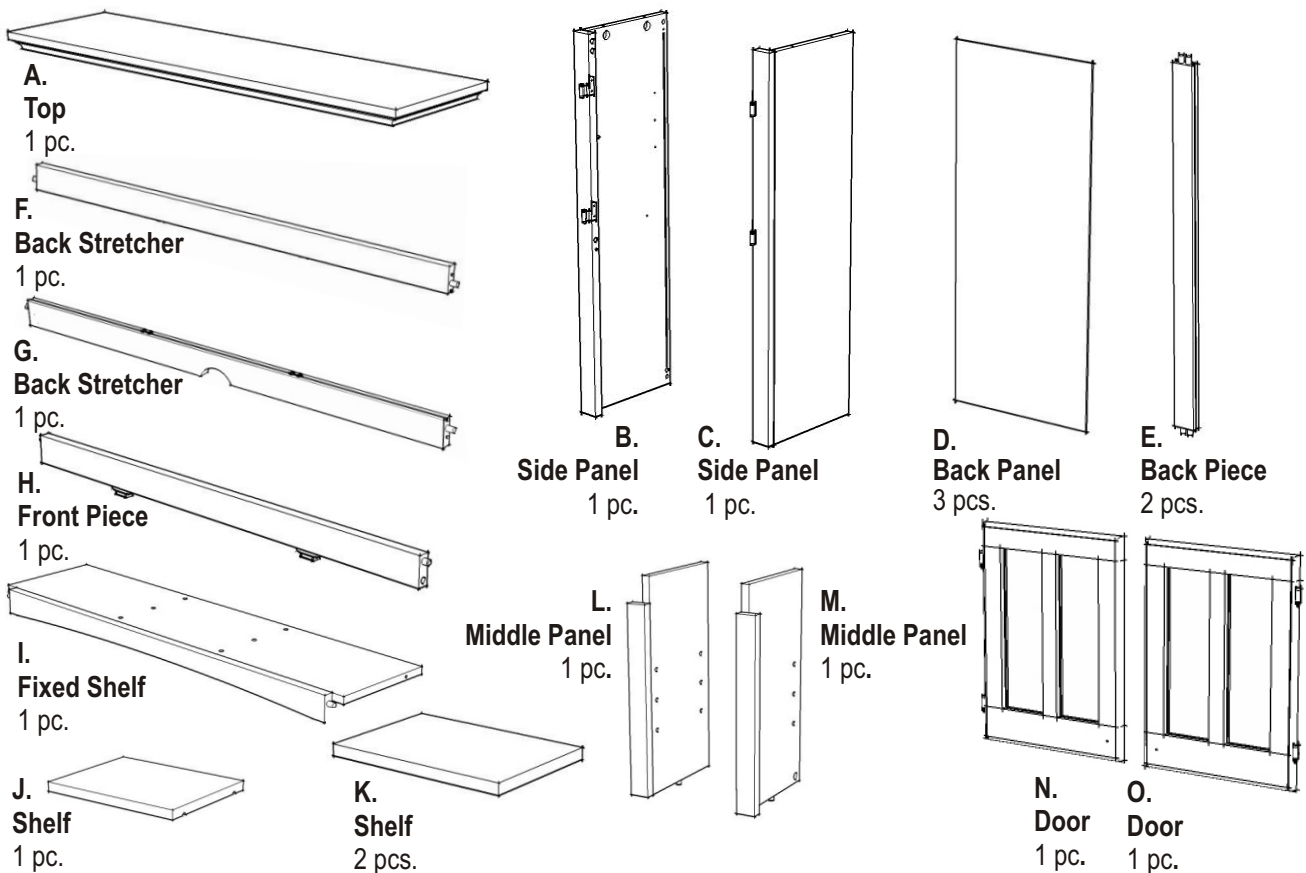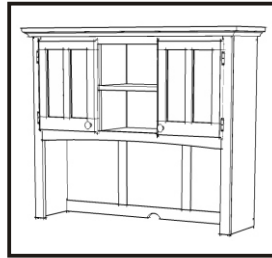
Hutch Unit

Home Styles™

Casual Attire For Today's Home

Hutch Unit Part List

A.
Top
1 pc.

F.
Back Stretcher
1 pc.

G.
Back Stretcher
1 pc.

H.
Front Piece
1 pc.

I.
Fixed Shelf
1 pc.

J.
Shelf
1 pc.

K.
Shelf
2 pcs.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

D.
Back Panel
3 pcs.

E.
Back Piece
2 pcs.

L.
Middle Panel
1 pc.

M.
Middle Panel
1 pc.

N.
Door
1 pc.

O.
Door
1 pc.

Hardware List

Cam Lock Screw
18 pcs.(+1 extra)

Machine Screw
2 pcs.

Wood Screw for Back Panel
12 pcs. (1 extra)

Cam Lock
18 pcs.(+1 extra)

Adjustable Pin
12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector
8 pcs. (1 extra)

Door Pull Handle
2 pcs.

Steel Plate Connector
2 pcs.

Tools required for assembly : <u>*Philips*</u> screwdriver
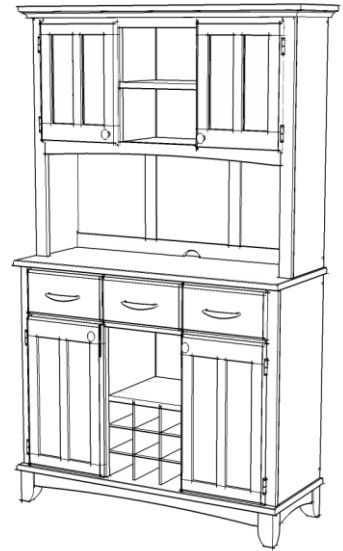
88 5100 306
Buffet and Hutch
(Cottage Oak)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.
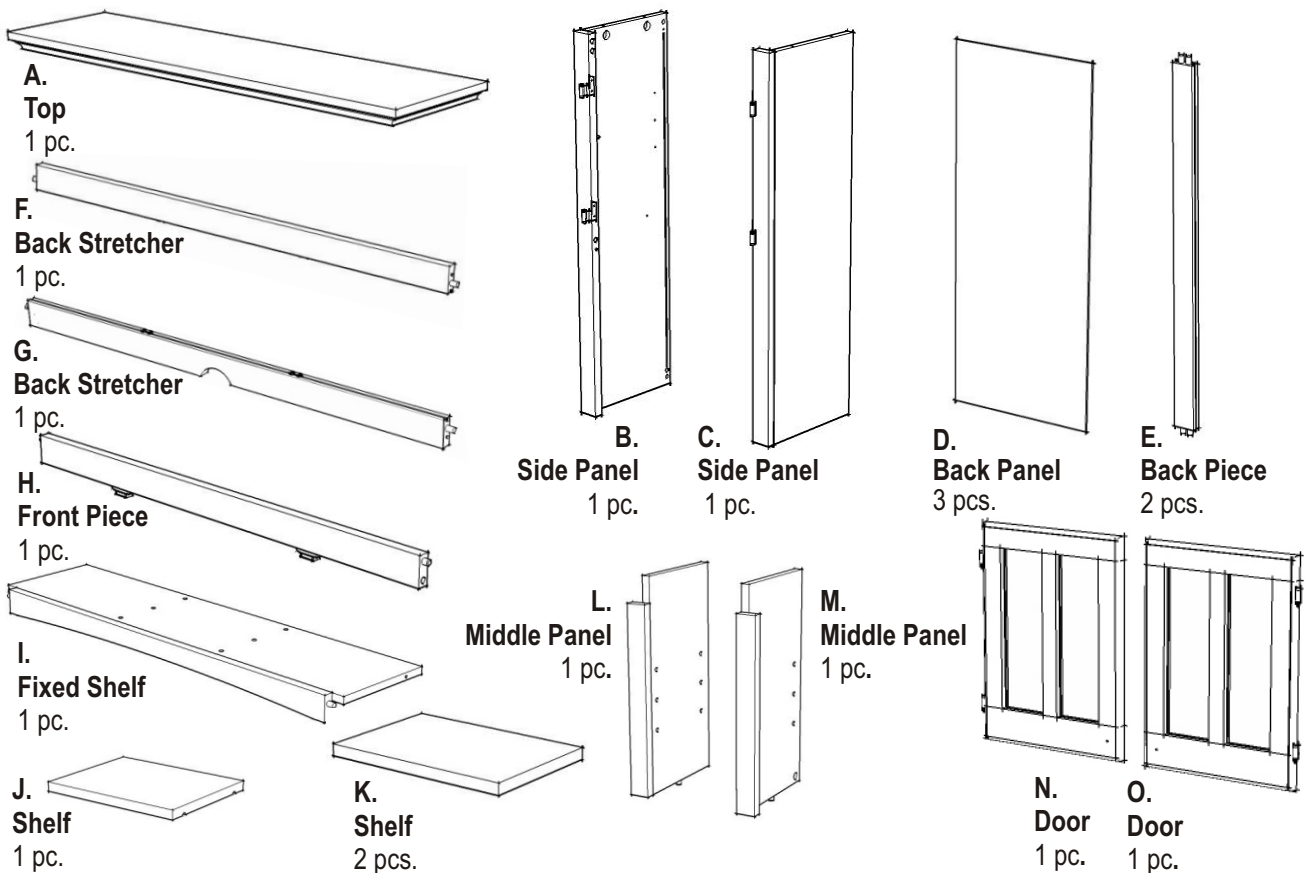
Hutch Unit

Home Styles™

Casual Attire For Today's Home

Hutch Unit Part List

A.
Top
1 pc.

F.
Back Stretcher
1 pc.

G.
Back Stretcher
1 pc.

H.
Front Piece
1 pc.

I.
Fixed Shelf
1 pc.

J.
Shelf
1 pc.

K.
Shelf
2 pcs.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

L.
Middle Panel
1 pc.

M.
Middle Panel
1 pc.

D.
Back Panel
3 pcs.

E.
Back Piece
2 pcs.

N.
Door
1 pc.

O.
Door
1 pc.

Hardware List

Cam Lock Screw
18 pcs.(+1 extra)

Machine Screw
2 pcs.

Wood Screw for Back Panel
12 pcs. (1 extra)

Cam Lock
18 pcs.(+1 extra)

Adjustable Pin
12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector
8 pcs. (1 extra)

Door Pull Handle
2 pcs.

Steel Plate Connector
2 pcs.

Tools required for assembly : <u>*Philips*</u> screwdriver

88 5100 307
Buffet and Hutch
(Cherry Finish)

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the wood parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

Home Styles™
Casual Attire For Today's Home

Hutch Unit

Hutch Unit Part List

A.
Top
1 pc.

F.
Back Stretcher
1 pc.

G.
Back Stretcher
1 pc.

H.
Front Piece
1 pc.

I.
Fixed Shelf
1 pc.

J.
Shelf
1 pc.

K.
Shelf
2 pcs.

B.
Side Panel
1 pc.

C.
Side Panel
1 pc.

D.
Back Panel
3 pcs.

E.
Back Piece
2 pcs.

L.
Middle Panel
1 pc.

M.
Middle Panel
1 pc.

N.
Door
1 pc.

O.
Door
1 pc.

Hardware List

Cam Lock Screw
18 pcs.(+1 extra)

Machine Screw
2 pcs.

Wood Screw for Back Panel
12 pcs. (1 extra)

Cam Lock
18 pcs.(+1 extra)

Adjustable Pin
12 pcs. (+2 extra)

Wood Screw for Steel Plate Connector
8 pcs. (1 extra)

Door Pull Handle
2 pcs.

Steel Plate Connector
2 pcs.

Tools required for assembly : Philips screwdriver

IMPORTANT
Do not tighten up all the screws until each part is properly assembled.
You should keep Hex Wrench in the safe place as you may need to tighten up the Head Cap Bolts in the future.

STEP 1

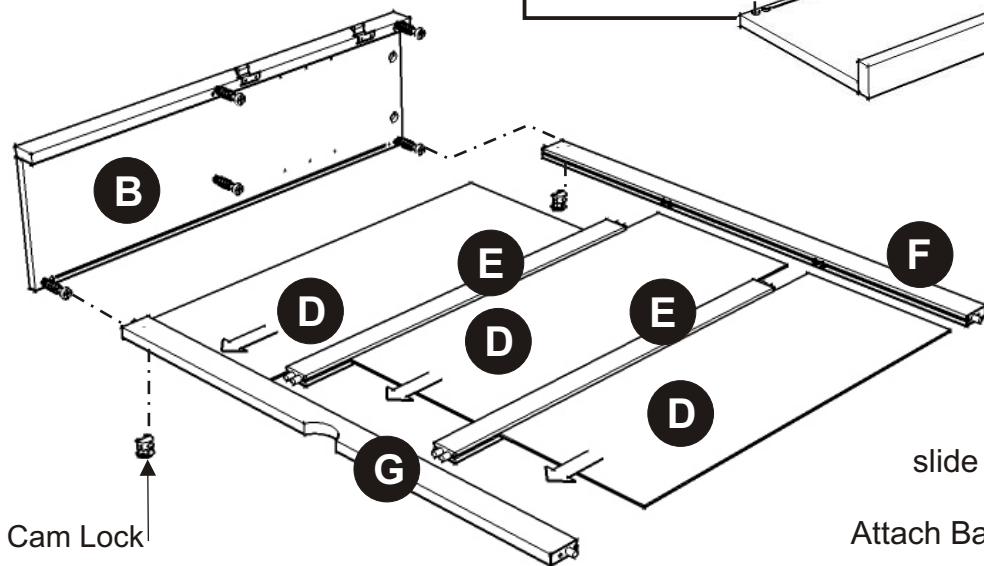Put Cam Lock Screws into the pre-drilled holes of Side Panel (B) and (C), and tighten up.

Cam Lock Screw

B

C

B

E

D

E

D

E

F

D

G
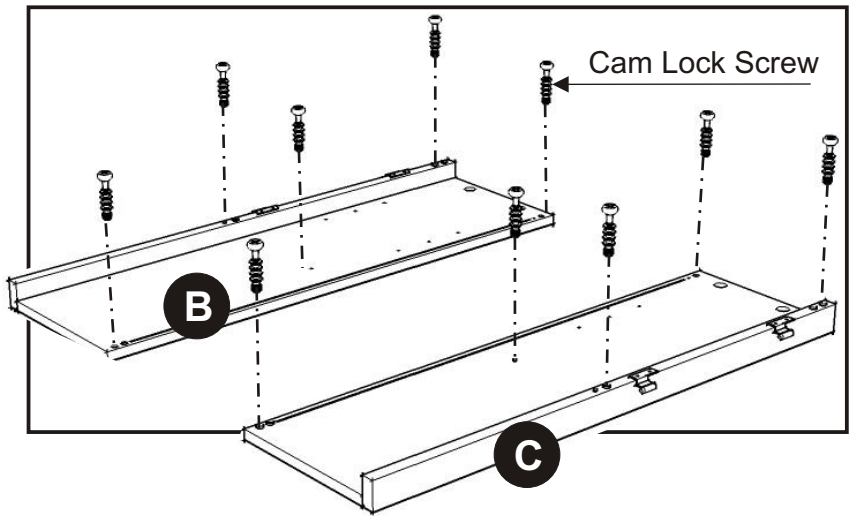
Cam Lock

STEP 2

Attach Back Stretcher (G) to Side Panel (B) with Cam Lock.

Attach Back Piece (E) to Back Stretcher (G) and slide Back Panel (D) into place.

Attach Back Stretcher (F) to the unit with Cam Locks.

I

Cam Lock

L

H

M

I

C
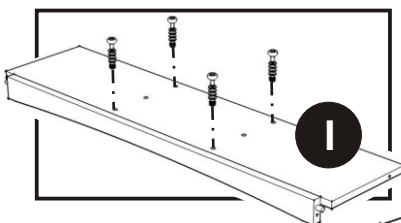
STEP 3

Put Cam Lock Screws into the pre-drilled holes of Fixed Shelf (I), and tighten up.

Attach Fixed Shelf (I) to the unit with Cam Locks.

Attach Middle Panel (L) and (M) to Fixed Shelf (I) with Cam Locks.

Attach Front Piece (H) and Side Panel (C) to the unit with Cam Locks.
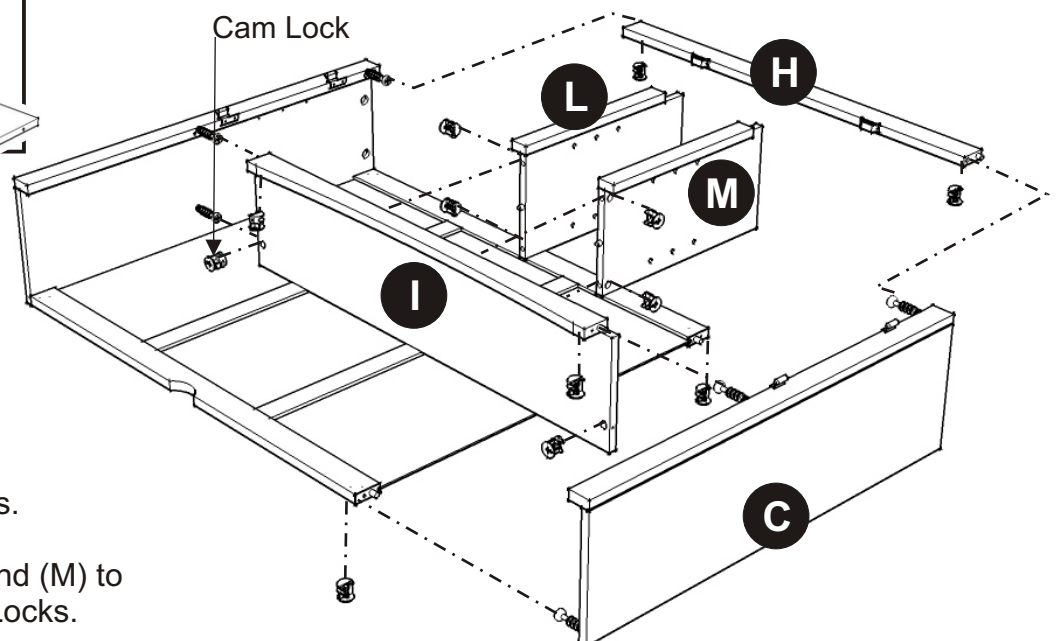
STEP 4

Put the Cam Lock Screw
into the pre-drilled
holes at Top (A).

Cam Lock Screw

A

Cam Lock

7

N

K

J

K

O
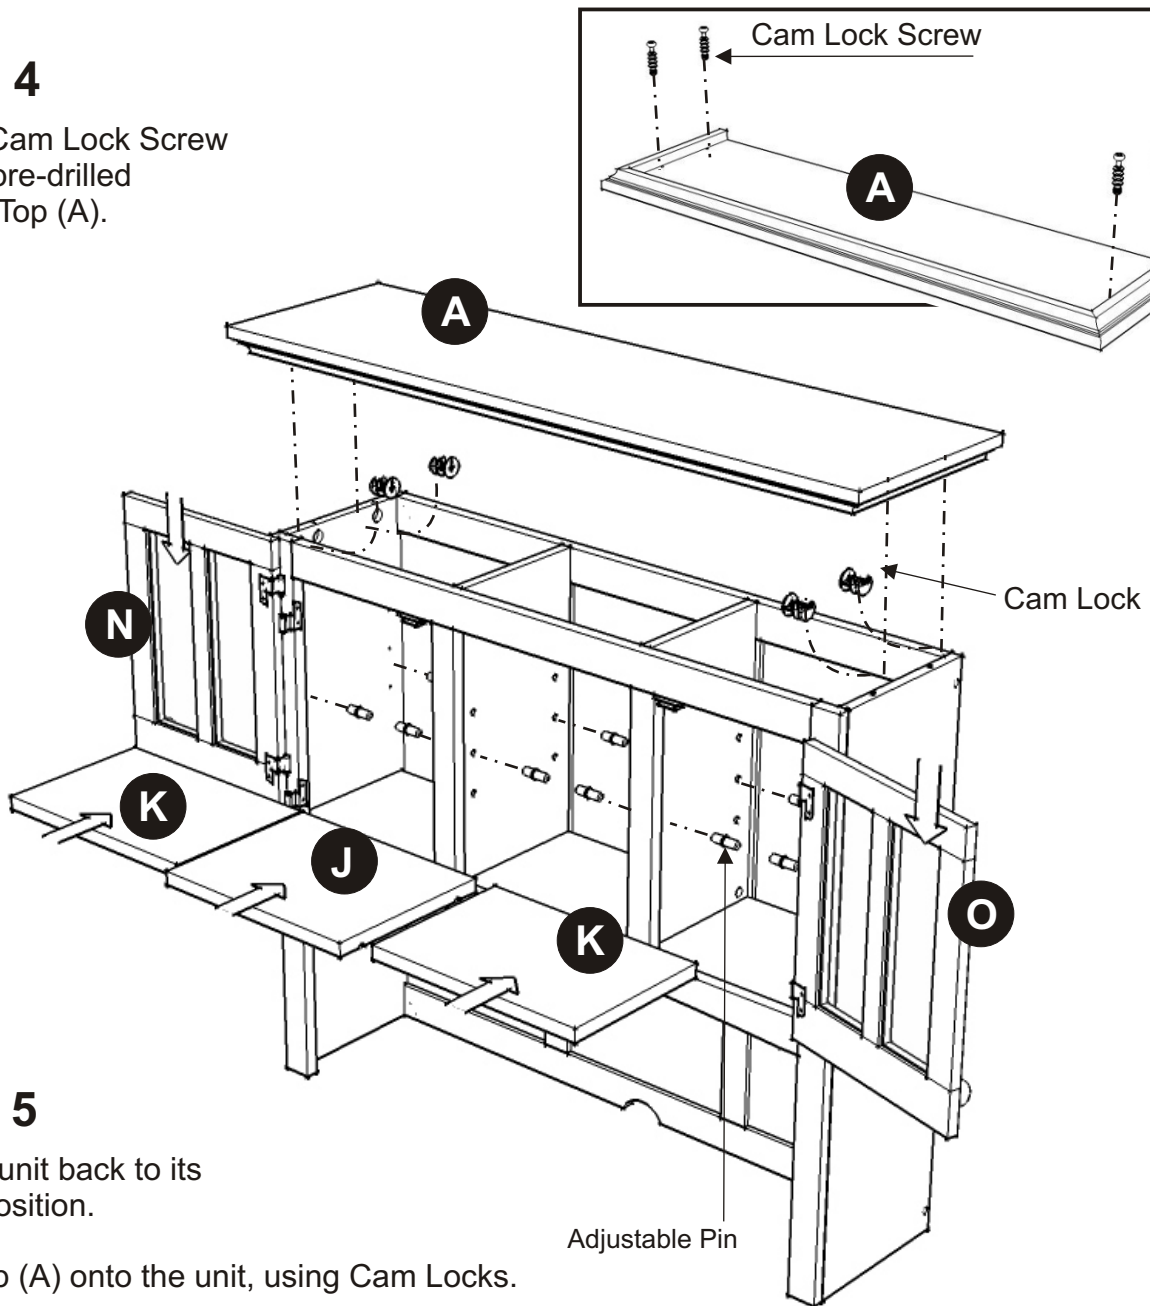
Adjustable Pin

STEP 5

Turn the unit back to its
normal position.
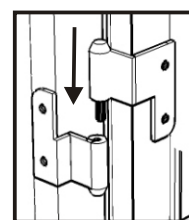
Place Top (A) onto the unit, using Cam Locks.

Insert Adjustable Pins into both side panels and middle
panels at the desired level. Slide Shelf (J) and (K) into place.

Assemble Pull Handles to Door (N) and (O) with Machine Screws. (See figure 1)

Attach Door (N) and (O) to the side panels, slide the door lift hinges into the side panel
lift hinges. (See figure 2)
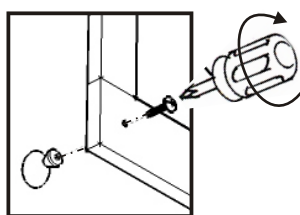
(Figure 1)

(Figure 2)

STEP 6

Insert Wood Screws from the
back and tighten up.
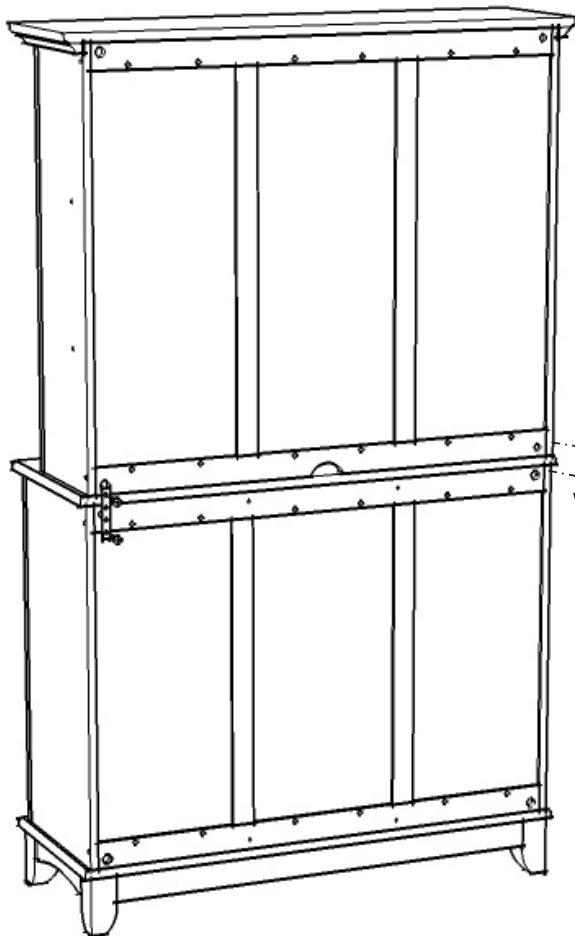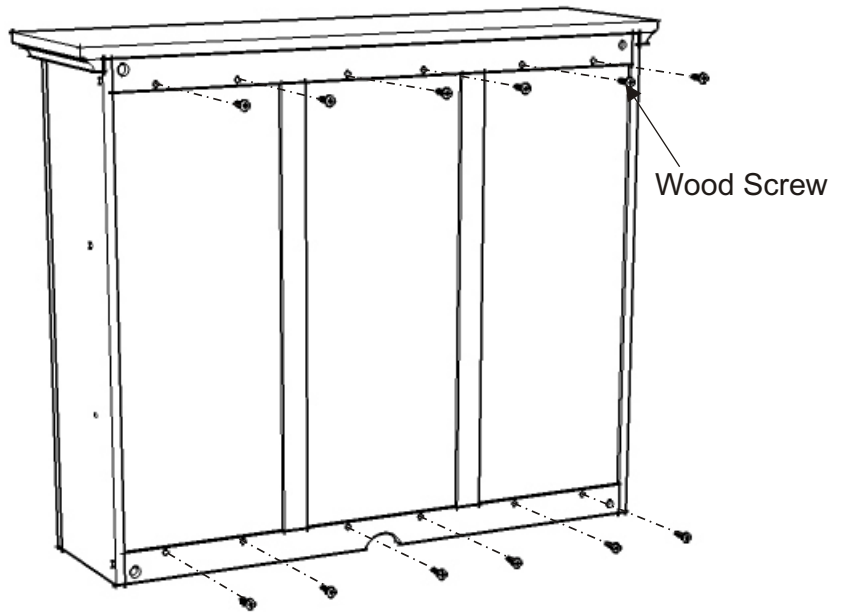
Wood Screw

STEP 7

Place the Hutch unit onto
the Buffet unit.

To hold firmly the Hutch and Buffet,
attach Steel Plate Connectors,
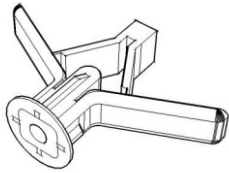insert Wood Screws and tighten up.
(See figure 1)

Steel Plate
Connector

Wood Screw
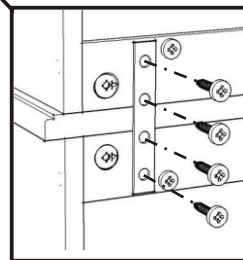
(Figure 1)

Attention !

For safety reasons, we recommended you strictly follow this additional instructions as to prevent this Buffet & Hutch Unit from tipping over.
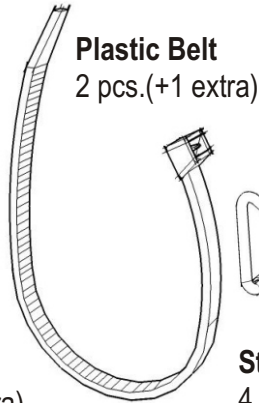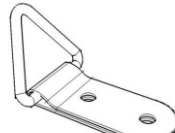
HARDWARE LIST
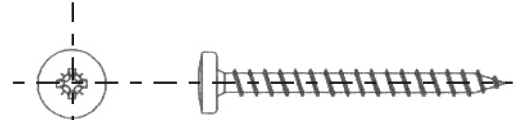

Plastic Belt
2 pcs.(+1 extra)

Wall Screw (long)
2 pcs.(+1 extra)

Wood Screw (short)
2 pcs.(+1 extra)

Anchor (A)
2 pcs.(+1 extra)

Anchor (B)
2 pcs.(+1 extra)

Steel Bracket
4 pcs.(+1 extra)

Assembly Instructions

Steel Bracket at the wall

Wall Screw

Plastic Belt

Wood Screw

Steel Bracket at the top of cabinet

(figure 12)

Place the Buffet & Hutch unit at the wall.

(Please note that the Anchor (A) is for hollow wall and Anchor (B) is for concrete wall.)

Use the electric drill at the drilling positions on the wall. Insert the selected Anchors into the wall holes and put the Steel Brackets on. Put in wall screws and tighten up.

Put Steel Brackets at the pre-drilled holes on the top of the unit.
Put in wood screws and tighten up.

Use the Plastic Belt to secure the Steel Brackets at the unit and the Steel Brackets at the wall (See figure 12). Put the belt end into its socket and tie up.