


IMPORTANT: Do not install any fasteners until instructed!

JOINING FRONT TO REAR GRID



Step 1
Insert Bottom Sliderails (#8) into Front Grid Assembly and fasten (making sure fully inserted) using 3- #08 x 3/4" Fastening Screws (#1)
Note: Fasteners in Bottom Hole Only

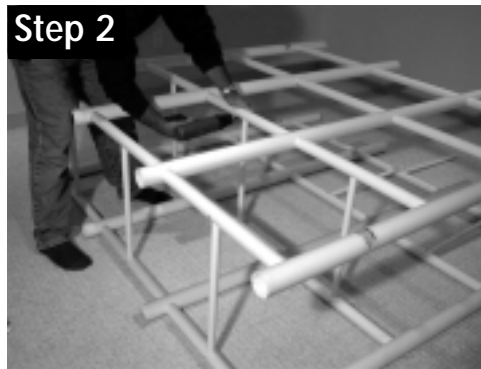

Step 2
Insert and fasten next 3 rows of Sliderail to Front Grid using 9 - #08 x 3/4" Fastening Screws (#1)
Note: Fasteners in Bottom Hole Only




Step 3
Turn unit upright and place firmly against wall where unit is to be mounted.


FASTENING VERTICALS & WALL MOUNT TUBES



Step 1
Fasten all Verticals to Horizontals. Make sure all joints are pressed firmly together, tight and against alignment dimples.
32 - #08 x 3/4" Fastening Screws (#1)
Note: 1 Fastener Per Joint, each grid, Front Side Only

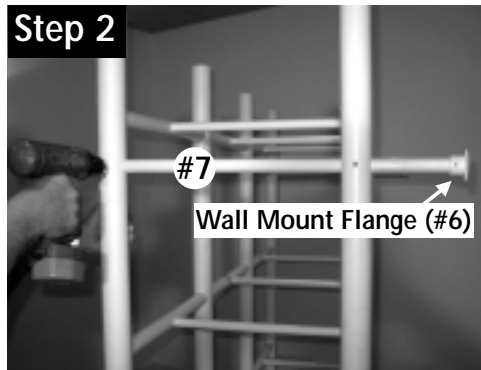


Step 2
Move unit away from wall and insert 4 Wall Mount Extension Tubes (#7) at 4 Locations.
Fasten With 8 - #08 x 1-1/2" Extension Tube Fastening Screws (#2)
Note: 1 Fastener Per Joint Front Side Only

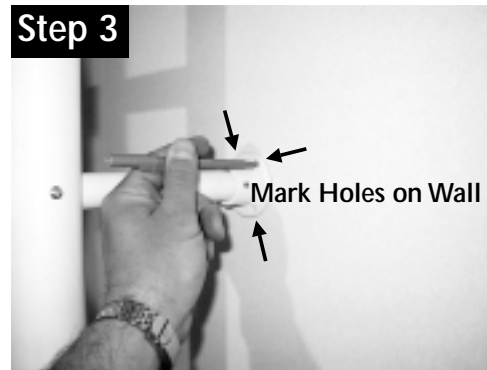

Step 3
Slide Wall Mount Flanges (#6) into Wall Mount Tubes (#7) Place unit against wall where it is to be mounted and mark Wall Flange holes.
Note: Do NOT fasten at this time. Make sure unit remains in position at all 4 locations while marking holes.

FASTENING BIN WAREHOUSE TO WALL

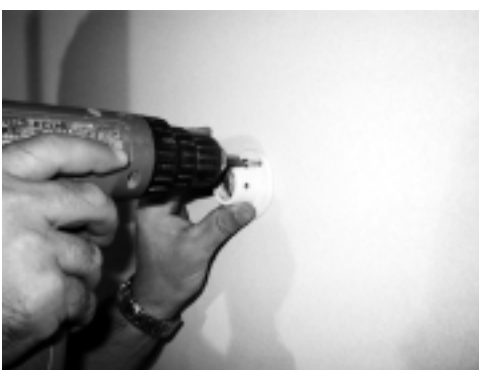

Move unit away from wall and remove Wall Flange from Tube and mount Flange to wall using 12 #10 x 1-1/4" Wall Mount Flange Screws (#3) and Plastic Wall Anchors (#4) if needed.
Note: If mounted into Masonry or Drywall, drill three 1/4" holes to accept Plastic Wall Anchors.



Slide unit back against wall while inserting all 4 Wallmount Extension Tubes (#7) into Wallmount Flanges (#6) and fasten with 4 - #08 x 3/4" Fastening Screws (#1).
Note: 1 Screw per Flange



FINISHED!

Unit must be attached to wall to keep from tipping over!

Congratulations!

We Hope You Enjoy Your Bin Warehouse!