


IMPORTANT: Do not install any fasteners until instructed!

Numbers in **BOLD** indicate item number from Parts/Fastener Lists.


JOINING FRONT TO REAR GRID

Step 1

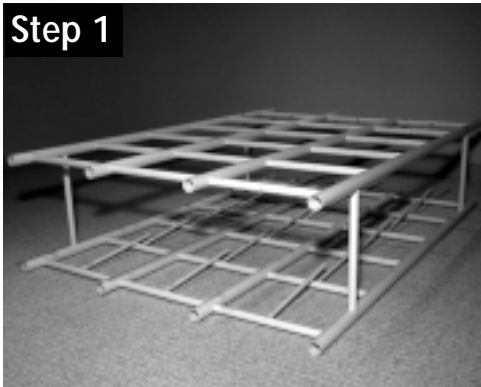

Join Front to Rear Grid by inserting 4 Front & Rear Grid Connecting Tubes (#5) into Front Grid Assembly
Note: Do Not Fasten at This Time

Step 2

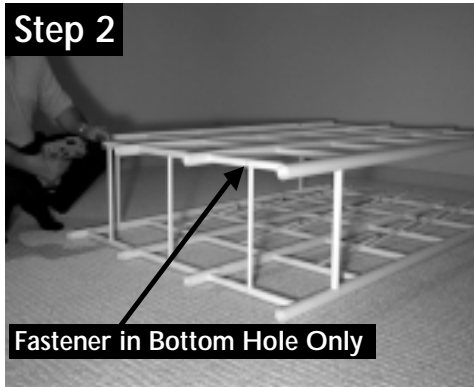

Insert and fasten 18 Horizontal Sliderails (#7) into Front Grid Assembly using 18 - #06 x 1/2" Fastening Screws (#1) **Note: Fasteners in Bottom Hole Only, Work from Bottom Row to Top Row Making Sure All Tubes are Fully Inserted!**

Step 3



Turn unit upright and place firmly against wall where unit is to be mounted.


FASTENING VERTICALS & FRONT & REAR GRID CONNECTING TUBES

Step 1



Fasten 4 Front & Rear Grid Connecting Tubes (#5) to Front Grid Assembly Using 4 - #06 x 1/2" Fastening Screws (#1)

Step 2

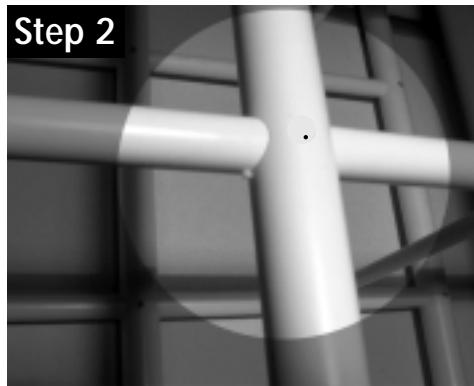

Make sure unit is Straight and Square, and all Verticals are Pressed Firmly together and against alignment dimples

Step 3



Fasten All Verticals to Horizontals Making sure all joints are pressed firmly together and tight against alignment dimples using 48 - #06 x 1/2" Fastening Screws (#1)
Note: Fasteners in Holes Facing YOU Only-

FASTENING BIN WAREHOUSE TO WALL

Step 1



Place 4 wallmount brackets (#6) over 4 Rear Verticals above 2nd Horizontal Crossbar (#1) and fasten to wall using 8 - #10 x 1-1/4" Fastening Screws (#2)



Note: If mounting into Drywall or Masonry, mark & drill 1/4" holes and insert plastic wall anchors - and proceed with step 1-



Unit must be attached to wall to keep from tipping over!

Congratulations!

We Hope You Enjoy Your Bin Warehouse!